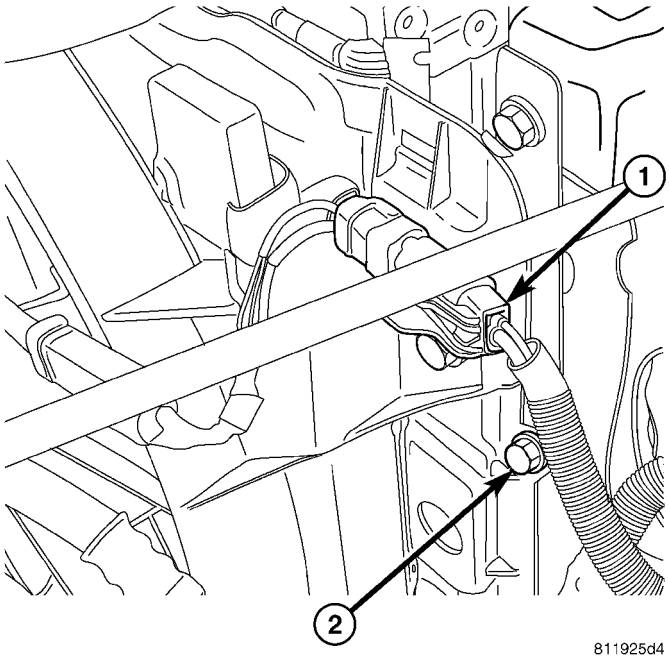

Fig. 37 Electrical Connector

1 - ELECTRICAL CONNECTOR
2 - MOUNTING SCREW

4.0L

(1) Remove the thermal viscous fan drive/fan blade assembly (Refer to 7 - COOLING/ENGINE/FAN DRIVE VISCOUS CLUTCH - REMOVAL).
(2) Remove the four fan retaining bolts.
(3) Separate the fan blade from the thermal viscous fan drive.

CLEANING

Clean the fan blades using a mild soap and water. Do not use an abrasive to clean the blades.

INSPECTION

WARNING: Do not attempt to bend or straighten fan blades if fan is not within specifications.

CAUTION: If fan blade assembly is replaced because of mechanical damage, water pump and viscous fan drive should also be inspected. These components could have been damaged due to excessive vibration.

(1) Remove fan blade assembly from viscous fan drive unit (four bolts).
(2) Lay fan on a flat surface with leading edge facing down. With tip of blade touching flat surface, replace fan if clearance between opposite blade and surface is greater than 2.0 mm (.090 inch). Rocking motion of opposite blades should not exceed 2.0 mm (.090 inch). Test all blades in this manner.
(3) Inspect fan assembly for cracks, bends, loose rivets or broken welds. Replace fan if any damage is found.

INSTALLATION

2.4L

(1) Position the cooling fan assembly.
(2) Install four mounting screws. Tighten to 5.5 N·m (50 in. lbs.)
(3) Connect the electrical connector.
(4) Install the power steering reservoir.
(5) Install the coolant recovery bottle.

4.0L

(1) Position the fan blade on the thermal viscous fan drive.
(2) Install four mounting bolts. Tighten to 23 N·M (210 in. lbs.).
(3) Install the thermal viscous fan drive (Refer to 7 - COOLING/ENGINE/FAN DRIVE VISCOUS CLUTCH - INSTALLATION).

RADIATOR FAN RELAY

DESCRIPTION

The electric cooling fan HI and LOW relays are located in the Power Distribution Center (PDC) in the engine compartment. See the fuse and relay layout label affixed to the inside surface of the PDC cover for cooling fan relay identification and location.
The HI and LOW cooling fan relays cannot be adjusted or repaired. If the HI or LOW relay is damaged or faulty, it must be replaced.