will only snap over quick connect fitting when the transmission cooler line is properly installed.

NOTE: If dust cap will not snap into place, repeat assembly step #2.

TRANSMISSION COOLER

DESCRIPTION

NOTE: The internal transmission oil cooler located within the radiator is not serviceable. If it requires service, the radiator must be replaced.

All models equipped with an automatic transmission are equipped with a transmission oil cooler (water-to-oil) mounted internally within the radiator tank (Fig. 3). This internal cooler is supplied as standard equipment on all models equipped with an automatic transmission and is equipped with quick-connect fittings.

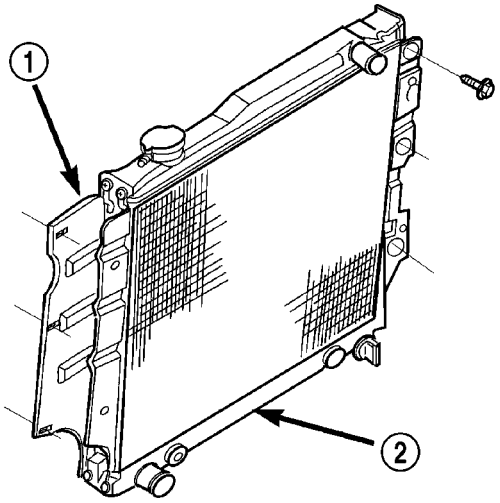

80bcea53

Fig. 3 Radiator with Integral Transmission Oil Cooler

1 - DOWNFLOW RADIATOR
2 - INTEGRAL TRANSMISSION OIL COOLER (INTERNAL TO RADIATOR)

OPERATION

Transmission oil is cooled when it passes through this separate cooler. In case of a leak in the internal radiator mounted transmission oil cooler, engine coolant may become mixed with transmission fluid or transmission fluid may enter the cooling system. Both cooling system and transmission should be drained and inspected if the internal radiator mounted transmission cooler is leaking.