(3) Install the three screws retaining the antenna body base to right outer cowl side panel. Tighten the screws to 3.3 N·m (30 in. lbs.).

(4) Snap on the antenna base trim cover to the antenna body base.

(5) Install antenna mast. Tighten to 5 N·m (46 in. lbs.). **Ensure that the antenna mast is fully seated on antenna base and that there is no gap between the mast and base.**

(6) Reach through the glove box opening and connect the two antenna coaxial cables in line connector.

(7) Install the glove box to the instrument panel (Refer to 23 - BODY/INSTRUMENT PANEL/GLOVE BOX - INSTALLATION).

(8) Connect the battery negative cable.

ANTENNA - SATELLITE RADIO

OPERATION

The satellite radio antenna receives signals from orbiting satellites and sends these signals to the satellite receiver module. The satellite radio antenna must have open space in which to operate. Items carried on the roof, parking inside etc. can have an effect on the antenna's ability to receive signals.

REMOVAL

NOTE: A battery reconnect procedure must be performed anytime the battery has been disconnected. (Refer to 8 - ELECTRICAL/BATTERY SYSTEM - STANDARD PROCEDURE).

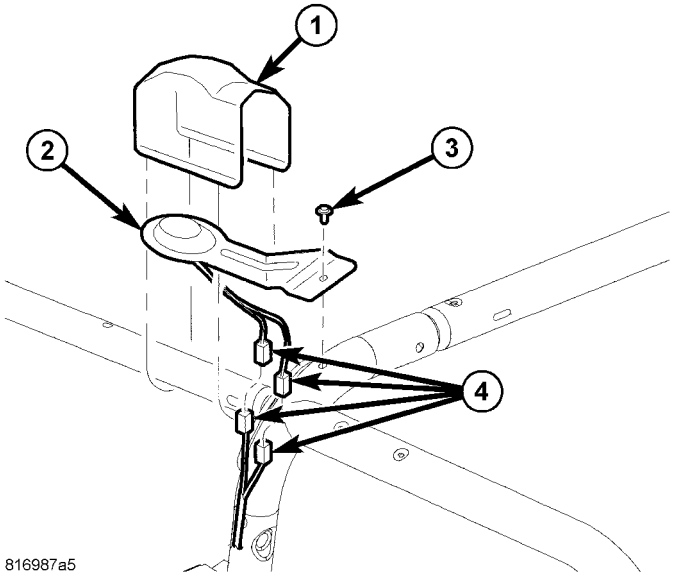

Fig. 3 ANTENNA - SATELLITE RADIO

1 - Antenna Cover
2 - Antenna
3 - Mounting Bolt
4 - Electrical Connectors

(1) Disconnect and isolate the battery negative cable.

(2) Remover the antenna cover. (Fig. 3)

(3) Disconnect electrical connectors.

(4) Remove mounting bolt.

INSTALLATION

NOTE: A battery reconnect procedure must be performed anytime the battery has been disconnected. (Refer to 8 - ELECTRICAL/BATTERY SYSTEM - STANDARD PROCEDURE).

(1) Install mounting bolt.

(2) Connect electrical connectors.

(3) Install antenna cover.

(4) Connect the battery negative cable.

RADIO

DESCRIPTION

Available factory-installed radio receivers for this model include:

- AM/FM/cassette with CD changer control feature (RBB sales code)
- AM/FM/CD with CD changer control feature (RBK sales code)
- AM/FM/cassette/CD/ with CD changer control feature (RAD, RBT or RBY sales code) - export only

All factory-installed radio receivers can communicate on the Programmable Communications Interface (PCI) data bus network. All factory-installed receivers are stereo Electronically Tuned Radios (ETR) and include an electronic digital clock function.

These radio receivers can only be serviced by an authorized radio repair station. See the latest Warranty Policies and Procedures manual for a current listing of authorized radio repair stations.

OPERATION

The radio receiver operates on ignition switched battery current that is available only when the ignition switch is in the On or Accessory positions. The electronic digital clock function of the radio operates on fused battery current supplied through the IOD fuse, regardless of the ignition switch position.