of the steering column. It is mounted to bracket with one bolt. The bracket is mounted to the front upper cowl panel.

OPERATION

The CAB voltage source is through the ignition switch in the RUN position. The CAB contains dual microprocessors. A logic block in each microprocessor receives identical sensor signals. These signals are processed and compared simultaneously. The CAB contains a self check program that illuminates the ABS warning light when a system fault is detected. Faults are stored in a diagnostic program memory and are accessible with the DRB scan tool. ABS faults remain in memory until cleared, or until after the vehicle is started approximately 50 times. Stored faults are **not** erased if the battery is disconnected.

REMOVAL

(1) Remove the negative battery cable from the battery.

(2) Pull up on the CAB harness connector release (Fig. 1) and remove connector.

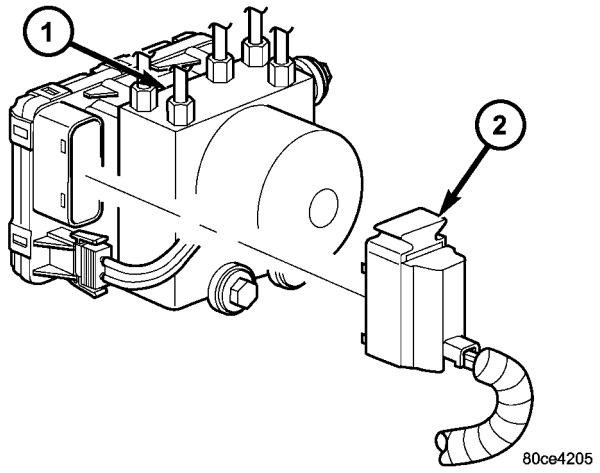

Fig. 1 CAB HARNESS CONNECTOR RELEASE

1 - ABS MODULE

2 - ELECTRICAL CONNECTOR

(3) Remove the pump connector from the CAB.

(4) Remove the CAB mounting bolts.

(5) Remove the CAB from the HCU (Fig. 2).

INSTALLATION

(1) Install CAB to the HCU (Fig. 2).

(2) Install mounting bolts. Tighten to 2 N·m (16 in. lbs.).

(3) Install the pump electircal connector to the CAB (Fig. 2).

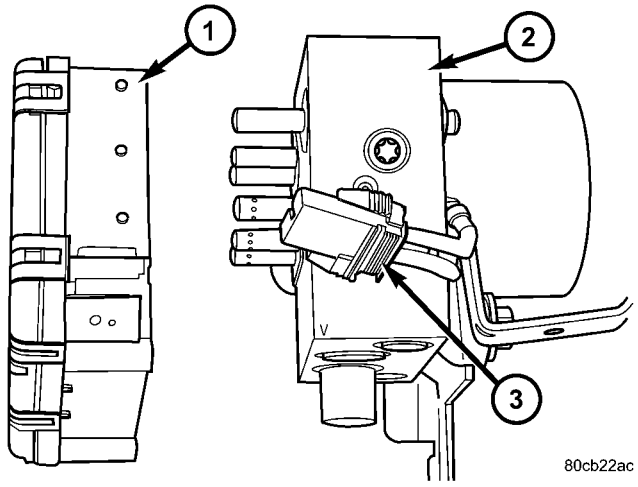

Fig. 2 CONTROLLER AND HCU

1 - CONTROLLER ANTILOCK BRAKE MODULE

2 - HYDRAULIC CONTROL UNIT (H.C.U)

3 - ELECTRICAL CONNECTOR

(4) Install the wiring harness connector to the CAB and push down on the release to secure the connector.

(5) Install negative battery cable to the battery.

DATA LINK CONNECTOR

DESCRIPTION - DATA LINK CONNECTOR

The data link connector (DLC) is located at the lower edge of the instrument panel near the steering column.

OPERATION - DATA LINK CONNECTOR

The 16-way data link connector (diagnostic scan tool connector) links the Diagnostic Readout Box (DRB) scan tool or the Mopar Diagnostic System (MDS) with the Powertrain Control Module (PCM).