(7) Install and tighten the screws that secure the lower steering column shroud to the upper shroud. Tighten the screws to 2 N·m (20 in. lbs.).

(8) Move the tilt steering column to the fully raised position and secure it in place by moving the tilt release lever back to the locked (up) position.

(9) Reinstall the steering column opening cover. (Refer to 23 - BODY/INSTRUMENT PANEL/STEERING COLUMN OPENING COVER - INSTALLATION).

(10) Reconnect the battery negative cable.

NOTE: If the SKIM has been replaced with a new unit, the Sentry Key Immobilizer System (SKIS) MUST be initialized before the vehicle can be operated. (Refer to 8 - ELECTRICAL/VEHICLE THEFT SECURITY - STANDARD PROCEDURE - SKIS INITIALIZATION).

SPECIFICATIONS

TORQUE

DESCRIPTION	N·m	Ft. Lbs.	In. Lbs.
Screws, Multi-Function Switch Mounting	2	-	20
Screws, Steering Column Shroud Mounting	2	-	20

TRANSMISSION CONTROL MODULE

DESCRIPTION

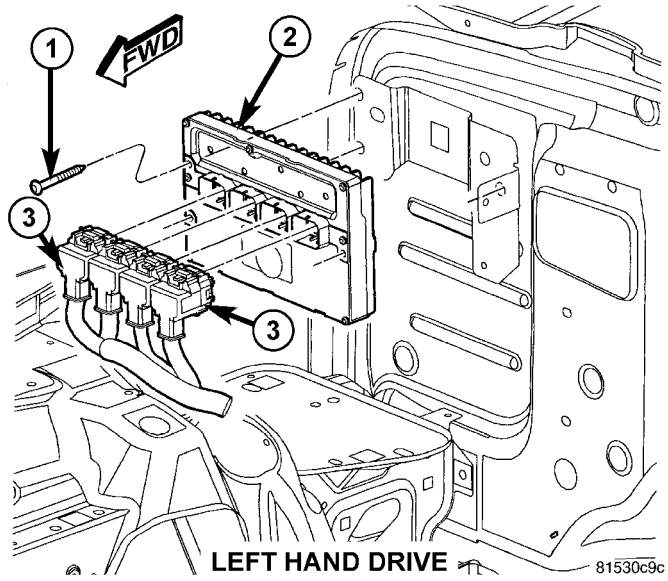

Fig. 12 PCM MOUNTING - LEFT HAND DRIVE

1 - MOUNTING SCREWS (3)
2 - PCM
3 - PCM ELECTRICAL CONNECTORS

The Transmission Control Module (TCM) is a submodule within the Powertrain Control Module (PCM) (2).

The PCM (2) is located on the right side of the dash panel in the engine compartment (Fig. 12) on left hand drive vehicles. The PCM is referred to as the NGC.

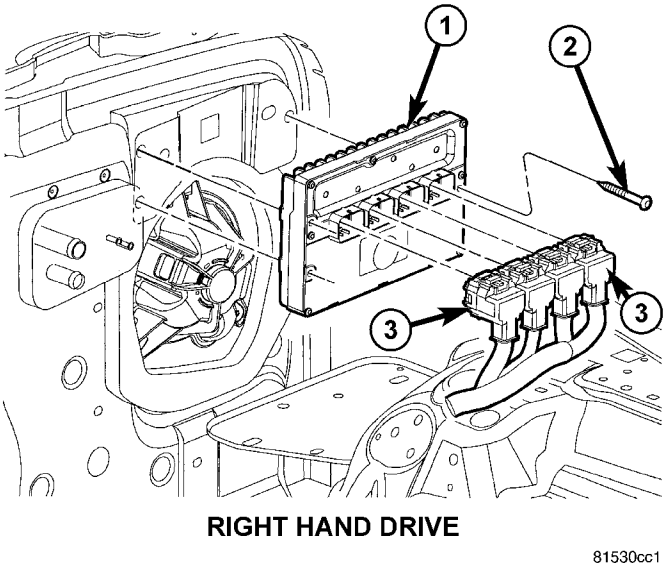

Fig. 13 PCM MOUNTING - RIGHT HAND DRIVE

1 - PCM
2 - MOUNTING SCREWS (3)
3 - PCM ELECTRICAL CONNECTORS

The PCM (1) is located on the left side of the dash panel in the engine compartment (Fig. 13) on right hand drive vehicles.

OPERATION

The TCM is the controlling unit for all electronic operations of the transmission. The TCM receives information regarding vehicle operation from both direct and indirect inputs, and selects the operational mode of the transmission. Direct inputs are hardwired to, and used specifically by the TCM. Indirect