(7) Remove the battery and the battery thermal guard from the battery tray as a unit.

(8) Remove the battery thermal guard from the battery case. Refer to Thermal Guard for the proper battery thermal guard removal procedures.

INSTALLATION

(1) Clean and inspect all of the battery system components. Refer to Battery System Cleaning for the proper cleaning procedures, and refer to Battery System Inspection for the proper inspection procedures.

(2) Reinstall the battery thermal guard onto the battery case. Refer to Thermal Guard for the proper battery thermal guard installation procedures.

(3) Position the battery and the battery thermal guard onto the battery tray as a unit. Ensure that the battery positive and negative terminal posts are correctly positioned. The battery cable terminal clamps must reach the correct battery terminal post without stretching the cables (Fig. 11).

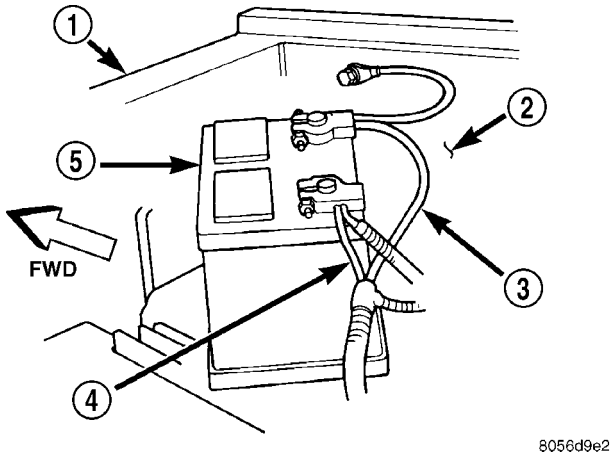

Fig. 11 Battery Cables

1 - RADIATOR CROSSMEMBER
2 - WHEELHOUSE INNER PANEL
3 - NEGATIVE CABLE
4 - POSITIVE CABLE
5 - BATTERY

(4) Reinstall the battery holddowns onto the battery. Refer to Battery Holddown for the proper installation procedure.

CAUTION: Be certain that the battery cable terminal clamps are connected to the correct battery terminal posts. Reversed battery polarity may damage electrical components of the vehicle.

(5) Clean the battery cable terminal clamps and the battery terminal posts. Refer to Battery System Cleaning for cleaning procedure.

(6) Reconnect the battery positive cable terminal clamp to the battery positive terminal post. Tighten the terminal clamp pinch-bolt hex nut to 8.5 N·m (75 in. lbs.).

(7) Reconnect the battery negative cable terminal clamp to the battery negative terminal post. Tighten the terminal clamp pinch-bolt hex nut to 8.5 N·m (75 in. lbs.).

(8) Apply a thin coating of petroleum jelly or chassis grease to the exposed surfaces of the battery cable terminal clamps and the battery terminal posts.

BATTERY HOLDDOWN

DESCRIPTION

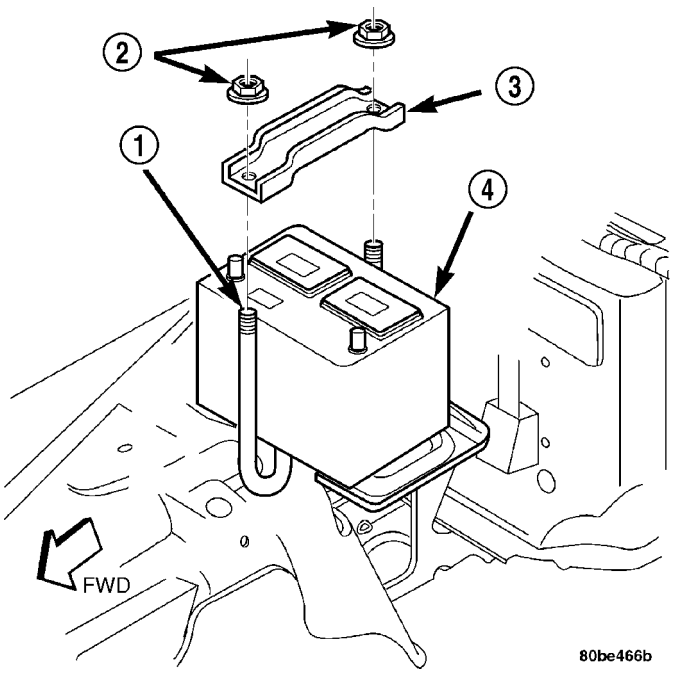

Fig. 12 Battery Hold Downs

1 - J-BOLT (2)
2 - NUT (2)
3 - BRACKET
4 - BATTERY

The battery hold down hardware (Fig. 12) includes two J-bolts, a hold down bracket and two hex nuts with coned washers. The battery hold down bracket consists of a stamped steel bracket that is then plastic-coated for corrosion protection.

The hold down J-bolts are installed a hole in the front and rear flanges of the battery tray from the top, with the threaded ends of the bolts extending upward. The hooked end of each J-bolt is then engaged in a second hole in the front and rear flanges of the battery tray from the bottom. The battery hold down bracket is installed across the top of the battery case and over the two upright threaded ends of the J-bolts. A hex nut with coned washer is then installed and tightened onto each of the J-bolts to securely hold down the battery in the battery tray.

When installing a battery into the battery tray, be certain that the hold down hardware is properly installed and that the fasteners are tightened to the