cable eyelet terminal to the PDC B(+) terminal studs. Tighten the nuts to 11.5 N·m (105 in. lbs.).

(13) Engage the tabs on the lower edge of the B(+) terminal stud cover in the slots on the rear of the PDC housing, then engage the latch on the top of the cover with the latch tabs on the PDC housing.

(14) Reconnect the battery positive cable terminal clamp to the battery positive terminal post. Tighten the terminal clamp pinch-bolt hex nut to 8.4 N·m (75 in. lbs.).

(15) Reconnect the battery negative cable terminal clamp to the battery negative terminal post. Tighten the terminal clamp pinch-bolt hex nut to 8.4 N·m (75 in. lbs.).

(16) Apply a thin coating of petroleum jelly or chassis grease to the exposed surfaces of the battery cable terminal clamps and the battery terminal posts.

BATTERY TRAY

DESCRIPTION

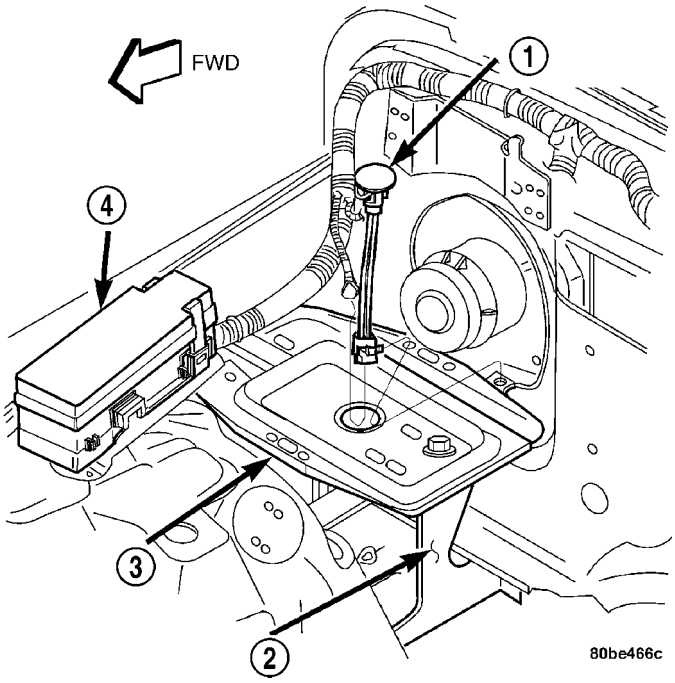

Fig. 18 Battery Tray

1 - BATTERY TEMPERATURE SENSOR (IF EQUIPPED)
2 - REINFORCEMENT
3 - BATTERY TRAY
4 - POWER DISTRIBUTION CENTER

The battery is mounted in a stamped steel tray (Fig. 18) located in the passenger side rear corner of the engine compartment. The battery tray is secured by four hex screws with washers to the reinforcement located between the engine compartment side of the dash panel and the rear of the front fender wheelhouse inner panel.

OPERATION

The battery tray provides a secure mounting location and supports the battery. On some vehicles, the battery tray also provides the anchor point/s for the battery holddown hardware. The battery tray and the battery holddown hardware combine to secure and stabilize the battery in the engine compartment, which prevents battery movement during vehicle operation. Unrestrained battery movement during vehicle operation could result in damage to the vehicle, the battery, or both.

REMOVAL

(1) Remove the battery from the battery tray (Refer to 8 - ELECTRICAL/BATTERY SYSTEM/BATTERY - REMOVAL).

(2) Remove the four screws with washers that secure the battery tray to the reinforcement located between the dash panel and the rear of the front wheelhouse inner panel in the engine compartment (Fig. 19).

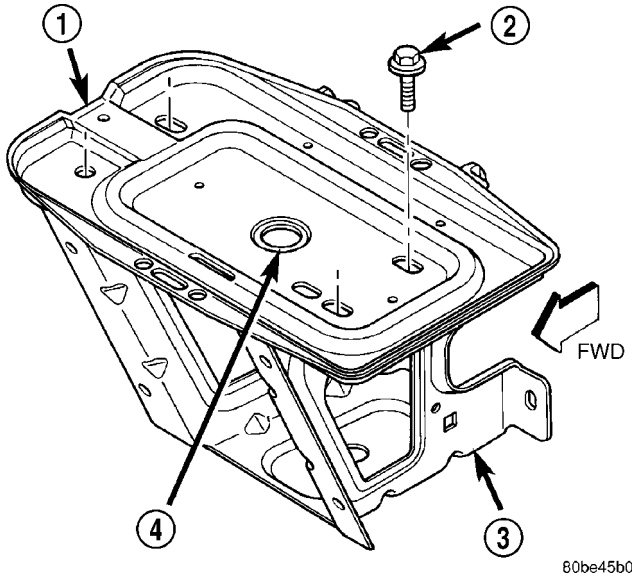

Fig. 19 Battery Tray Remove/Install

1 - BATTERY TRAY
2 - SCREW (4)
3 - REINFORCEMENT
4 - BATTERY TEMPERATURE SENSOR MOUNTING HOLE (IF EQUIPPED)

(3) Remove the battery tray from the reinforcement in the engine compartment.

INSTALLATION

(1) Clean and inspect the battery tray (Refer to 8 - ELECTRICAL/BATTERY SYSTEM - CLEANING), and (Refer to 8 - ELECTRICAL/BATTERY SYSTEM - INSPECTION).

(2) Position the battery tray onto the reinforcement in the engine compartment.

(3) Install and tighten the four screws with washers that secure the battery tray to the reinforcement