SPECIAL TOOLS

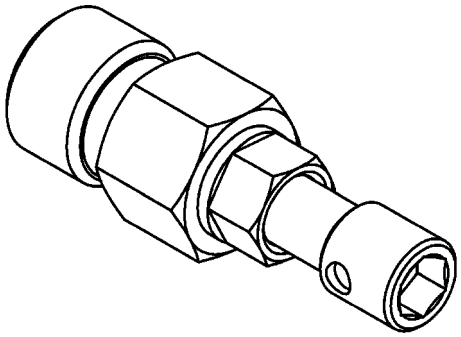

GENERATOR DECOUPLER TOOL #8433

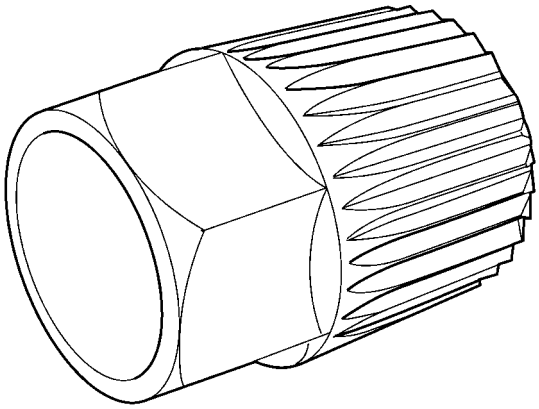

80cb8152

GENERATOR DECOUPLER TOOL #8823

BATTERY TEMPERATURE SENSOR

DESCRIPTION

The Battery Temperature Sensor (BTS) is attached to the battery tray located under the battery.

OPERATION

The BTS is used to determine the battery temperature and control battery charging rate. This temperature data, along with data from monitored line voltage, is used by the PCM to vary the battery charging rate. System voltage will be higher at colder temperatures and is gradually reduced at warmer temperatures.

The PCM sends 5 volts to the sensor and is grounded through the sensor return line. As temperature increases, resistance in the sensor decreases and the detection voltage at the PCM increases.

The BTS is also used for OBD II diagnostics. Certain faults and OBD II monitors are either enabled or disabled, depending upon BTS input (for example, disable purge and enable Leak Detection Pump (LDP) and O2 sensor heater tests). Most OBD II monitors are disabled below 20 degrees F.

REMOVAL

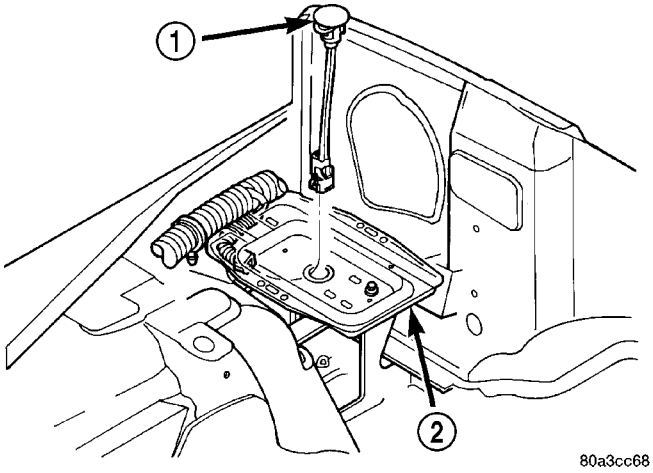

Fig. 1 Battery Temperature Sensor Remove/Install

1 - BATTERY TEMPERATURE SENSOR
2 - BATTERY TRAY

The battery temperature sensor is located under the vehicle battery (Fig. 1) and is attached to a mounting hole on battery tray.

(1) Remove battery. Refer to 8, Battery for procedures.

(2) Disconnect sensor pigtail harness from engine wire harness.

(3) Pry sensor straight up from battery tray mounting hole.

INSTALLATION

The battery temperature sensor is located under the vehicle battery and is attached to a mounting hole on battery tray.

(1) Feed pigtail harness through hole in top of battery tray and press sensor into top of battery tray.

(2) Connect pigtail harness.

(3) Install battery. Refer to 8, Battery for procedures.

GENERATOR

DESCRIPTION

The generator is belt-driven by the engine using a serpentine type drive belt. It is serviced only as a complete assembly. If the generator fails for any reason, the entire assembly must be replaced.