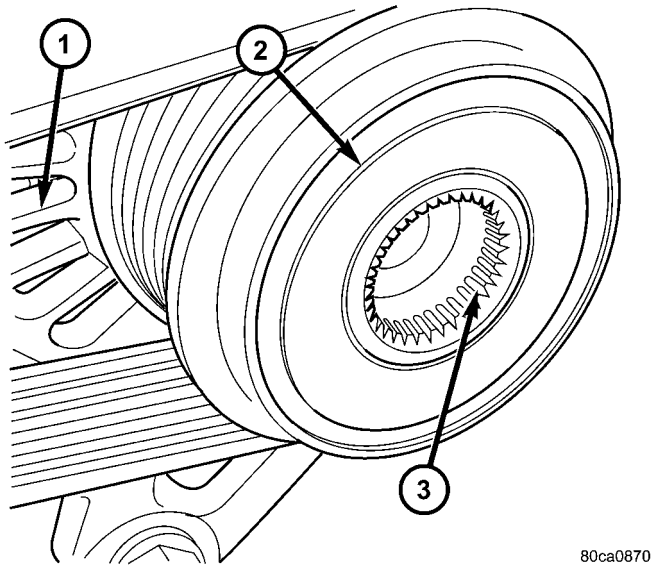



***Fig. 8 GENERATOR DECOUPLER PULLEY (INA)***

1 - GENERATOR
2 - DECOUPLER (INA)
3 - MACHINED SPLINES

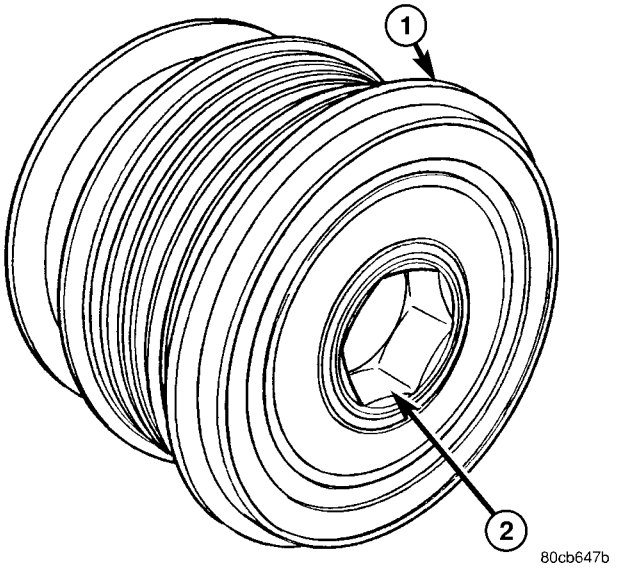



***Fig. 9 GENERATOR DECOUPLER PULLEY (LITENS)***

1 - DECOUPLER (LITENS)
2 - HEX OPENING

**INA Decoupler**

(1) Disconnect negative battery cable.

(2) Remove generator and accessory drive belt. Refer to Generator Removal.

(3) Position Special Tool #8823 (VM.1048) into decoupler (Fig. 10).

(4) Determine if end of generator shaft is hex shaped (Fig. 11) or is splined (Fig. 12). If hex is used, insert a 10MM deep socket into tool #8823 (VM.1048) (Fig. 13). If splined, insert a 5/16" 6-point hex driver, or a 10MM 12-point triple square driver into tool #8823 (VM.1048) (Fig. 14).

(5) The generator shaft uses conventional right-hand threads to attach decoupler. To break decoupler loose from generator threads, rotate end of tool clockwise (Fig. 13) or, (Fig. 14).

(6) After breaking loose with tool, unthread decoupler by hand from generator.

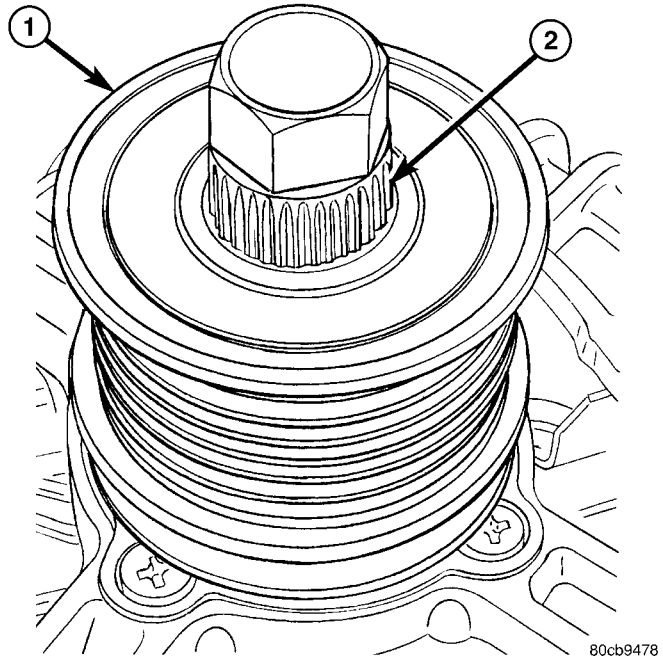



***Fig. 10 #8823 TOOL AND INA DECOUPLER***

1 - INA DECOUPLER
2 - TOOL #8823 (VM.1048)

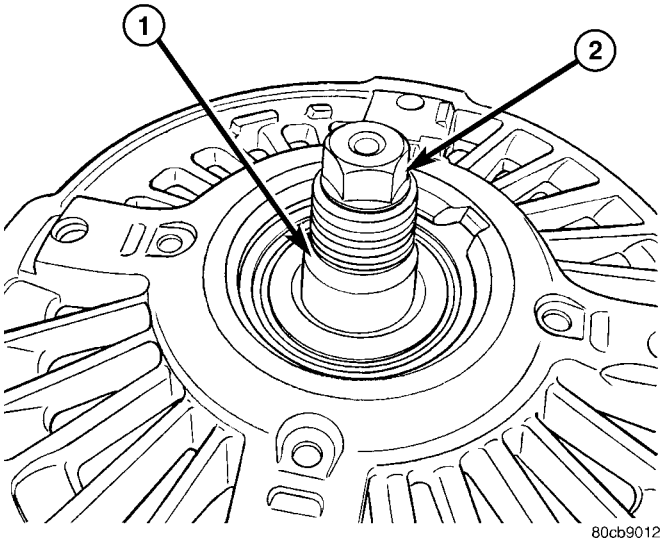



***Fig. 11 END OF GENERATOR SHAFT (HEX)***

1 - GENERATOR SHAFT
2 - HEX