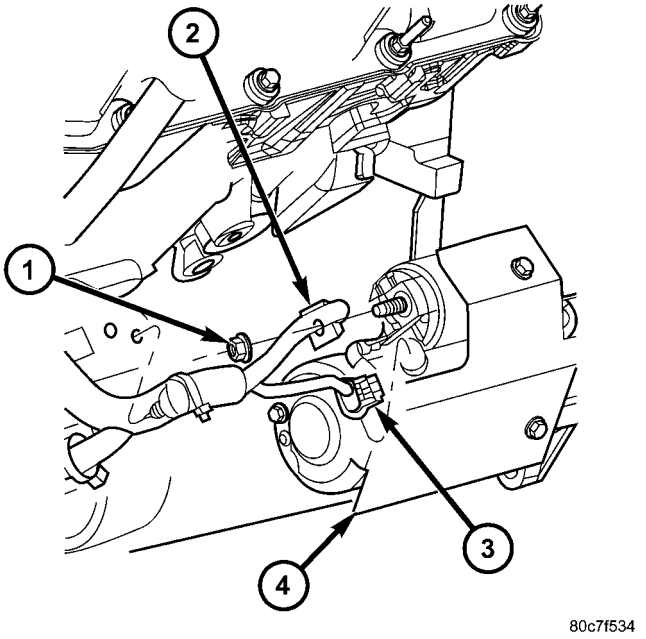


***Fig. 10 STARTER ELECTRICAL CONNECTORS (2.4L SHOWN)***

1 - BATERY CABLE NUT
2 - BATTERY CABLE
3 - SOLENOID CONNECTOR
4 - HEAT SHIELD (IF USED)

**4.0L**

(1) Disconnect and isolate negative battery cable.

(2) Raise and support vehicle.

(3) **4.0L With Manual Transmission:** Remove lower bolt (forward facing) securing starter motor to transmission housing (Fig. 11).

(4) **4.0L With Manual Transmission:** While supporting starter motor, remove upper bolt (rearward facing) securing starter motor to transmission housing.

(5) **4.0L With 42 RLE Automatic Transmission:** Remove 2 starter mounting bolts (Fig. 12).

(6) Lower starter motor from front of transmission housing far enough to access and remove nut securing battery to starter solenoid. Always support starter motor during this process. Do not let starter motor hang from wire harness.

(7) Remove battery cable at starter solenoid.

(8) Disconnect solenoid terminal wire harness connector from starter solenoid.

(9) Remove starter motor from transmission housing.

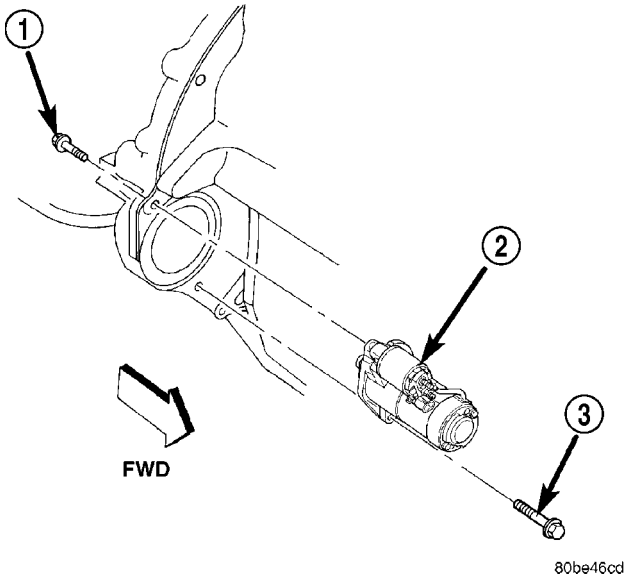


***Fig. 11 STARTER - 4.0L - MAN. TRANS.***

1 - BOLT
2 - STARTER MOTOR
3 - BOLT

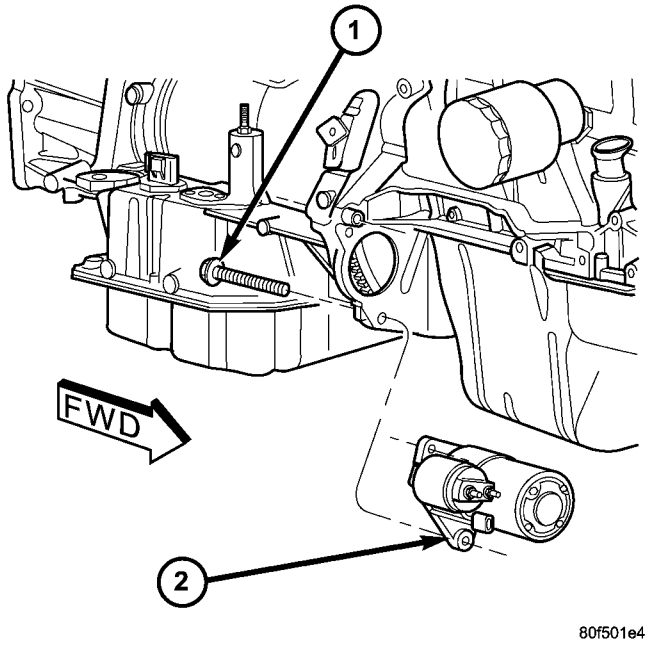


***Fig. 12 STARTER - 4.0L - 42RLE AUTO. TRANS.***

1 - BOLT
2 - STARTER MOTOR

## INSTALLATION

**2.4L**

(1) Connect solenoid terminal wire harness connector to starter solenoid. Always support starter motor during this process. Do not let starter motor hang from wire harness.