HEATED MIRRORS

TABLE OF CONTENTS

	page
HEATED MIRRORS	
DESCRIPTION	8
OPERATION	8

HEATED MIRRORS

DESCRIPTION

The optional heated mirror system is controlled by the momentary rear window defogger switch located in the accessory switch bezel (Fig. 1). An amber indicator lamp in the switch will illuminate to indicate when the rear window defogger (EBL) system is turned on.

The heated mirror system only operates in concert with the EBL system, and will be automatically shut off after a programmed time interval of about ten minutes. After the initial time interval has expired, if the defogger switch is pressed again during the same ignition cycle, the heated mirror system will automatically shut off after about five minutes.

The heated mirror system will automatically shut off if the ignition switch is turned to the Off position, or it can be shut off manually by pressing the rear window defogger switch a second time.

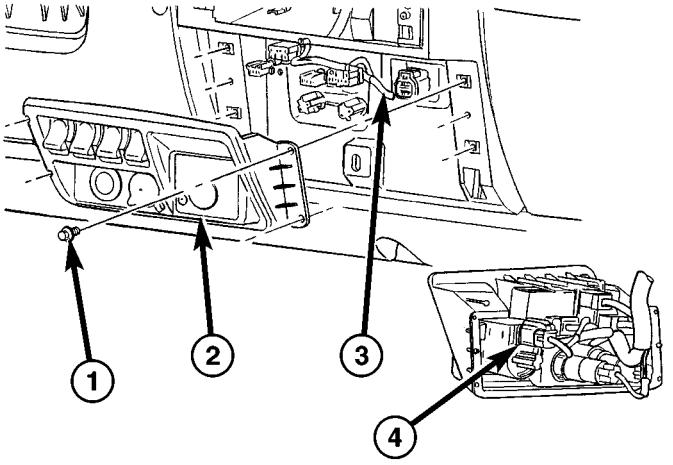

Fig. 1 Accessory Switch Bezel - Typical

1 - BEZEL SCREWS (4)
2 - BEZEL
3 - WIRE HARNESS
4 - ELECTRICAL CONNECTORS (7)

OPERATION

When the rear window defogger switch is pressed, the rear window defogger (EBL) system becomes activated and an electric heater grid located behind the glass of each of the outside rear view mirrors is energized. When energized, each of these heater grids produce heat to help clear the outside rear view mirrors of ice, snow, or fog.

If the outside mirror heating grids are both inoperative, refer to DIAGNOSIS AND TESTING - REAR WINDOW DEFOGGER SYSTEM in his group. If only one of the outside mirror heating grids is inoperative, refer to 8 - ELECTRICAL/POWER MIRRORS - DIAGNOSIS AND TESTING.

The heating grid behind each outside mirror glass cannot be repaired and, if faulty or damaged, the entire power mirror assembly must be replaced.