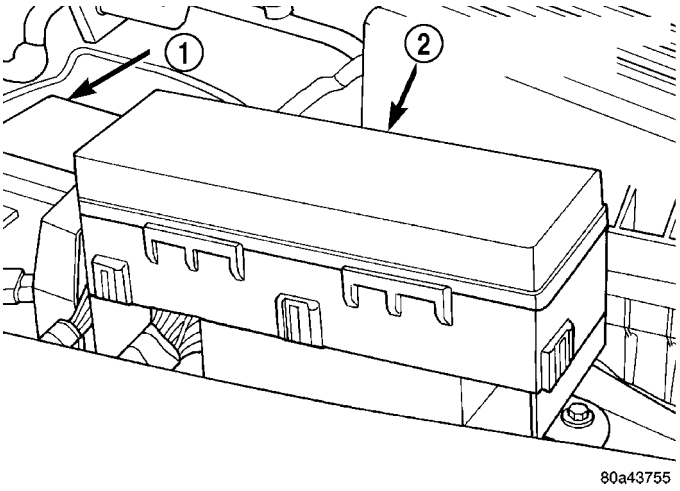

Fig. 4 Power Distribution Center (PDC)

1 - BATTERY
2 - POWER DISTRIBUTION CENTER (PDC)

(1) Remove PDC cover.
(2) Remove relay from PDC.
(3) Check condition of relay terminals and PDC connector terminals for damage or corrosion. Repair if necessary before installing relay.
(4) Check for pin height (pin height should be the same for all terminals within the PDC connector). Repair if necessary before installing relay.

INSTALLATION

The ASD relay is located in the Power Distribution Center (PDC) (Fig. 4). Refer to label on PDC cover for relay location.
(1) Install relay to PDC.
(2) Install cover to PDC.

CAMSHAFT POSITION SENSOR

DESCRIPTION

2.4L

The Camshaft Position Sensor (CMP) on the 2.4L 4–cylinder engine is bolted to the right-front side of the cylinder head (Fig. 5).

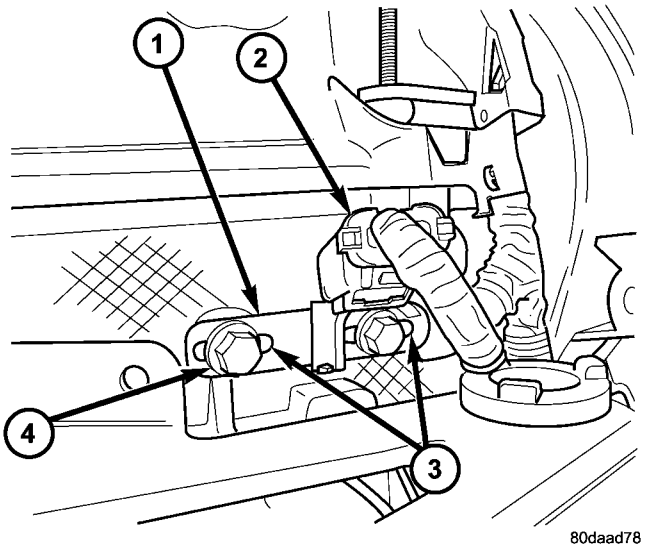

Fig. 5 CMP LOCATION - 2.4L

1 - CMP SENSOR
2 - ELECTRICAL CONNECTOR
3 - SLOTTED HOLES
4 - MOUNTING BOLTS (2)

4.0L

The CMP (Camshaft Position Sensor) sensor (2) (Fig. 6) is bolted to the side of the oil pump drive assembly (5). The assembly is located on the right side of the engine near the oil filter (Fig. 6).

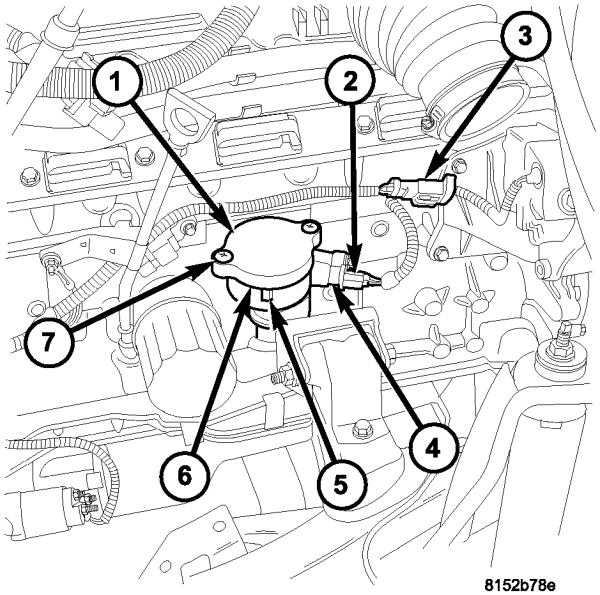

Fig. 6 4.0L CMP LOCATION ('05)

1 - OIL PUMP DRIVE ASSEMBLY
2 - CMP
3 - CMP ELECTRICAL CONNECTOR
4 - HOUSING HOLD DOWN BOLT
5 - HOUSING
6 - PLASTIC COVER
7 - COVER SCREWS (2)