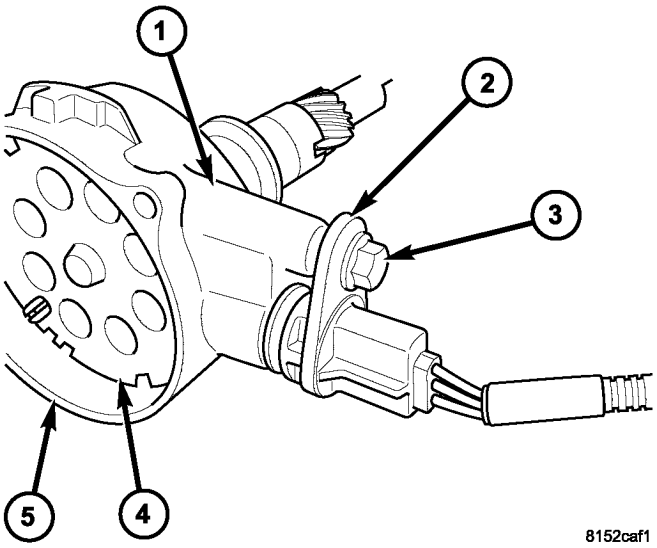

Fig. 12 4.0L CMP REMOVAL/INSTALLATION

1 - OIL PUMP DRIVE HOUSING
2 - CMP SENSOR
3 - SENSOR MOUNTING BOLT
4 - TARGET WHEEL
5 - HOUSING

(2) Remove sensor mounting bolt (3) (Fig. 12).

(3) Remove sensor (2) from oil pump drive housing (1) (Fig. 12).

OIL PUMP DRIVE AND CMP SENSOR - 4.0L

If the CMP and oil pump drive are to be removed and installed, do not allow engine crankshaft or camshaft to rotate. CMP sensor relationship will be lost.

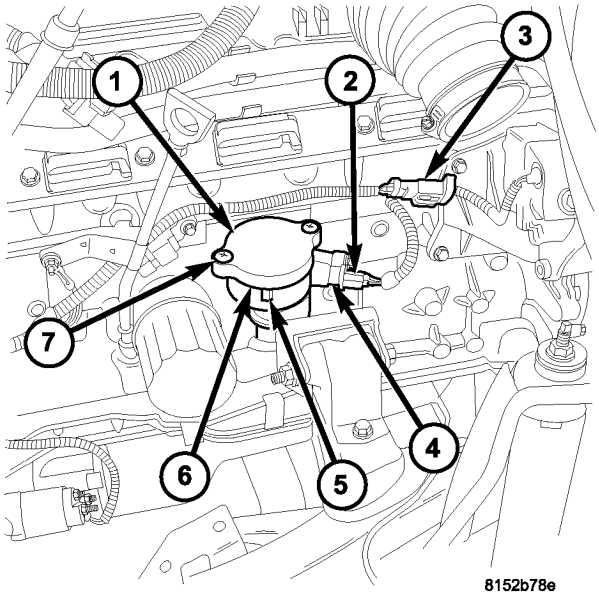

Fig. 13 4.0L CMP LOCATION ('05)

1 - OIL PUMP DRIVE ASSEMBLY
2 - CMP
3 - CMP ELECTRICAL CONNECTOR
4 - HOUSING HOLD DOWN BOLT
5 - HOUSING
6 - PLASTIC COVER
7 - COVER SCREWS (2)

(1) Remove two plastic cover screws (7) (Fig. 13) and remove plastic cover (6).

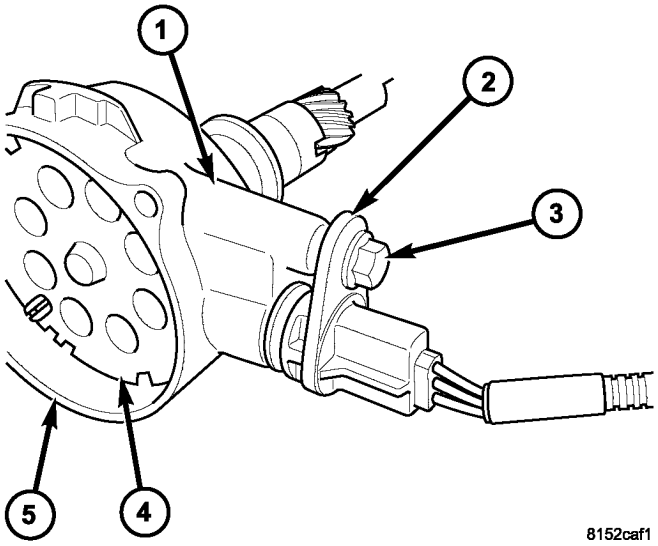

Fig. 14 4.0L CMP REMOVAL/INSTALLATION

1 - OIL PUMP DRIVE HOUSING
2 - CMP SENSOR
3 - SENSOR MOUNTING BOLT
4 - TARGET WHEEL
5 - HOUSING

(2) Note and mark rotational position of target wheel (4) (Fig. 14) in relationship to housing (5).