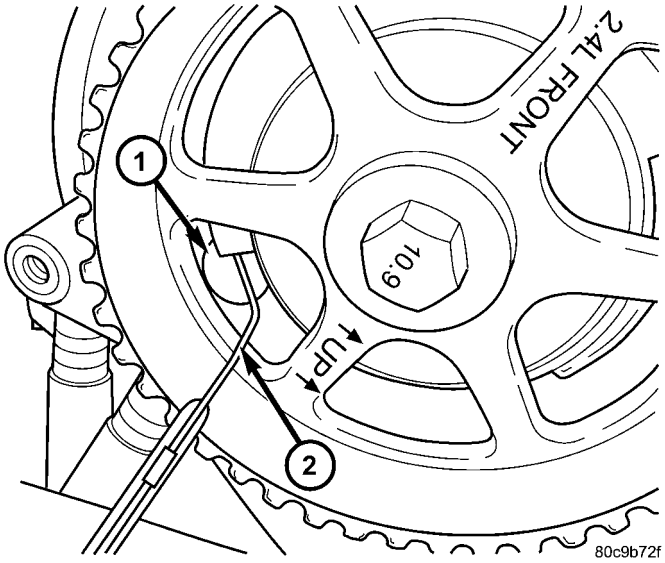

Fig. 17 CMP ADJUSTMENT - 2.4L

1 - FACE OF SENSOR
2 - WIRE GAPPING TOOL

4.0L

SENSOR ONLY - 4.0L

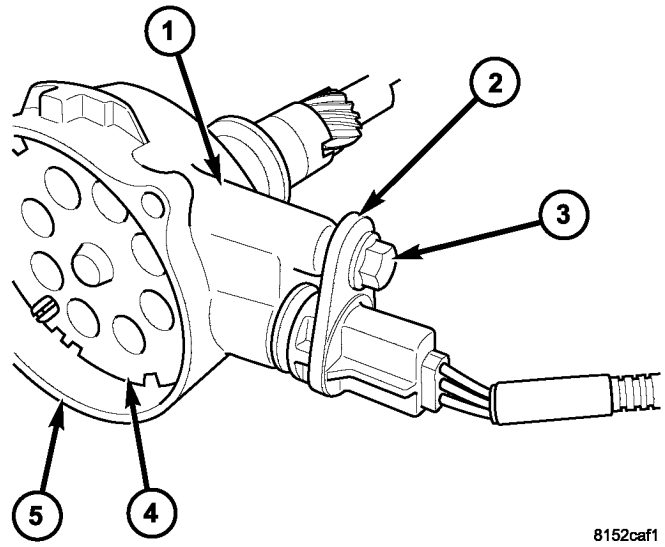

Fig. 18 4.0L CMP REMOVAL/INSTALLATION

1 - OIL PUMP DRIVE HOUSING
2 - CMP SENSOR
3 - SENSOR MOUNTING BOLT
4 - TARGET WHEEL
5 - HOUSING

(1) Install sensor (2) (Fig. 18) to oil pump drive housing (1).

(2) Install sensor mounting bolt (3) (Fig. 18) and tighten to 2 N·m (15 in. lbs.) torque.

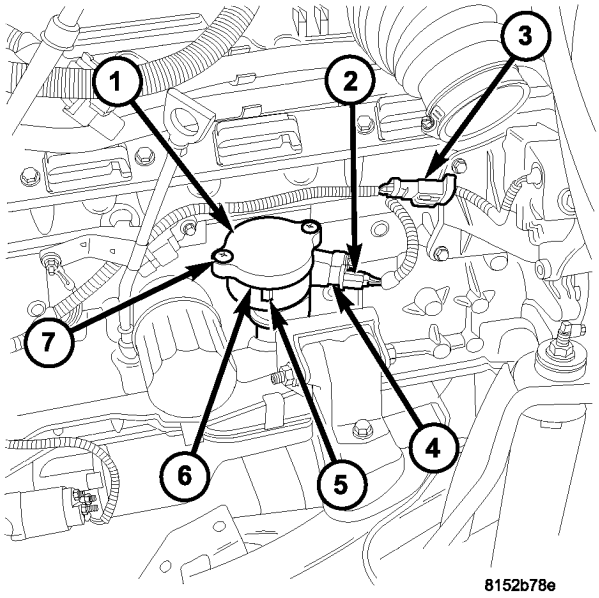

Fig. 19 4.0L CMP LOCATION ('05)

1 - OIL PUMP DRIVE ASSEMBLY
2 - CMP
3 - CMP ELECTRICAL CONNECTOR
4 - HOUSING HOLD DOWN BOLT
5 - HOUSING
6 - PLASTIC COVER
7 - COVER SCREWS (2)

(3) Connect CMP electrical jumper harness (3) (Fig. 19) to engine wiring harness.

OIL PUMP DRIVE AND CMP SENSOR - 4.0L

(1) Clean oil pump drive mounting hole area of engine block.

(2) Install new oil pump drive-to-engine block gasket.