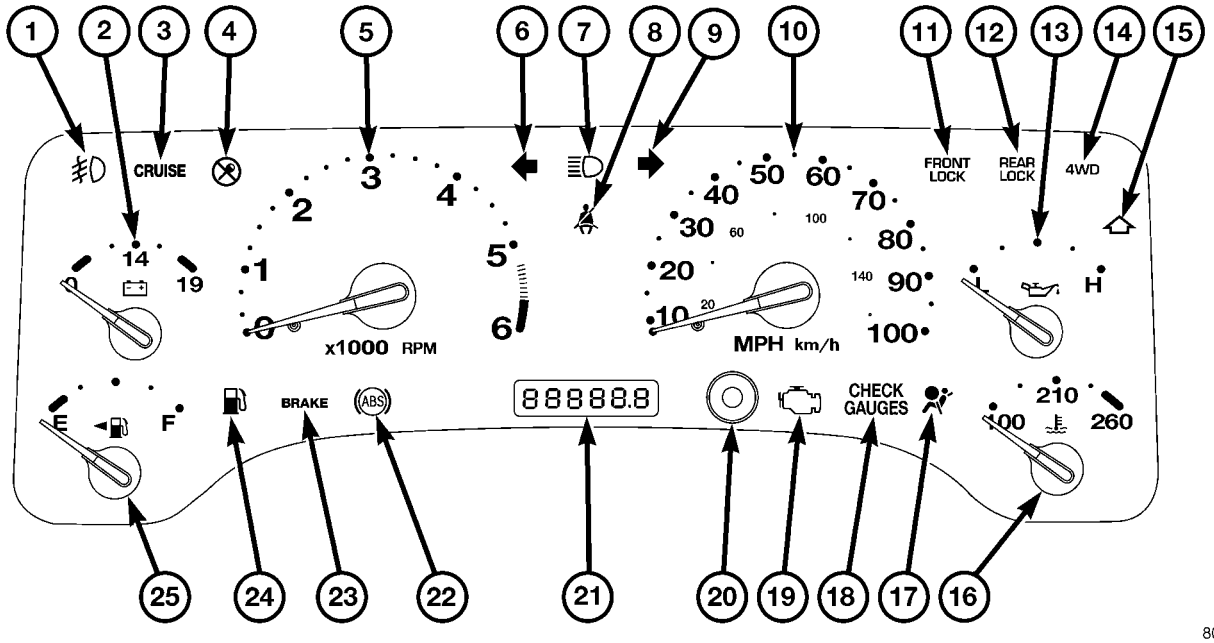

80ed84c3

Fig. 3 Gauges & Indicators

1 - FOG LAMP INDICATOR
2 - VOLTAGE GAUGE
3 - CRUISE INDICATOR
4 - SKIS INDICATOR
5 - TACHOMETER
6 - LEFT TURN INDICATOR
7 - HIGH BEAM INDICATOR
8 - SEATBELT INDICATOR
9 - RIGHT TURN INDICATOR
10 - SPEEDOMETER
11 - FRONT LOCK INDICATOR
12 - REAR LOCK INDICATOR
13 - OIL PRESSURE GAUGE
14 - 4WD INDICATOR
15 - NOT APPLICABLE
16 - ENGINE TEMPERATURE GAUGE
17 - AIRBAG INDICATOR
18 - CHECK GAUGES INDICATOR
19 - MALFUNCTION INDICATOR LAMP
20 - ODOMETER/TRIP ODOMETER SWITCH BUTTON
21 - ODOMETER/TRIP ODOMETER DISPLAY
22 - ABS INDICATOR
23 - BRAKE INDICATOR
24 - LOW FUEL INDICATOR
25 - FUEL GAUGE

The EMIC high beam indicator is illuminated by a dedicated incandescent bulb. Each remaining indicator in the EMIC is illuminated by a dedicated LED that is soldered onto the EMIC electronic circuit board. The LED units are not available for service replacement and, if damaged or faulty, the entire EMIC must be replaced. Cluster illumination is accomplished by dimmable incandescent back lighting, which illuminates the gauges for visibility when the exterior lighting is turned on. Each of the incandescent bulbs is secured by an integral bulb holder to the electronic circuit board from the back of the cluster housing.

Hard wired circuitry connects the EMIC to the electrical system of the vehicle. These hard wired circuits are integral to several wire harnesses, which are routed throughout the vehicle and retained by many different methods. These circuits may be connected to each other, to the vehicle electrical system and to the EMIC through the use of a combination of soldered splices, splice block connectors, and many different types of wire harness terminal connectors and insulators. Refer to the appropriate wiring information. The wiring information includes wiring diagrams, proper wire and connector repair procedures, further details on wire harness routing and retention, as well as pin-out and location views for the various wire harness connectors, splices and grounds.

The EMIC modules for this model are serviced only as complete units. The EMIC module cannot be adjusted or repaired. If a gauge, an LED indicator, a VFD unit, the electronic circuit board, the circuit board hardware, the cluster overlay, or the EMIC housing are damaged or faulty, the entire EMIC module must be replaced. The cluster lens, the cluster hood and mask unit, the cluster housing rear cover, the odometer/trip odometer switch button boot, and the incandescent lamp bulbs with holders are available for individual service replacement.

OPERATION

The ElectroMechanical Instrument Cluster (EMIC) in this model also includes the hardware and software necessary to serve as the electronic body control module. The following information deals primarily with the instrument cluster functions of this unit.