REMOVAL

WARNING: TO AVOID PERSONAL INJURY OR DEATH, ON VEHICLES EQUIPPED WITH AIRBAGS, DISABLE THE SUPPLEMENTAL RESTRAINT SYSTEM BEFORE ATTEMPTING ANY STEERING WHEEL, STEERING COLUMN, AIRBAG, OR INSTRUMENT PANEL COMPONENT DIAGNOSIS OR SERVICE. DISCONNECT AND ISOLATE THE BATTERY NEGATIVE (GROUND) CABLE, THEN WAIT TWO MINUTES FOR THE SYSTEM CAPACITOR TO DISCHARGE BEFORE PERFORMING FURTHER DIAGNOSIS OR SERVICE. THIS IS THE ONLY SURE WAY TO DISABLE THE SUPPLEMENTAL RESTRAINT SYSTEM. FAILURE TO TAKE THE PROPER PRECAUTIONS COULD RESULT IN ACCIDENTAL AIRBAG DEPLOYMENT.

(1) Disconnect and isolate the battery negative cable.

(2) Remove the cluster bezel from the instrument panel. (Refer to 23 - BODY/INSTRUMENT PANEL/ CLUSTER BEZEL - REMOVAL).

(3) Remove the four screws that secure the instrument cluster to the instrument panel structural support (Fig. 4).

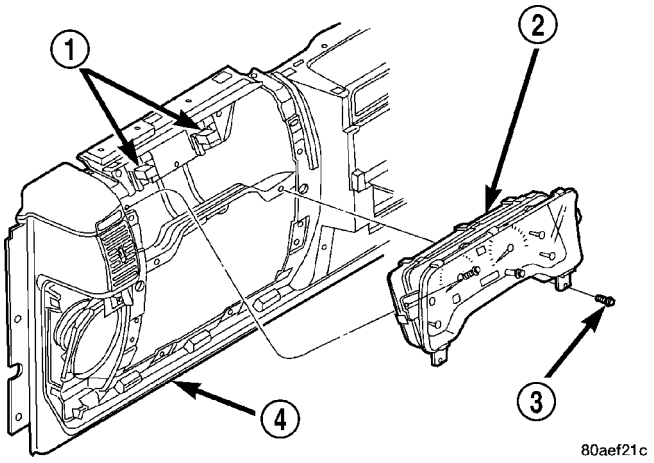

Fig. 4 Instrument Cluster Remove/Install

1 - WIRE HARNESS CONNECTORS
2 - INSTRUMENT CLUSTER
3 - SCREW (4)
4 - INSTRUMENT PANEL

(4) Pull the instrument cluster rearward far enough to access and disconnect the two instrument panel wire harness connectors for the instrument cluster from the connector receptacles on the back of the cluster housing.

(5) Remove the instrument cluster from the instrument panel.

DISASSEMBLY

Some of the components for the instrument cluster used in this vehicle are serviced individually. The serviced components include: the incandescent instrument cluster indicator and illumination lamp bulbs (including the integral bulb holders), the cluster lens, the trip odometer reset button boot, the cluster hood and mask unit, and the cluster housing rear cover. Following are the procedures for disassembling these components from the instrument cluster unit.

WARNING: TO AVOID PERSONAL INJURY OR DEATH, ON VEHICLES EQUIPPED WITH AIRBAGS, DISABLE THE SUPPLEMENTAL RESTRAINT SYSTEM BEFORE ATTEMPTING ANY STEERING WHEEL, STEERING COLUMN, AIRBAG, OR INSTRUMENT PANEL COMPONENT DIAGNOSIS OR SERVICE. DISCONNECT AND ISOLATE THE BATTERY NEGATIVE (GROUND) CABLE, THEN WAIT TWO MINUTES FOR THE SYSTEM CAPACITOR TO DISCHARGE BEFORE PERFORMING FURTHER DIAGNOSIS OR SERVICE. THIS IS THE ONLY SURE WAY TO DISABLE THE SUPPLEMENTAL RESTRAINT SYSTEM. FAILURE TO TAKE THE PROPER PRECAUTIONS COULD RESULT IN ACCIDENTAL AIRBAG DEPLOYMENT.

CLUSTER BULB

This procedure applies to each of the incandescent cluster illumination lamp or indicator bulb and bulb holder units. However, the illumination lamps and the indicators use different bulb and bulb holder unit sizes. They must never be interchanged.

(1) Disconnect and isolate the battery negative cable.

(2) Remove the instrument cluster from the instrument panel. (Refer to 8 - ELECTRICAL/INSTRUMENT CLUSTER - REMOVAL).

(3) Turn the bulb holder counterclockwise about sixty degrees on the cluster electronic circuit board (Fig. 5).

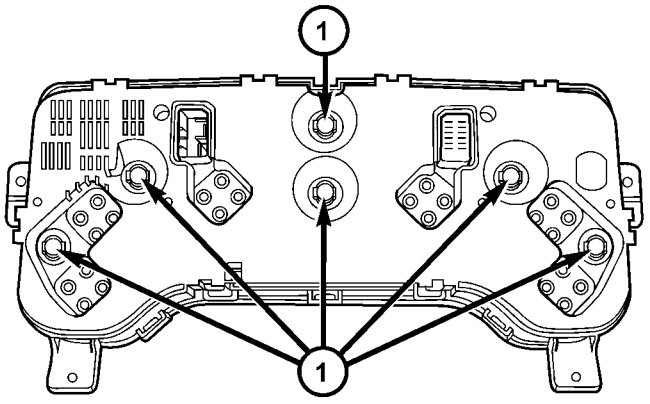

Fig. 5 CLUSTER BULB LOCATIONS

1 - CLUSTER INCANDESCENT BULBS