(4) Pull the bulb and bulb holder unit straight back to remove it from the bulb mounting hole in the cluster electronic circuit board.

CLUSTER LENS

(1) Disconnect and isolate the battery negative cable.

(2) Remove the instrument cluster from the instrument panel. (Refer to 8 - ELECTRICAL/INSTRUMENT CLUSTER - REMOVAL).

(3) Work around the perimeter of the cluster lens and disengage each of the eight latches that secure the lens to the cluster mask and the cluster housing (Fig. 6).

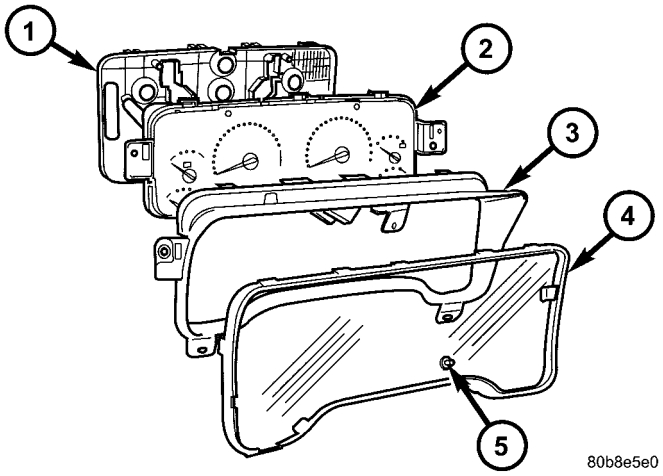

Fig. 6 INSTRUMENT CLUSTER COMPONENTS

1 - REAR COVER
2 - CLUSTER HOUSING
3 - CLUSTER HOOD & MASK
4 - CLUSTER LENS
5 - SWITCH BUTTON BOOT

(4) Gently pull the cluster lens away from the face of the instrument cluster.

TRIP ODOMETER RESET BUTTON BOOT

(1) Disconnect and isolate the battery negative cable.

(2) Remove the instrument cluster from the instrument panel. (Refer to 8 - ELECTRICAL/INSTRUMENT CLUSTER - REMOVAL).

(3) Remove the cluster lens from the cluster housing. Refer to CLUSTER LENS.

(4) Remove the odometer reset button boot by pulling it straight out of the pocketed hole from the face of the cluster lens (Fig. 6).

CLUSTER HOOD AND MASK

(1) Disconnect and isolate the battery negative cable.

(2) Remove the instrument cluster from the instrument panel. (Refer to 8 - ELECTRICAL/INSTRUMENT CLUSTER - REMOVAL).

(3) Remove the cluster lens from the cluster housing. Refer to CLUSTER LENS.

(4) Work around the perimeter of the cluster hood and mask unit and disengage each of the five latches that secure the cluster hood and mask unit to the cluster housing (Fig. 6).

(5) Gently pull the cluster hood and mask unit away from the face of the instrument cluster housing.

CLUSTER HOUSING REAR COVER

(1) Disconnect and isolate the battery negative cable.

(2) Remove the instrument cluster from the instrument panel. (Refer to 8 - ELECTRICAL/INSTRUMENT CLUSTER - REMOVAL).

(3) Remove the screw adjacent to each of the two cluster connector receptacles that secure the rear cover to the cluster housing.

(4) Work around the perimeter of the cluster housing rear cover and disengage each of the eight latches that secure the cover to the outside of the cluster housing (Fig. 6).

(5) Disengage the one inboard latch located in a receptacle near the lower edge of the rear cover just to the right of center that secures the rear cover to the cluster housing.

(6) Gently pull the cluster housing rear cover away from the back of the cluster housing.

ASSEMBLY

Some of the components for the instrument cluster used in this vehicle are serviced individually. The serviced components include: the incandescent instrument cluster indicator and illumination lamp bulbs (including the integral bulb holders), the cluster lens, the trip odometer reset button boot, the cluster hood and mask unit, and the cluster housing rear cover. Following are the procedures for disassembling these components from the instrument cluster unit.

WARNING: TO AVOID PERSONAL INJURY OR DEATH, ON VEHICLES EQUIPPED WITH AIRBAGS, DISABLE THE SUPPLEMENTAL RESTRAINT SYSTEM BEFORE ATTEMPTING ANY STEERING WHEEL, STEERING COLUMN, AIRBAG, OR INSTRUMENT PANEL COMPONENT DIAGNOSIS OR SERVICE. DISCONNECT AND ISOLATE THE BATTERY NEGATIVE (GROUND) CABLE, THEN WAIT TWO MINUTES FOR THE SYSTEM CAPACITOR TO DISCHARGE BEFORE PERFORMING FURTHER DIAGNOSIS OR SERVICE. THIS IS THE ONLY SURE WAY TO DISABLE THE SUPPLEMENTAL RESTRAINT SYSTEM. FAILURE TO TAKE THE PROPER PRECAUTIONS COULD RESULT IN ACCIDENTAL AIRBAG DEPLOYMENT.