CONDITION	POSSIBLE CAUSES	CORRECTION
	4. Faulty headlamp dimmer (multi-function) switch.	4. Replace multi-function switch.
	5. Broken connector terminal or wire splice in headlamp circuit.	5. Repair connector terminal or wire splice.
	6. Both headlamp bulbs faulty.	6. Replace both headlamp bulbs.
*Canada vehicles must have lamps ON.		

SPECIFICATIONS

LAMPS / LIGHTING - EXTERIOR

BULB SPECIFICATIONS

LAMP	BULB
Back-Up	1156 or P21W
Center High Mounted Stop Lamp (CHMSL)	921 or W16W
Front Fog	H3
Front Side Marker	168 or W3W
Headlamp/Sealed Beam	H6024 or H4
License (Export Only)	W5W
Park/Turn Signal	3157 or P27/7W
Position	T4W
Rear Fog	P21W
Repeater	W3W
Tail/Stop	1157 or P21/5W
Underhood	W5W
Underhood (Retractable)	105

TORQUE SPECIFICATIONS

DESCRIPTION	N·m	Ft. Lbs.	In. Lbs.
Steering Column Shroud Mounting Screws	2	-	18
Right Multi-Function Switch Mounting Screws	2	-	17
Left Multi-Function Switch Mounting Screws	2	-	17

SPECIAL TOOLS

HEADLAMP ALIGNMENT

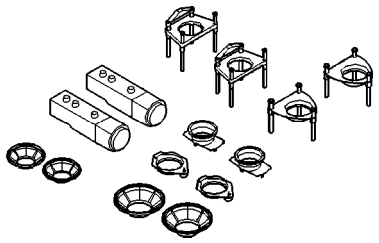

Headlamp Aiming Kit C-4466-A

BRAKE LAMP SWITCH

DESCRIPTION

The brake lamp switch consists of multiple switch contacts either normally open or closed. The switch contacts provide brake pedal status to the various controllers. The primary function of the switch is to illuminate the brake lamps. The brake lamp switch is adjustable and mounted on the brake pedal mounting bracket under the instrument panel.

OPERATION

Vehicles equipped with the speed control option use a multiple function brake lamp switch. The PCM monitors the state of the brake lamp switch. Refer to the Brake section for more information on brake lamp switch service and adjustment procedures.

The primary function of the brake switch is to turn on the brake lamps during braking. The switch is also used to send signals to components that must know when the brakes are applied, such as the Powertrain Control Module (PCM), which uses the signal to cancel speed control. The Controller Antilock Brake (CAB) uses the brake switch signal to monitor brake pedal application. When the normally closed