switch contacts open, the CAB receives the brake applied signal. The CAB then monitors the ABS system to anticipate the need for a ABS stop.

DIAGNOSIS AND TESTING - BRAKE LAMP SWITCH

The brake lamp switch operation can be tested with an ohmmeter. The ohmmeter is used to check continuity between the pin terminals (Fig. 1).

SWITCH CIRCUIT IDENTIFICATION

- Terminals 1 and 2: brake sensor circuit
- Terminals 3 and 4: speed control circuit if equipped
- Terminals 5 and 6: brake lamp circuit

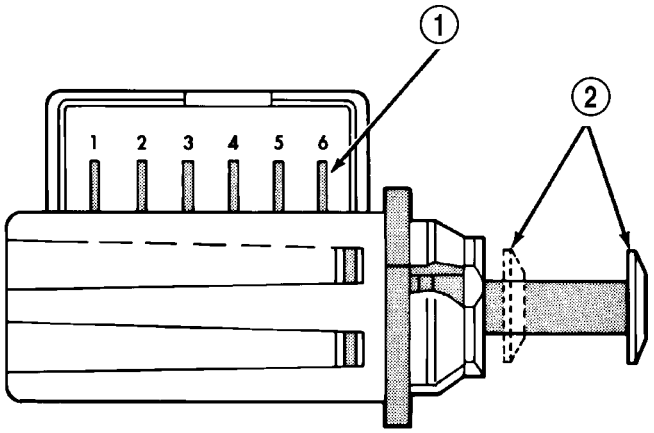

Fig. 1 Brake Lamp Switch Terminal Identification

1 - TERMINAL PINS
2 - PLUNGER TEST POSITIONS

SWITCH CONTINUITY TEST

NOTE: Disconnect switch harness before testing switch continuity.

With the switch plunger retracted, attach test leads to terminal pins 1 and 2. Replace switch if meter indicates no continuity.

With the switch plunger retracted, attach test leads to terminal pins 3 and 4. Replace switch if meter indicates no continuity.

With the switch plunger extended, attach test leads to terminal pins 5 and 6. Replace switch if meter indicates no continuity.

REMOVAL

(1) Remove the steering column cover and the lower trim panel.

(2) Press the brake pedal downward to fully applied position.

(3) Rotate the switch approximately 30° in counterclockwise direction. Then pull the switch rearward and out of bracket.

(4) Disconnect the switch harness and remove the switch (Fig. 2).

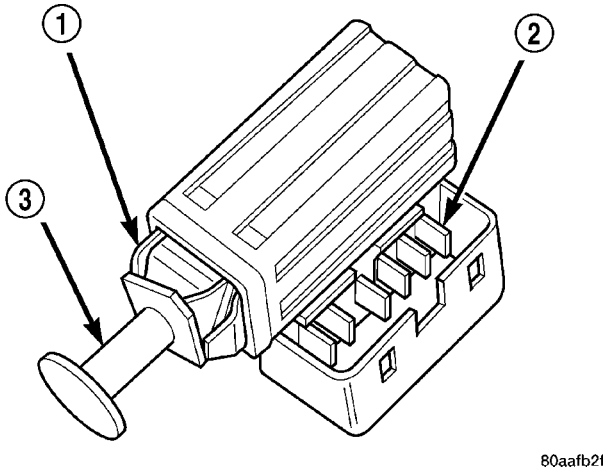

Fig. 2 Brake Lamp Switch

1 - RETAINER
2 - TERMINALS
3 - SWITCH PLUNGER

INSTALLATION

(1) Pull the switch plunger all of the way out, to fully extended position.

(2) Connect the harness connector to the switch.

(3) Press and hold the brake pedal in the applied position.

(4) Align the tab on the switch with the notch in the switch bracket. Then insert the switch in the bracket and turn it clockwise about 30° to lock it in place.

(5) Release the brake pedal, then pull the pedal fully rearward. Pedal will set the plunger to the correct position as the pedal pushes the plunger into the switch body. The switch will make a ratcheting sound as it self-adjusts.

ADJUSTMENTS

ADJUSTMENT

(1) Press and hold brake pedal in applied position.

(2) Pull switch plunger all the way out to fully extended position.

(3) Release brake pedal. Then pull pedal lightly rearward. Pedal will set plunger to correct position as pedal pushes plunger into switch body. Switch will make a ratcheting sound as it self-adjusts.

CAUTION: Booster damage may occur if the pedal pull exceeds 20 lbs.