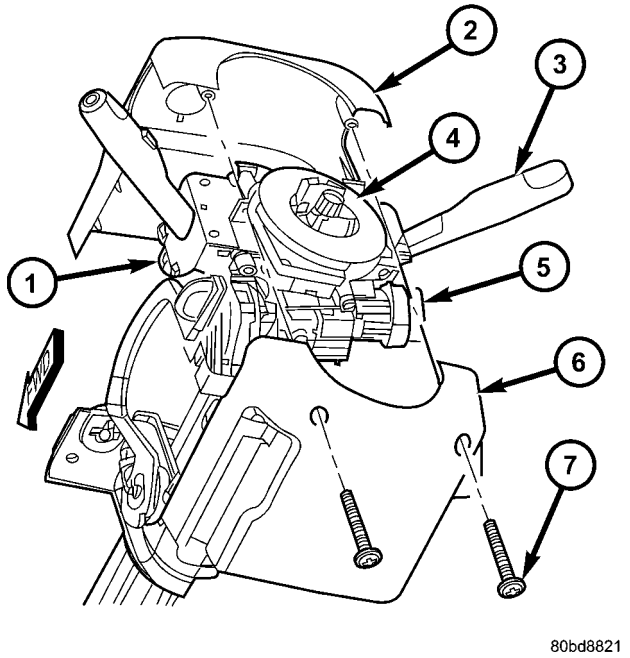

Fig. 6 Steering Column Shrouds Remove/Install

1 - LEFT MULTI-FUNCTION SWITCH
2 - UPPER SHROUD
3 - RIGHT MULTI-FUNCTION SWITCH
4 - CLOCKSPRING
5 - IGNITION LOCK CYLINDER HOUSING
6 - LOWER SHROUD
7 - SCREW (2)

(4) Move the tilt steering column to the fully lowered position and leave the tilt release lever in the released position.

(5) Remove the upper shroud from the steering column.

(6) Grasp the combination flasher firmly and pull it toward the dash panel to disengage the flasher terminals. (Fig. 7).

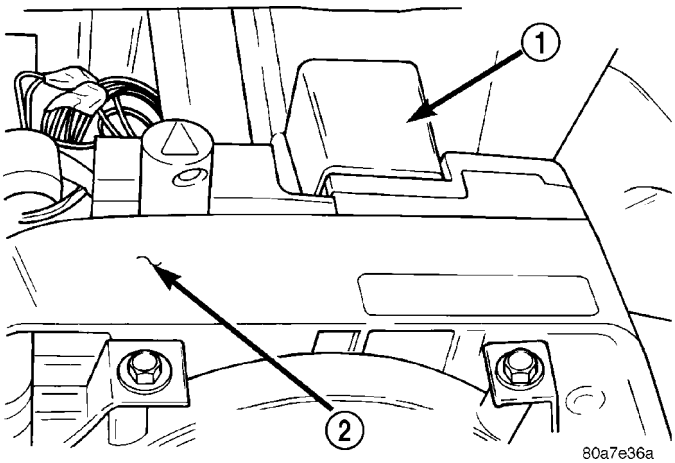

Fig. 7 Combination Flasher

1 - COMBINATION FLASHER
2 - LEFT MULTI-FUNCTION SWITCH

(7) Remove the combination flasher.

INSTALLATION

WARNING: ON VEHICLES EQUIPPED WITH AIRBAGS, DISABLE THE AIRBAG SYSTEM BEFORE ATTEMPTING ANY STEERING WHEEL, STEERING COLUMN, SEAT BELT TENSIONER, OR INSTRUMENT PANEL COMPONENT DIAGNOSIS OR SERVICE. DISCONNECT AND ISOLATE THE BATTERY NEGATIVE (GROUND) CABLE, THEN WAIT TWO MINUTES FOR THE AIRBAG SYSTEM CAPACITOR TO DISCHARGE BEFORE PERFORMING FURTHER DIAGNOSIS OR SERVICE. THIS IS THE ONLY SURE WAY TO DISABLE THE AIRBAG SYSTEM. FAILURE TO TAKE THE PROPER PRECAUTIONS COULD RESULT IN ACCIDENTAL AIRBAG DEPLOYMENT AND POSSIBLE PERSONAL INJURY.

(1) Align the combination flasher terminals with the terminals in the connector on the back of the left multi-function switch housing. (Fig. 7).

(2) Push on the combination flasher until the terminals are fully seated in the left multi-function switch connector.

(3) Position the upper shroud onto the steering column (Fig. 27).

(4) Install and tighten the screws that secure the lower steering column shroud to the upper shroud. Tighten the screws to 2 N·m (18 in. lbs.).

(5) Move the tilt steering column to the fully raised position and secure it in place by moving the tilt release lever back to the locked position.

(6) Reinstall the steering column opening cover. (Refer to 23 - BODY/INSTRUMENT PANEL/STEERING COLUMN OPENING COVER - INSTALLATION).

(7) Reconnect the battery negative cable.

DAYTIME RUNNING LAMP MODULE

DESCRIPTION

The Daytime Running Lights (Headlamps) System is installed on vehicles manufactured for sale in Canada only. A separate module, mounted on the cowl, controls the DRL.

OPERATION

Battery positive voltage is supplied to the Daytime Running Lamp (DRL) module through a circuit breaker and a fuse in the PDC. Ignition positive voltage is supplied to the DRL module through a fuse in the fuse block. The DRL module also utilizes a Vehicle Speed Sensor (VSS) input, high and low beam sense circuits and high beam indicator driver. The DRL module is grounded to the chassis. Once the vehicle reaches a speed of 3 kph (2 mph) and travels