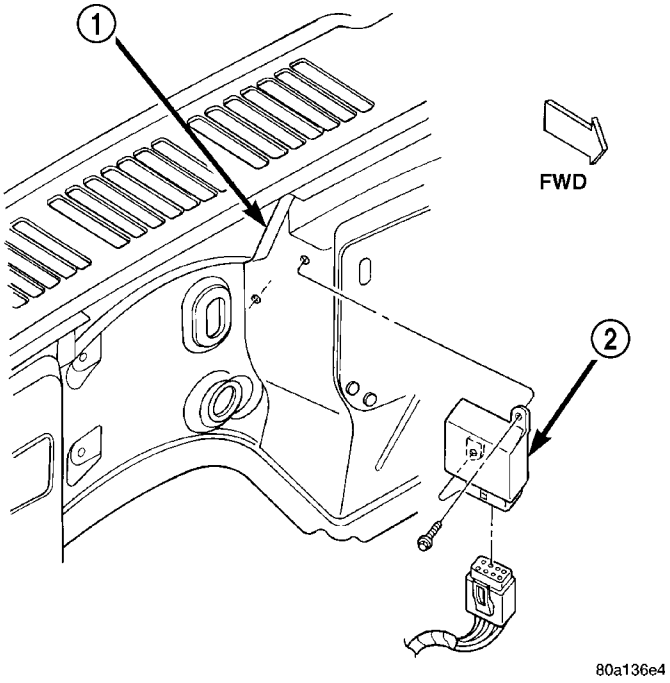

Fig. 8 DRL Module

1 - COWL
2 - DAYTIME RUNNING LAMP MODULE

INSTALLATION

(1) Position the DRL module on the cowl.
(2) Install the screws.
(3) Connect the wire harness connector to the module.
(4) Connect the battery negative cable.

FOG LAMP UNIT

DIAGNOSIS AND TESTING - FRONT FOG LAMP SYSTEM

Always begin any diagnosis by testing all of the fuses and circuit breakers in the system. Refer to the appropriate wiring information.

WARNING: ON VEHICLES EQUIPPED WITH AIRBAGS, DISABLE THE AIRBAG SYSTEM BEFORE ATTEMPTING ANY STEERING WHEEL, STEERING COLUMN, OR INSTRUMENT PANEL COMPONENT DIAGNOSIS OR SERVICE. DISCONNECT AND ISOLATE THE BATTERY NEGATIVE (GROUND) CABLE, THEN WAIT TWO MINUTES FOR THE AIRBAG SYSTEM CAPACITOR TO DISCHARGE BEFORE PERFORMING FURTHER DIAGNOSIS OR SERVICE. THIS IS THE ONLY SURE WAY TO DISABLE THE AIRBAG SYSTEM. FAILURE TO TAKE THE PROPER PRECAUTIONS COULD RESULT IN ACCIDENTAL AIRBAG DEPLOYMENT AND POSSIBLE PERSONAL INJURY.

CONDITION	POSSIBLE CAUSES	CORRECTION
FOG LAMPS ARE DIM WITH ENGINE IDLING OR IGNITION TURNED OFF.	1. Loose or corroded battery cables.	1. Clean and secure battery cable clamps and posts.
	2. Loose or worn generator drive belt.	2. Adjust or replace generator drive belt.
	3. Charging system output too low.	3. Test and repair charging system. (Refer to 8 - ELECTRICAL/CHARGING - DIAGNOSIS AND TESTING)
	4. Battery has insufficient charge.	4. Test battery state-of-charge. (Refer to 8 - ELECTRICAL/BATTERY SYSTEM/BATTERY - DIAGNOSIS AND TESTING)
	5. Battery is sulfated or shorted.	5. Load test battery. (Refer to 8 - ELECTRICAL/BATTERY SYSTEM/BATTERY - DIAGNOSIS AND TESTING)
	6. Poor lighting circuit ground.	6. Test for voltage drop across ground locations.
FOG LAMP BULBS BURN OUT FREQUENTLY	1. Charging system output too high.	1. Test and repair charging system. (Refer to 8 - ELECTRICAL/CHARGING - DIAGNOSIS AND TESTING)
	2. Loose or corroded terminals or splices in circuit.	2. Inspect and repair all connectors and splices.