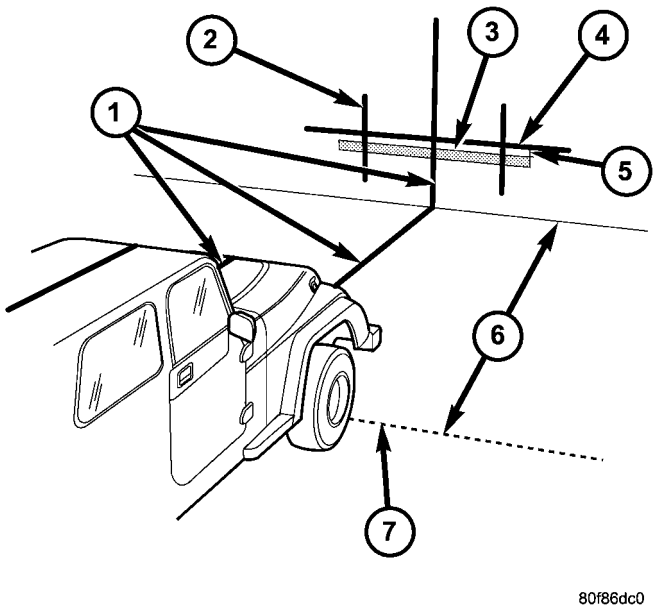


*Fig. 9 Fog Lamp Alignment - Typical*

1 - VEHICLE CENTERLINE
2 - CENTER OF FOG LAMP LENS
3 - HIGH - INTENSITY AREA
4 - FLOOR TO CENTER OF FOG LAMP LENS
5 - 100mm (4 in.)
6 - 7.62 METERS (25 FEET), EXPORT USE 10 METERS (32.8ft.).
7 - FRONT OF FOG LAMP

(1) Turn the fog lamp adjustment screw on the back of the lamp mounting bracket clockwise to lower the beam, or counterclockwise to raise it (Fig. 10).

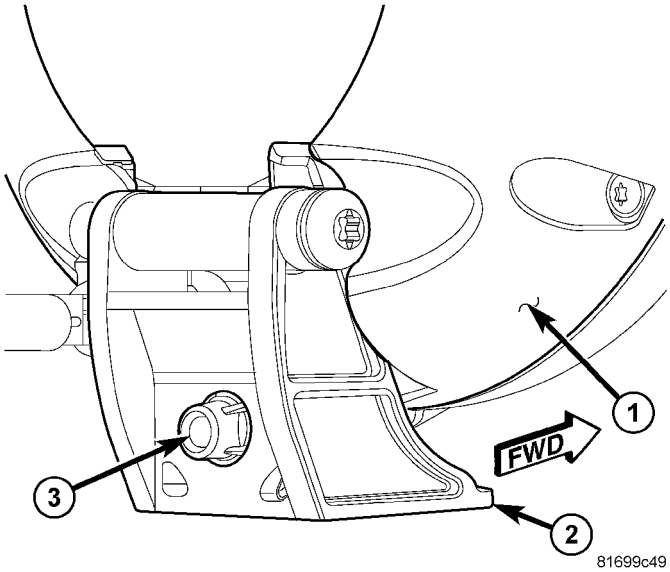


*Fig. 10 Fog Lamp Adjustment Screw*

1 - FOG LAMP
2 - MOUNTING BRACKET
3 - ADJUSTMENT SCREW

# FOG LAMP

## REMOVAL

**CAUTION: Do not touch the bulb glass with fingers or other oily surfaces. Reduced bulb life will result.**

(1) Disconnect and isolate the battery negative cable.
(2) Remove the screws that attach the lens and reflector to the lamp housing.
(3) Separate the lens and reflector from the lamp housing.
(4) Disconnect the electrical connector from the bulb.
(5) Squeeze the bulb retainer together to disengage it from the reflector.
(6) Remove the bulb from the reflector (Fig. 11).

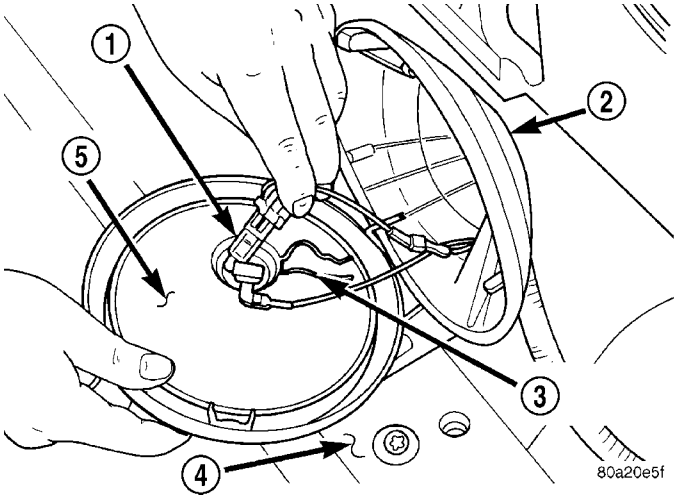


*Fig. 11 Fog Lamp Bulb*

1 - BULB
2 - FOG LAMP HOUSING
3 - BULB RETAINER
4 - FRONT BUMPER
5 - LENS AND REFLECTOR

## INSTALLATION

**CAUTION: Do not touch the bulb glass with fingers or other oily surfaces. Reduced bulb life will result.**

(1) Install the bulb into the reflector.
(2) Position and engage the bulb retainer onto the reflector.
(3) Connect the electrical connector to the bulb.
(4) Install the lens and reflector to the lamp housing.
(5) Install the screws that attach the lens and reflector to the lamp housing.
(6) Reconnect the battery negative cable.