FRONT PARK / TURN SIGNAL LAMP UNIT

DESCRIPTION

A front turn signal/parking lamp assembly is mounted to each front fender. Each front turn signal/parking lamp assembly consist of a housing, lens and lamp.

OPERATION

The parking light function is controlled by the headlamp switch located on the instrument panel. The turn signal function is controlled by the left multi-function switch located on the steering column. Each front turn signal/parking lamp assembly can be serviced separately.

REMOVAL

(1) Disconnect and isolate the battery negative cable.

(2) Remove the screws that secure the park/turn signal lamp housing to the front fender (Fig. 16).

(3) Remove the park/turn signal lamp housing from the fender.

(4) Rotate the socket one-third turn counterclockwise and separate the socket and lamp from the housing.

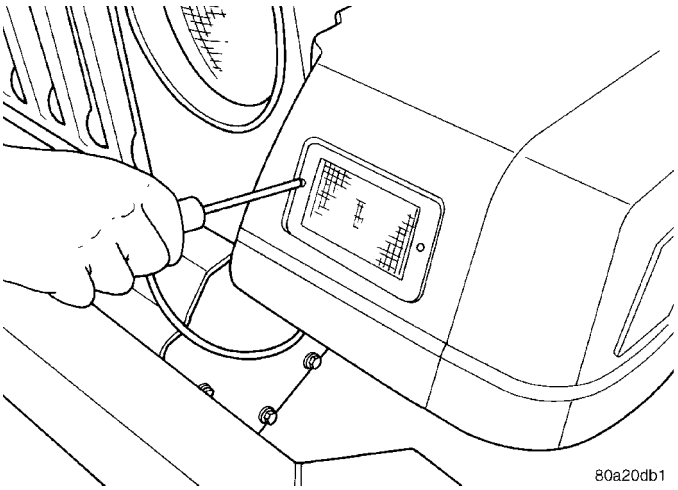

Fig. 16 Park/Turn Signal Lamp Assembly

INSTALLATION

(1) Install the socket and lamp into the housing and rotate the socket one-third turn clockwise.

(2) Position the park/turn signal lamp housing into the fender.

(3) Install the screws that secure the park/turn signal lamp housing to the fender. Tighten the screws securely.

(4) Reconnect the battery negative cable.

FRONT PARK / TURN SIGNAL LAMP

REMOVAL

(1) Disconnect and isolate the battery negative cable.

(2) Remove the park/turn signal lamp housing from the fender (Refer to 8 - ELECTRICAL/LAMPS/LIGHTING - EXTERIOR/PARK/TURN SIGNAL LAMP UNIT - REMOVAL).

(3) Firmly grasp the socket on the back of the lamp housing and rotate it counterclockwise about 30 degrees to unlock it.

(4) Pull the socket and bulb straight out from the keyed opening in the housing.

(5) Pull the base of the bulb straight out of the socket.

INSTALLATION

CAUTION: Always use the correct bulb size and type for replacement. An incorrect bulb size or type may overheat and cause damage to the lamp, the socket and/or the lamp wiring.

(1) Align the base of the bulb with the park/turn signal bulb socket.

(2) Push the bulb straight into the socket until the base is firmly seated.

(3) Align the socket and bulb with the keyed opening on the back of the park/turn signal lamp unit housing.

(4) Insert the socket and bulb into the housing until the socket is firmly seated.

(5) Rotate the socket clockwise about 30 degrees to lock it into place.

(6) Install the lamp housing into the fender (Refer to 8 - ELECTRICAL/LAMPS/LIGHTING - EXTERIOR/PARK/TURN SIGNAL LAMP UNIT - INSTALLATION).

(7) Reconnect the battery negative cable.

HEADLAMP

DESCRIPTION

The headlamps are sealed beam units. Each unit contains a high and low beam filament.

OPERATION

The headlamps are turned on and off by the headlamp switch. The high and low beam selection is controlled by the left multi-function switch. Each headlamp can be serviced individually.