REMOVAL

(1) Disconnect and isolate the battery negative cable.

(2) Remove the screws that secure the headlamp bezel to the grille (Fig. 17).

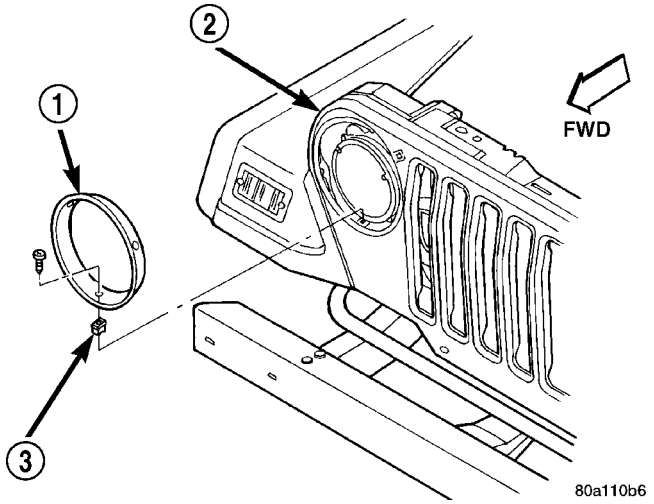

Fig. 17 Headlamp Bezel

1 - HEADLAMP BEZEL
2 - GRILLE
3 - RETAINER

(3) Remove the screws that secure the headlamp retaining ring to the headlamp bucket (Fig. 18).

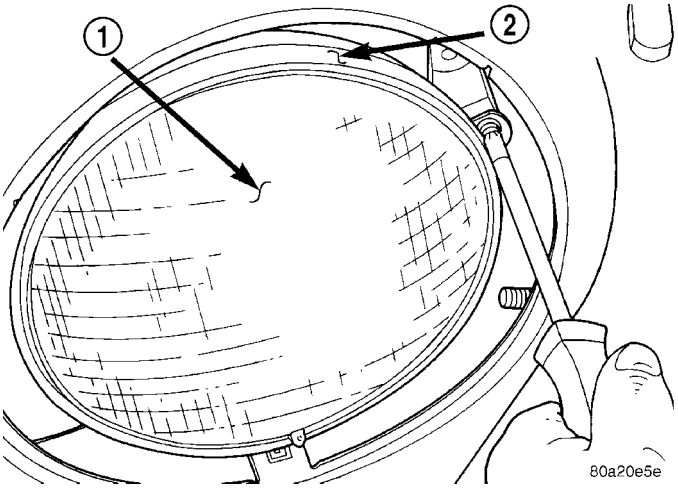

Fig. 18 Headlamp Retaining Ring

1 - HEADLAMP
2 - HEADLAMP RETAINING RING

(4) Remove the headlamp from the bucket and disconnect the wire harness connector from the headlamp (Fig. 19).

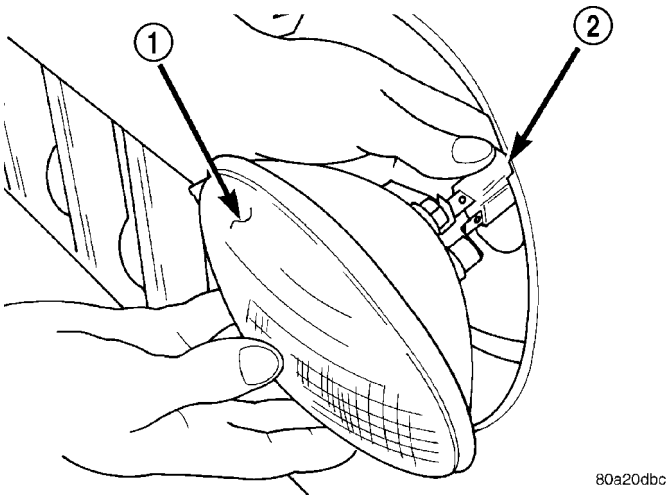

Fig. 19 Headlamp Wire Harness Connector

1 - HEADLAMP
2 - WIRE HARNESS CONNECTOR

INSTALLATION

(1) Connect the wire harness connector to the headlamp and position the headlamp into the bucket.

NOTE: Insure the bosses on the headlamp align with the slots in the bucket.

(2) Align the headlamp bosses with the slots in the bucket and install the retaining ring.

(3) Install the screws that secure the headlamp retaining ring to the headlamp bucket. Tighten the screws securely.

(4) Install the headlamp bezel.

NOTE: Do not overtighten the screws or damage to the headlamp bezel may result.

(5) Install the screws that secure the headlamp bezel. Tighten the screws securely.

(6) Reconnect the battery negative cable.

ADJUSTMENTS

HEADLAMP ALIGNMENT PREPARATION

NOTE: If the vehicle is equipped with a headlamp leveling system, be certain the headlamp leveling switch is in the “0” position.

(1) Verify headlamps are operational in all modes and illuminated in the low beam setting.

(2) Correct defective components that could hinder proper headlamp alignment.

(3) Verify proper tire inflation.

(4) Clean headlamp lenses.

(5) Verify that luggage area is not heavily loaded.

(6) Fuel tank should be FULL. Add 2.94 kg (6.5 lbs.) of weight over the fuel tank for each estimated gallon of missing fuel.