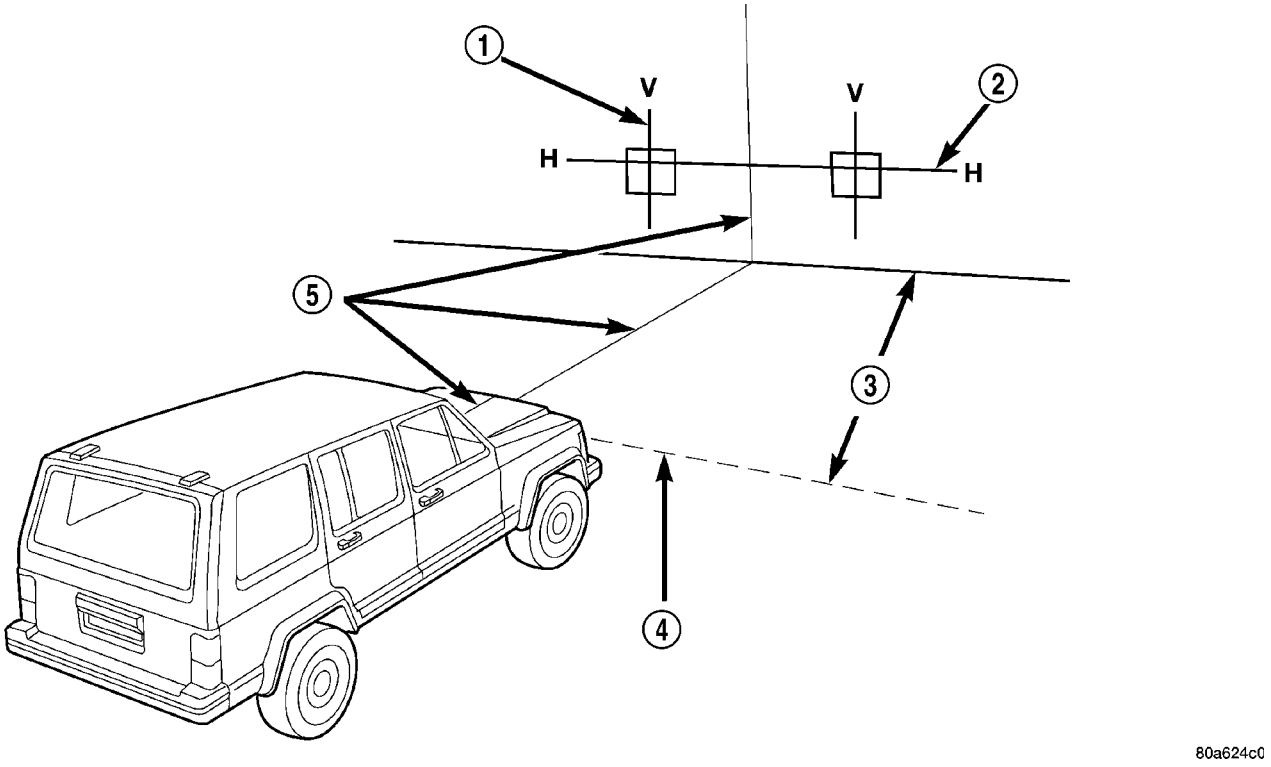

Fig. 20 Headlamp Alignment Screen - Typical

1 - CENTER OF VEHICLE TO CENTER OF HEADLAMP LENS
2 - FLOOR TO CENTER OF HEADLAMP LENS
3 - 7.62 METERS (25 FEET)
4 - FRONT OF HEADLAMP
5 - VEHICLE CENTERLINE

(2) If necessary, tape a line on the floor 7.62 meters (25 ft.), export vehicles use 10 meters (32.8 ft.), away from and parallel to the wall.

(3) Measure from the floor up 1.27 meters (5 ft.) and tape a vertical line on the wall at the centerline of the vehicle. Sight along the centerline of the vehicle (from rear of vehicle forward) to verify accuracy of the line placement.

(4) Rock vehicle side-to-side three times to allow suspension to stabilize.

(5) Jounce front suspension three times by pushing downward on front bumper and releasing.

(6) Measure the distance from the center of headlamp lens to the floor. Transfer measurement to the alignment screen (with tape). Use this horizontal line for up/down adjustment reference.

(7) Place a tape line 130 mm (5.12 in.) below parallel to center of headlamp line.

(8) Measure distance from the centerline of the vehicle to the center of each headlamp being aligned. Transfer measurements to screen (with tape) to each side of vehicle centerline. Use these lines for left/right adjustment reference.

HEADLAMP ADJUSTMENT

(1) Place headlamps on LOW beam.

(2) Cover front of the headlamp that is not being adjusted.

(3) Turn the upper, outboard (up/down) adjustment screw (Fig. 21) until the headlamp beam pattern on screen/wall is similar to the pattern depicted in (Fig. 20)

NOTE: When using a headlamp aiming screen:

- Adjust the headlamps so that the beam horizontal position is at 0.
- Adjust the beam vertical position is 25 mm (1 in) downward from the lamp horizontal centerline.

(4) Rotate the lower, inboard (left/right) adjustment screw (Fig. 21) until the headlamp beam pattern on the aiming screen/wall similar to the pattern in (Fig. 20).

(5) Cover front of the headlamp that has been adjusted and adjust the other headlamp beam as instructed above.