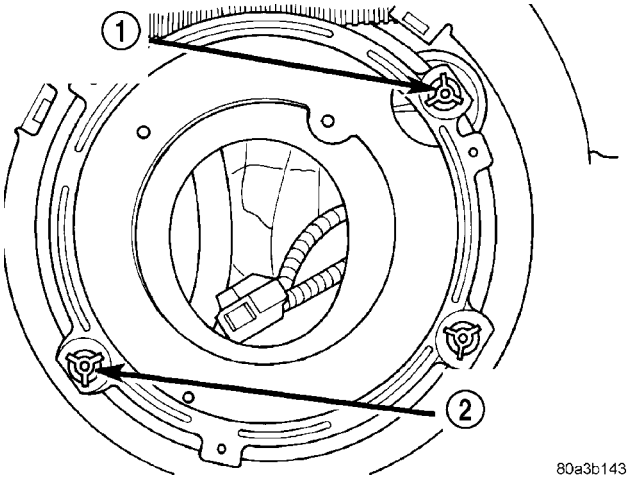

Fig. 21 Headlamp Adjustment Screws

1 - UP/DOWN ADJUSTMENT SCREW
2 - LEFT/RIGHT ADJUSTMENT SCREW

HEADLAMP LEVELING SWITCH

REMOVAL

HEADLAMP LEVELING SWITCH

WARNING: ON VEHICLES EQUIPPED WITH AIRBAGS, REFER TO GROUP 8M - PASSIVE RESTRAINT SYSTEMS BEFORE ATTEMPTING ANY STEERING WHEEL, STEERING COLUMN, OR INSTRUMENT PANEL COMPONENT DIAGNOSIS OR SERVICE. FAILURE TO TAKE THE PROPER PRECAUTIONS COULD RESULT IN ACCIDENTAL AIRBAG DEPLOYMENT AND POSSIBLE PERSONAL INJURY.

(1) Disconnect the negative battery cable.
(2) Using a flat blade screwdriver or similar tool between the headlamp leveling switch and the steering column cover (Fig. 22). Gently pry the headlamp leveling switch out of the steering column cover.

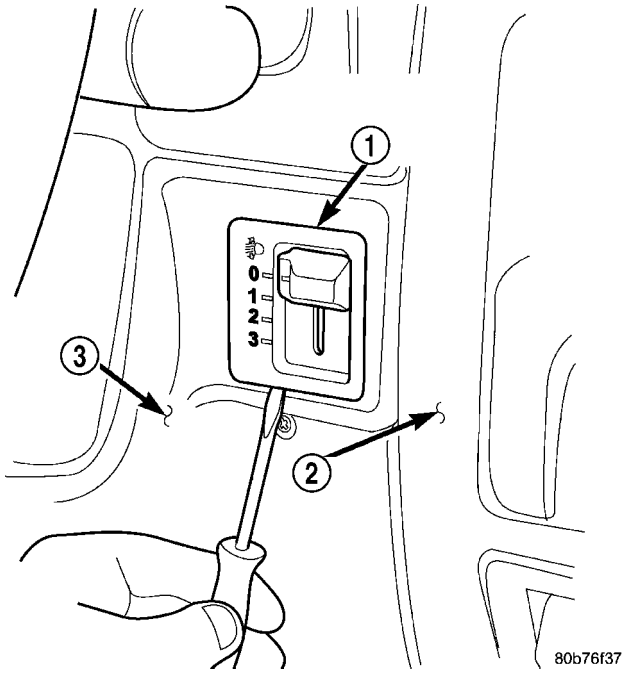

Fig. 22 Headlamp Leveling Switch

1 - HEADLAMP LEVELING SWITCH
2 - I/P CENTER BEZEL
3 - STEERING COLUMN COVER

(3) Disconnect the headlamp leveling switch electrical connector (Fig. 23) and remove the headlamp leveling switch.

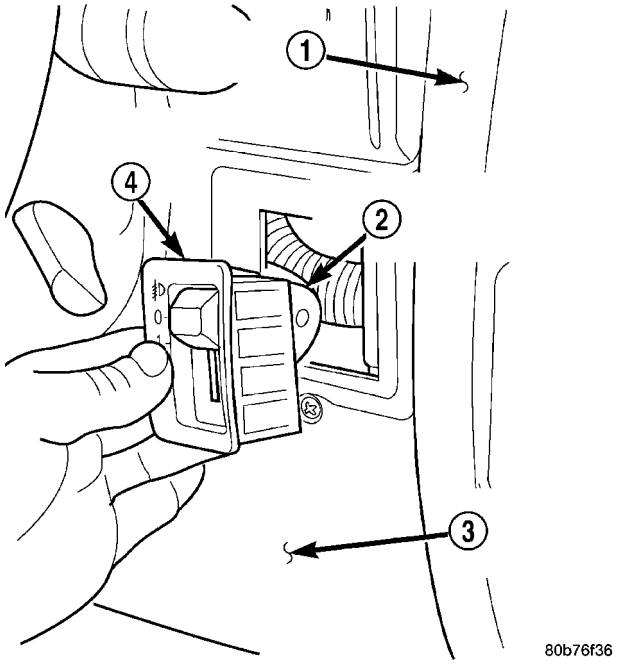

Fig. 23 Headlamp Leveling Switch Electrical Connector

1 - I/P CENTER BEZEL
2 - HEADLAMP LEVELING SWITCH ELECTRICAL CONNECTOR
3 - STEERING COLUMN COVER
4 - HEADLAMP LEVELING SWITCH