when it is extended from the multi-function switch. If only momentary signaling is desired, the switch is actuated to a left or right intermediate detent position. In this position the signal lamps flash as described above, but the switch returns to the Off position as soon as the lever is released. When the system is activated, one of two turn indicators in the instrument cluster flashes in unison with the turn signal lamps, indicating to the driver that the system is operating.

## DIAGNOSIS AND TESTING - LEFT MULTI - FUNCTION SWITCH

Refer to the appropriate wiring information.

**WARNING: ON VEHICLES EQUIPPED WITH AIRBAGS, DISABLE THE AIRBAG SYSTEM BEFORE ATTEMPTING ANY STEERING WHEEL, STEERING COLUMN, OR INSTRUMENT PANEL COMPONENT DIAGNOSIS OR SERVICE. DISCONNECT AND ISOLATE THE BATTERY NEGATIVE (GROUND) CABLE, THEN WAIT TWO MINUTES FOR THE AIRBAG SYSTEM CAPACITOR TO DISCHARGE BEFORE PERFORMING FURTHER DIAGNOSIS OR SERVICE. THIS IS THE ONLY SURE WAY TO DISABLE THE AIRBAG SYSTEM. FAILURE TO TAKE THE PROPER PRECAUTIONS COULD RESULT IN ACCIDENTAL AIRBAG DEPLOYMENT AND POSSIBLE PERSONAL INJURY.**

(1) Disconnect and isolate the battery negative cable.

(2) Remove the left multi-function switch from the steering column (Refer to 8 - ELECTRICAL/LAMPS/LIGHTING - EXTERIOR/LEFT MULTI-FUNCTION SWITCH - REMOVAL).

(3) Remove the combination flasher from the left multi-function switch.

(4) Using an ohmmeter, perform the continuity and resistance tests at the terminals in the left multi-function switch connector receptacles as shown in the Left Multi-Function Switch Test table. Refer to (Fig. 25) and (Fig. 26) for connector terminal and cavity identification.

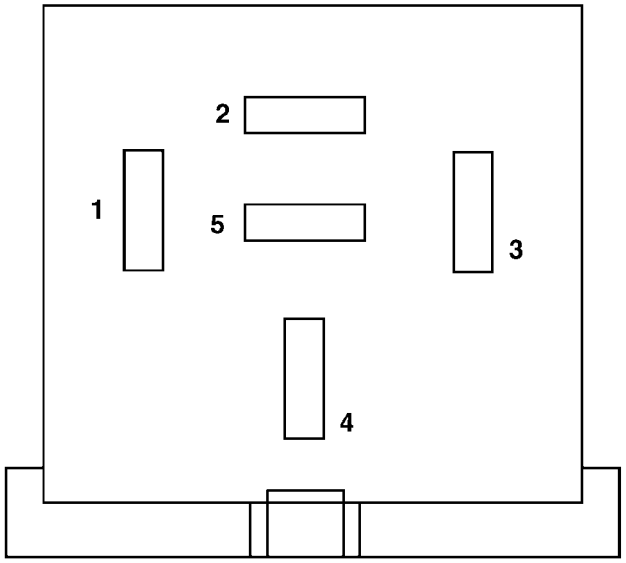


*Fig. 25 Combination Flasher Receptacle (Connector A)*

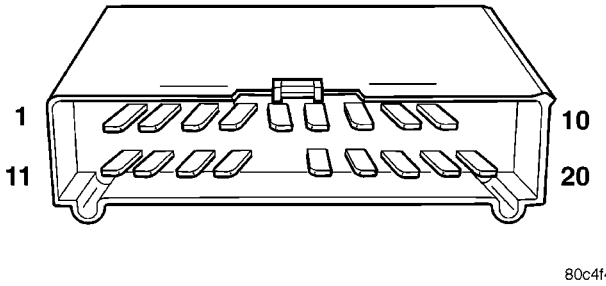


*Fig. 26 Left Multi-Function Switch Connector Receptacle (Connector B)*

| LEFT (LIGHTING) MULTI-FUNCTION SWITCH TEST | | |
|---|---|---|
| TURN SIGNAL AND HAZARD WARNING SWITCH TESTS | | |
| SWITCH POSITION | | CONTINUITY BETWEEN |
| TURN | HAZARD | |
| Neutral | Off | B1 & B4, B1 & B5 |
| Left | Off | A2 & B2, A2 & B4, B1 & B5 |
| Right | Off | A2 & B5, B1 & B4 |
| Neutral | On | A2 & B2, A2 & B4, A2 & B5, A2 & B6, A3 & B7, A3 & A5 |
| EXTERIOR LIGHTING SWITCH TESTS | | |
| SWITCH POSITION | | CONTINUITY BETWEEN |