LEFT (LIGHTING) MULTI-FUNCTION SWITCH TEST		
TURN SIGNAL AND HAZARD WARNING SWITCH TESTS		
Park Lamps On	B9 & B20	
Headlamp Low Beams On	B16 & B18, B16 & B19	
Headlamp High Beams On	B17 & B18, B17 & B19	
Fog Lamps On	B13 & B14	
Rear Fog Lamps On	B12 & B13	
Optical Horn On	B17 & B18, B17 & B19	
INTERIOR LIGHTING SWITCH TESTS		
SWITCH POSITION	RESISTANCE BETWEEN	RESISTANCE (OHMS)
Panel Lamps Dimming Position 1 (Dimmest)	B7 & B8	5653 ± 10%
Dimming Position 2	B7 & B8	3743 ± 10%
Dimming Position 3	B7 & B8	2593 ± 10%
Dimming Position 4	B7 & B8	1825 ± 10%
Dimming Position 5	B7 & B8	1221 ± 10%
Dimming Position 6 (Brightest)	B7 & B8	768 ± 10%
Parade Mode On	B7 & B8	412 ± 10%
Courtesy Lamps On	B7 & B8	150 ± 10%

(5) If the left multi-function switch fails any of the continuity or resistance tests, replace the faulty switch unit as required.

REMOVAL

WARNING: ON VEHICLES EQUIPPED WITH AIRBAGS, DISABLE THE AIRBAG SYSTEM BEFORE ATTEMPTING ANY STEERING WHEEL, STEERING COLUMN, OR INSTRUMENT PANEL COMPONENT DIAGNOSIS OR SERVICE. DISCONNECT AND ISOLATE THE BATTERY NEGATIVE (GROUND) CABLE, THEN WAIT TWO MINUTES FOR THE AIRBAG SYSTEM CAPACITOR TO DISCHARGE BEFORE PERFORMING FURTHER DIAGNOSIS OR SERVICE. THIS IS THE ONLY SURE WAY TO DISABLE THE AIRBAG SYSTEM. FAILURE TO TAKE THE PROPER PRECAUTIONS COULD RESULT IN ACCIDENTAL AIRBAG DEPLOYMENT AND POSSIBLE PERSONAL INJURY.

(1) Disconnect and isolate the battery negative cable.

(2) Remove the steering column opening cover from the instrument panel. (Refer to 23 - BODY/INSTRUMENT PANEL/STEERING COLUMN OPENING COVER - REMOVAL).

(3) Remove the two screws that secure the lower steering column shroud to the upper shroud (Fig. 27).

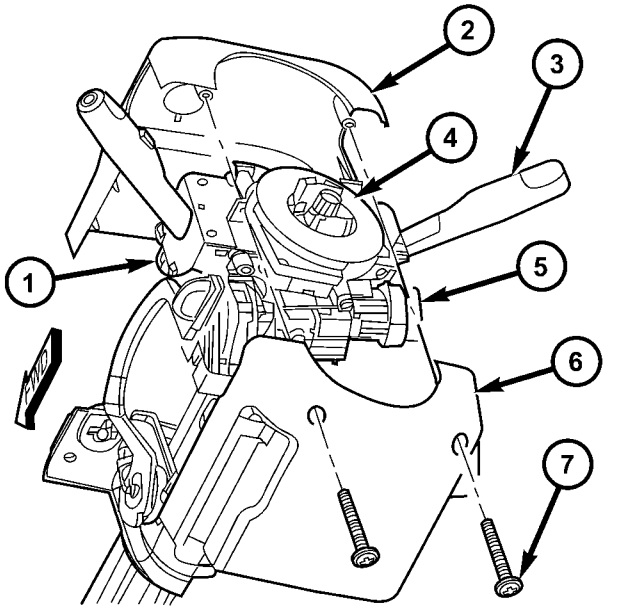

80bd8821

Fig. 27 Steering Column Shrouds Remove/Install

1 - LEFT MULTI-FUNCTION SWITCH
2 - UPPER SHROUD
3 - RIGHT MULTI-FUNCTION SWITCH
4 - CLOCKSPRING
5 - IGNITION LOCK CYLINDER HOUSING
6 - LOWER SHROUD
7 - SCREW (2)

(4) If the vehicle is equipped with the optional tilt steering column, move the tilt steering column to the