(5) Connect the wire harness connector to the tail lamp.

(6) Install the push-in fastener that secures the bottom rear edge of the rear wheelhouse splash shield to the body.

(7) Reconnect the negative battery cable.

TAIL LAMP

REMOVAL

(1) Disconnect and isolate the negative battery cable.

(2) Remove the screws that secure the tail lamp lens to the tail lamp housing (Fig. 31).

(3) Remove the tail lamp lens and gasket from the tail lamp housing.

(4) Push and rotate the lamp(s) one-third turn counterclockwise, then pull the lamp straight out of the socket

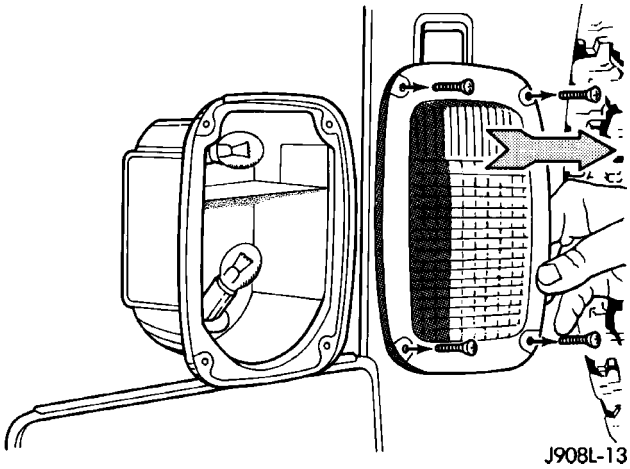

Fig. 31 Tail Lamp Lens

INSTALLATION

(1) Install the lamp(s) by pushing the lamp into the tail lamp socket and turning it one-third clockwise.

NOTE: Install the tail lamp lens with the clear portion (back-up lens) at the top of the housing. Make sure that the gasket is correctly in place and not twisted or torn.

(2) Install the tail lamp lens and gasket onto the tail lamp housing.

NOTE: Do not overtighten the screws or damage to the tail lamp lens may result.

(3) Install the screws that secure the tail lamp lens to the tail lamp housing. Tighten the screws securely.

(4) Reconnect the negative battery cable.

TURN SIGNAL CANCEL CAM

DESCRIPTION

The turn signal cancel cam consists of two lobes that are integral to the lower surface of the clockspring rotor. The clockspring mechanism provides turn signal cancellation as well as a constant electrical connection between the driver airbag, steering wheel accessories and the cross body wire harness on the steering column. The housing of the clockspring is secured to the steering column and remains stationary. The rotor of the clockspring, including the turn signal cancel cam lobes rotate with the steering wheel.

The turn signal cancel cam is integral to the clockspring and cannot be repaired. If faulty or damaged, the entire clockspring assembly must be replaced. (Refer to 8 - ELECTRICAL/RESTRAINTS/CLOCKSPRING - REMOVAL).

OPERATION

The turn signal cancel cam has two lobes molded into the lower surface of the clockspring rotor. When the turn signals are activated by moving the left multi-function switch control stalk to a detent position, a turn signal cancel actuator is extended from the inside surface of the left multi-function switch housing toward the clockspring rotor. When the steering wheel is rotated during the turn, one of the two turn signal cancel cam lobes will contact the turn signal cancel actuator, but the cancel actuator stays latched. When the steering wheel is rotated back to center as the turn is completed, the cancel actuator is unlatched and releases the left multi-function switch control stalk from its detent, cancelling the turn signal event.

UNDERHOOD LAMP UNIT

REMOVAL

(1) Disconnect and isolate the negative battery cable.

(2) Disconnect the wire harness connector from the underhood lamp (Fig. 32).

(3) Remove the screw that secures the underhood lamp to the inner hood panel.

(4) Remove the underhood lamp from the vehicle.