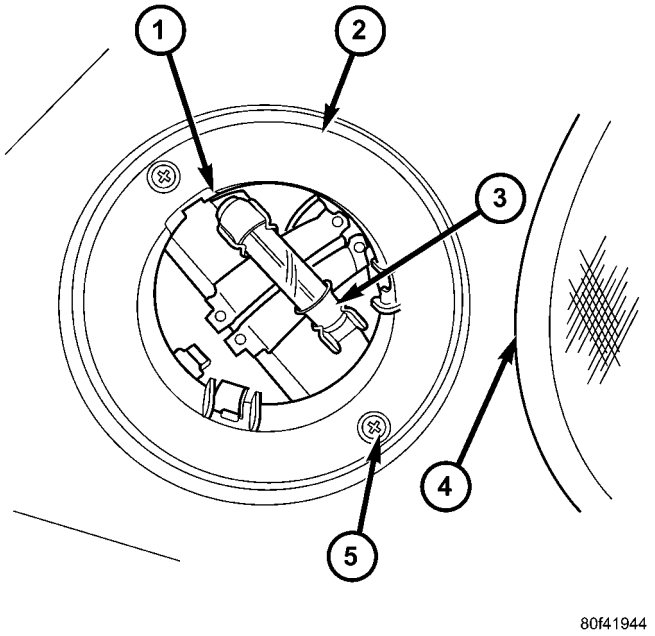

Fig. 1 Dome Lamp - Typical

1 - DOME LENS GUIDE
2 - DOME LAMP HOUSING
3 - DOME LAMP
4 - SPEAKER HOUSING
5 - SCREW (2)

INSTALLATION

NOTE: The dome lamp installation procedure is the same for both the right and left side dome lamps.

(1) Connect the wire harness connector to the dome lamp.

NOTE: The dome lamp housing is equipped with a locating tab that must be inserted into the slot in the speaker housing.

(2) Align the locating tab with the slot and position the dome lamp housing into the speaker housing (Fig. 2).
(3) Install the screws that secure the dome lamp housing to the speaker housing.

NOTE: The dome lamp lens is equipped with a locating tab that must be inserted into the slot in the dome lamp housing.

(4) Align the dome lamp lens locating tab with the slot in the dome lamp housing and press the lens into place.
(5) Reconnect the negative battery cable.

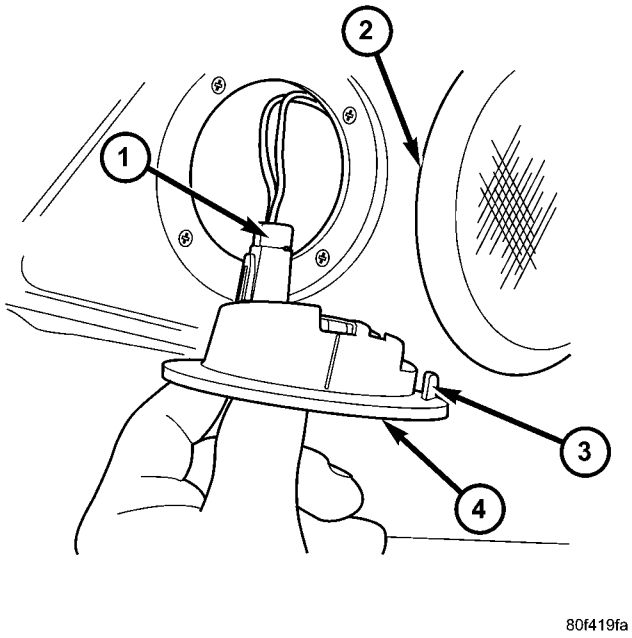

Fig. 2 Dome Lamp Housing

1 - WIRE HARNESS CONNECTOR
2 - SPEAKER
3 - LOCATING TAB
4 - DOME LAMP HOUSING

DOME LAMP

REMOVAL

(1) Disconnect the negative battery cable.
(2) Insert a small flat blade between the dome lamp housing and dome lamp lens. Carefully pry the lamp lens from the lamp housing
(3) Remove the dome lamp from the lamp terminals by pulling the lamp straight out.

INSTALLATION

(1) Install the dome lamp into the lamp terminals by pushing the lamp straight into the terminals.

NOTE: The dome lamp lens is equipped with a locating tab that must be inserted into the slot in the dome lamp housing.

(2) Align the dome lamp lens locating tab with the slot in the dome lamp housing and press the lens into place.
(3) Reconnect the negative battery cable.

DOOR AJAR SWITCH

DESCRIPTION

The door ajar switches, located in each door pillar, are a self-adjusting, spring loaded plunger. The other end of the switch is actuated by the hinge face of the door. The self adjusting feature of the switch plunger