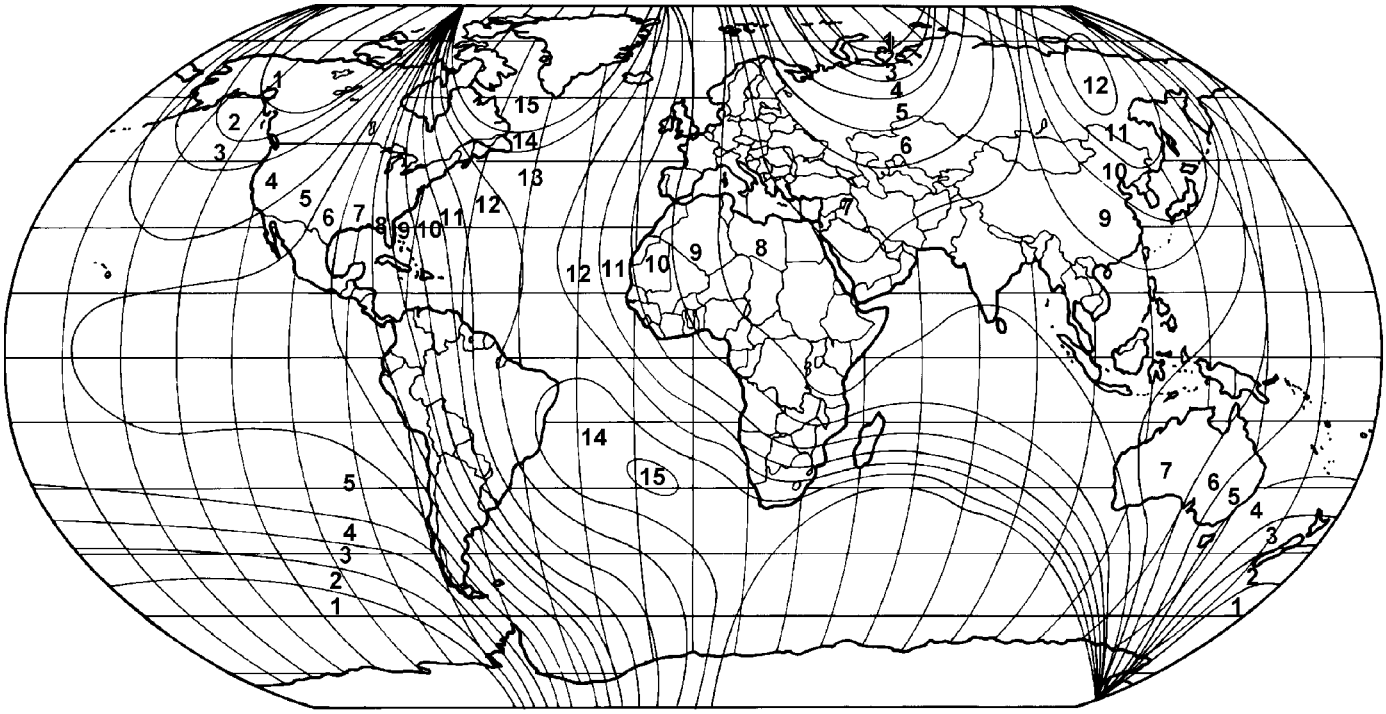

Fig. 1 Variance Settings

To set the variance: Turn the ignition to the ON position. Press and hold the center button for 3 to 6 seconds. The last variance zone number will be displayed. Each press of the center button will select a new variance zone. When the proper zone is selected, wait 5 seconds to resume normal operation.