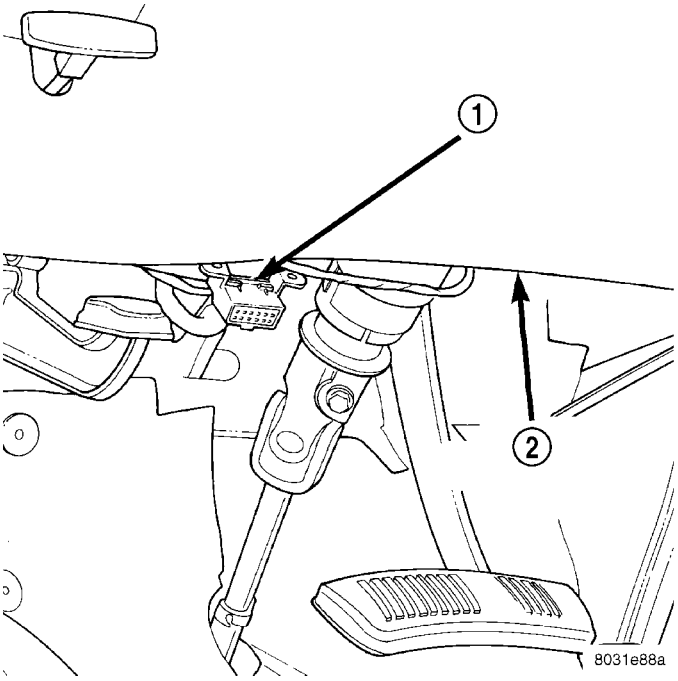

Fig. 5 16-Way Data Link Connector - Typical

1 - 16–WAY DATA LINK CONNECTOR
2 - BOTTOM OF INSTRUMENT PANEL

(3) Turn the ignition switch to the On position and exit the vehicle with the DRBIII® scan tool.

(4) Check to be certain that nobody is in the vehicle, then reconnect the battery negative cable.

(5) Using the DRBIII®, read and record the active (current) Diagnostic Trouble Code (DTC) data.

(6) Next, use the DRBIII® to read and record any stored (historical) DTC data.

(7) If any DTC is found in Step 5 or Step 6, refer to the appropriate diagnostic information.

(8) Use the DRBIII® to erase the stored DTC data. If any problems remain, the stored DTC data will not erase. Refer to the appropriate diagnostic information to diagnose any stored DTC that will not erase. If the stored DTC information is successfully erased, go to Step 9.

(9) Turn the ignition switch to the Off position for about fifteen seconds, and then back to the On position. Observe the airbag indicator in the instrument cluster. It should illuminate for six to eight seconds, and then go out. This indicates that the supplemental restraint system is functioning normally and that the repairs are complete. If the airbag indicator fails to light, or lights and stays on, there is still an active supplemental restraint system fault or malfunction. Refer to the appropriate diagnostic information to diagnose the problem.

SPECIFICATIONS

RESTRAINT SYSTEMS

TORQUE SPECIFICATIONS

DESCRIPTION	N·m	Ft. Lbs.	In. Lbs.
Airbag Control Module Mounting Screws	14	-	125
Rear Seat Upper Tether Anchor Mounting Screw	26	19	-
Steering Column Shroud Mounting Screws	2	-	18
Driver Airbag Trim Cover Retainer Nuts	7	-	60
Driver Airbag Mounting Screws	10	-	90
Front Seat Belt Retractor and Lower Anchor Mounting Screw	43	32	-
Front Seat Belt Turning Loop Mounting Screw	43	32	-
Front Seat Belt Buckle Lower Anchor Mounting Screw	43	32	-