WARNING: TO AVOID PERSONAL INJURY OR DEATH, DURING AND FOLLOWING ANY SEAT BELT OR CHILD RESTRAINT ANCHOR SERVICE, CAREFULLY INSPECT ALL SEAT BELTS, BUCKLES, MOUNTING HARDWARE, RETRACTORS, TETHER STRAPS, AND ANCHORS FOR PROPER INSTALLATION, OPERATION, OR DAMAGE. REPLACE ANY BELT THAT IS CUT, FRAYED, OR TORN. STRAIGHTEN ANY BELT THAT IS TWISTED. TIGHTEN ANY LOOSE FASTENERS. REPLACE ANY BELT THAT HAS A DAMAGED OR INOPERATIVE BUCKLE OR RETRACTOR. REPLACE ANY BELT THAT HAS A BENT OR DAMAGED LATCH PLATE OR ANCHOR PLATE. REPLACE ANY CHILD RESTRAINT ANCHOR OR THE UNIT TO WHICH THE ANCHOR IS INTEGRAL THAT HAS BEEN BENT OR DAMAGED. NEVER ATTEMPT TO REPAIR A SEAT BELT OR CHILD RESTRAINT COMPONENT. ALWAYS REPLACE DAMAGED OR FAULTY SEAT BELT AND CHILD RESTRAINT COMPONENTS WITH THE CORRECT, NEW AND UNUSED REPLACEMENT PARTS LISTED IN THE DAIMLERCHRYSLER MOPAR PARTS CATALOG.

(1) Position the upper tether anchor onto the rear cargo floor panel (Fig. 14).

(2) Install and tighten the screw that secures the upper tether anchor to the rear cargo floor panel just forward of the tailgate opening sill. Tighten the screw to 26 N·m (19 ft. lbs.).

CLOCKSPRING

DESCRIPTION

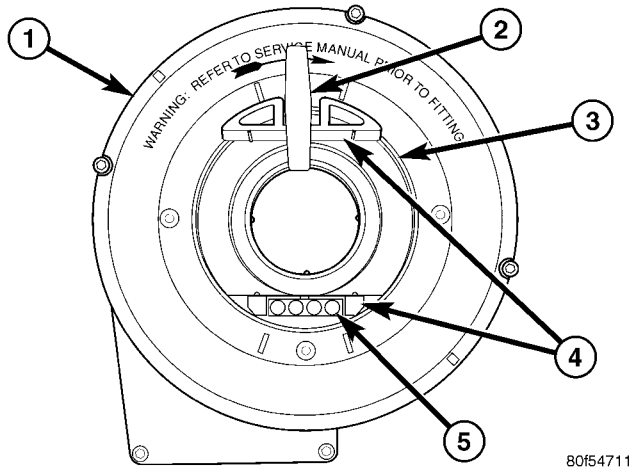

Fig. 15 Clockspring

1 - CASE
2 - LOCKING PIN
3 - ROTOR
4 - ROTOR FLAT (2)
5 - CLOCKSPRING PIGTAIL WIRES (NOT SHOWN)

The clockspring assembly is secured with two integral plastic latches onto the steering column lock housing near the top of the steering column behind the steering wheel (Fig. 15). The clockspring consists of a flat, round molded plastic case with a stubby tail that hangs below the steering column (Fig. 16). The tail contains two connector receptacles that face toward the instrument panel. Within the plastic case is a spool-like molded plastic rotor with a large exposed hub. The upper surface of the rotor hub has a large center hole, two large flats, and four short pigtail wires with connectors that face toward the steering wheel.