CAUTION: Be certain that the screws that secure the steering wheel puller to the steering wheel are fully engaged in the steering wheel armature without passing through the steering wheel and damaging the clockspring.

(4) Remove the steering wheel from the steering column. (Refer to 19 - STEERING/COLUMN/STEERING WHEEL - REMOVAL).

(5) Remove the steering column opening cover from the instrument panel. (Refer to 23 - BODY/INSTRUMENT PANEL/STEERING COLUMN OPENING COVER - REMOVAL).

(6) From below the steering column, remove the two screws that secure the lower steering column shroud to the upper shroud (Fig. 18).

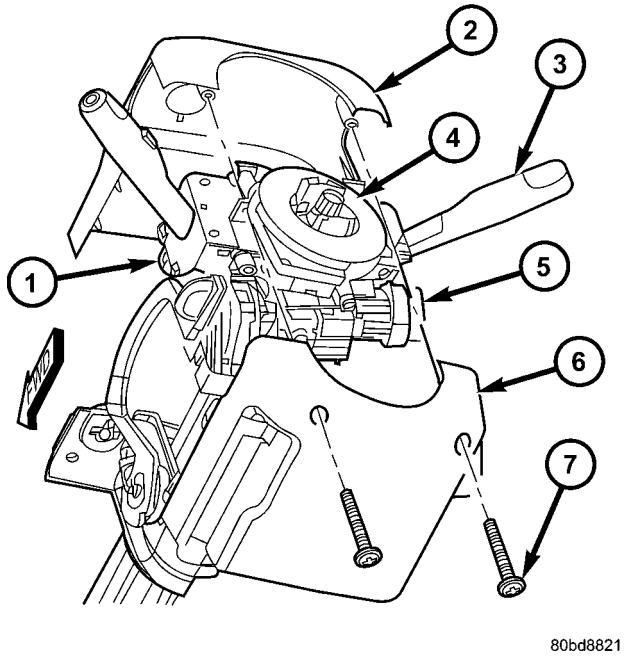

Fig. 18 Steering Column Shrouds Remove/Install

1 - LEFT MULTI-FUNCTION SWITCH
2 - UPPER SHROUD
3 - RIGHT MULTI-FUNCTION SWITCH
4 - CLOCKSPRING
5 - IGNITION LOCK CYLINDER HOUSING
6 - LOWER SHROUD
7 - SCREW (2)

(7) If the vehicle is equipped with the optional tilt steering column, move the tilt steering column to the fully lowered position and leave the tilt release lever in the released (down) position.

(8) Using hand pressure, push gently inward on both sides of the upper shroud near the parting line between the upper and lower shrouds to release the snap features that secure it to the lower shroud.

(9) Remove both the upper and lower shrouds from the steering column.

(10) Disconnect the two body wire harness connectors for the clockspring from the two connector receptacles below the steering column on the back of the clockspring housing (Fig. 19).

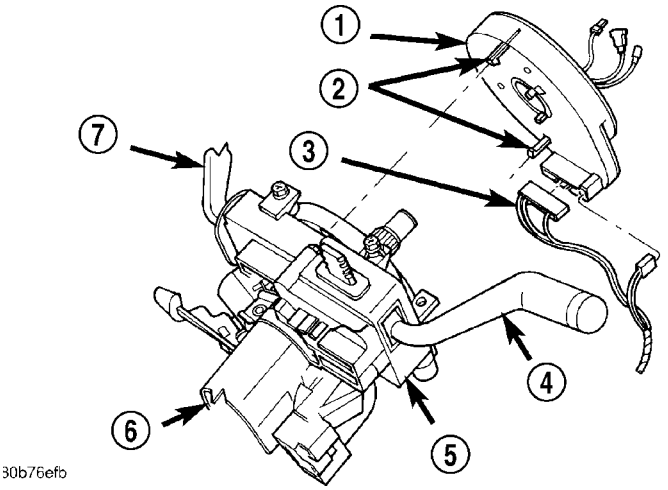

Fig. 19 Clockspring Remove/Install - Typical

1 - CLOCKSPRING
2 - LATCHES
3 - BODY WIRE HARNESS
4 - LEFT MULTI-FUNCTION SWITCH
5 - SWITCH HOUSING
6 - STEERING COLUMN
7 - RIGHT MULTI-FUNCTION SWITCH

(11) Using a small screwdriver, gently pry both plastic latches that secure the clockspring away from the steering column upper housing far enough to pull the clockspring away from the upper housing.

NOTE: If the clockspring plastic latches are broken, be certain to remove the broken pieces from the steering column upper housing.

(12) Remove the clockspring from the steering column upper housing. The clockspring cannot be repaired. It must be replaced if faulty or damaged, or if the driver airbag has been deployed.

(13) If the removed clockspring is to be reused, be certain to secure the clockspring rotor to the clockspring case to maintain clockspring centering until it is reinstalled on the steering column. If clockspring centering is not maintained, the clockspring must be centered again before it is reinstalled. (Refer to 8 - ELECTRICAL/RESTRAINTS/CLOCKSPRING - STANDARD PROCEDURE - CLOCKSPRING CENTERING).

INSTALLATION

The clockspring cannot be repaired. It must be replaced if faulty or damaged, or if the driver airbag has been deployed.

If the clockspring is not properly centered in relation to the steering wheel, steering shaft and steering gear, it may be damaged. (Refer to 8 - ELECTRICAL/RESTRAINTS/CLOCKSPRING - STANDARD PROCEDURE - CLOCKSPRING CENTERING). Service replacement clocksprings are shipped pre-centered and with a plastic locking pin