(4) Carefully position the driver airbag in the steering wheel. Be certain that the clockspring pigtail wires and the steering wheel wire harness in the steering wheel hub area are not pinched between the driver airbag and the steering wheel armature.

(5) From the underside of the steering wheel, install and tighten the two screws that secure the driver airbag to the steering wheel armature. Tighten the screws to 10 N·m (90 in. lbs.).

(6) Do not reconnect the battery negative cable at this time. The supplemental restraint system verification test procedure should be performed following service of any supplemental restraint system component. (Refer to 8 - ELECTRICAL/RESTRAINTS - STANDARD PROCEDURE - VERIFICATION TEST).

FRONT SEAT BELT & RETRACTOR

REMOVAL

WARNING: TO AVOID PERSONAL INJURY OR DEATH, DURING AND FOLLOWING ANY SEAT BELT OR CHILD RESTRAINT ANCHOR SERVICE, CAREFULLY INSPECT ALL SEAT BELTS, BUCKLES, MOUNTING HARDWARE, RETRACTORS, TETHER STRAPS, AND ANCHORS FOR PROPER INSTALLATION, OPERATION, OR DAMAGE. REPLACE ANY BELT THAT IS CUT, FRAYED, OR TORN. STRAIGHTEN ANY BELT THAT IS TWISTED. TIGHTEN ANY LOOSE FASTENERS. REPLACE ANY BELT THAT HAS A DAMAGED OR INOPERATIVE BUCKLE OR RETRACTOR. REPLACE ANY BELT THAT HAS A BENT OR DAMAGED LATCH PLATE OR ANCHOR PLATE. REPLACE ANY CHILD RESTRAINT ANCHOR OR THE UNIT TO WHICH THE ANCHOR IS INTEGRAL THAT HAS BEEN BENT OR DAMAGED. NEVER ATTEMPT TO REPAIR A SEAT BELT OR CHILD RESTRAINT COMPONENT. ALWAYS REPLACE DAMAGED OR FAULTY SEAT BELT AND CHILD RESTRAINT COMPONENTS WITH THE CORRECT, NEW AND UNUSED REPLACEMENT PARTS LISTED IN THE DAIMLERCHRYSLER MOPAR PARTS CATALOG.

(1) Move the front seat to its most forward position for easiest access to the lower seat belt anchor screw and retractor and the lower sport bar.

(2) Unsnap and lift the trim cover from the front seat belt turning loop to access the screw that secures the turning loop to the height adjuster near the top on the upper sport bar (Fig. 27).

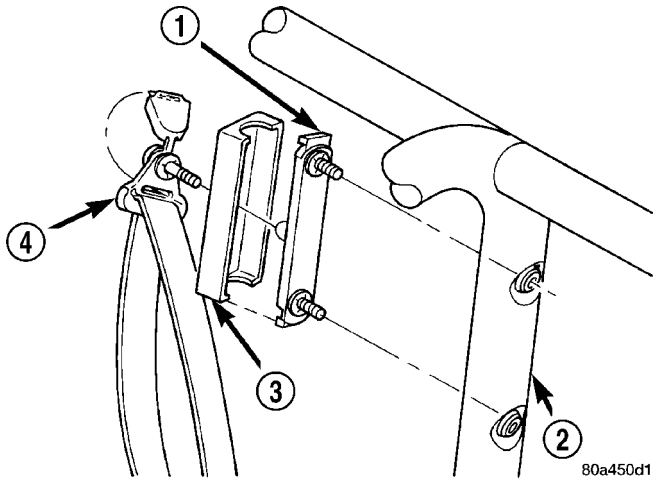

Fig. 27 Front Seat Belt Turning Loop

1 - ADJUSTER
2 - SPORT BAR
3 - TRIM COVER
4 - TURNING LOOP

(3) Remove the screw that secures the shoulder belt turning loop to the adjuster.

(4) Remove the shoulder belt turning loop and the support/guide washer from the adjuster.

(5) Remove the screw that secures the retractor and lower seat belt anchor to the lower sport bar (Fig. 28).

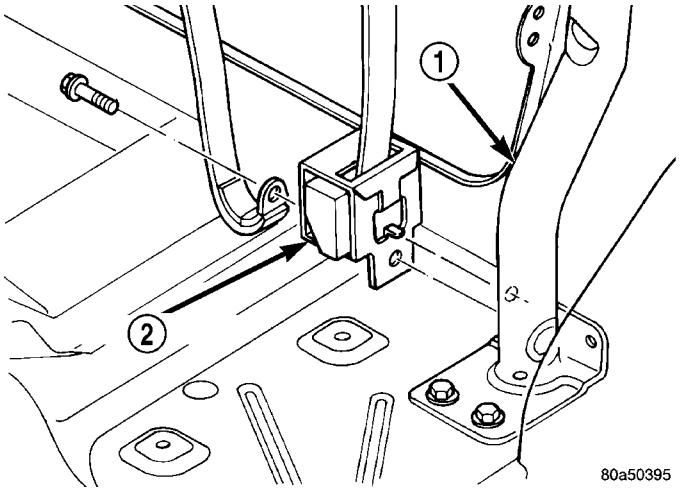

Fig. 28 Front Seat Belt and Retractor - Typical

1 - SPORT BAR
2 - RETRACTOR

(6) Remove the front seat belt and retractor from the lower sport bar.