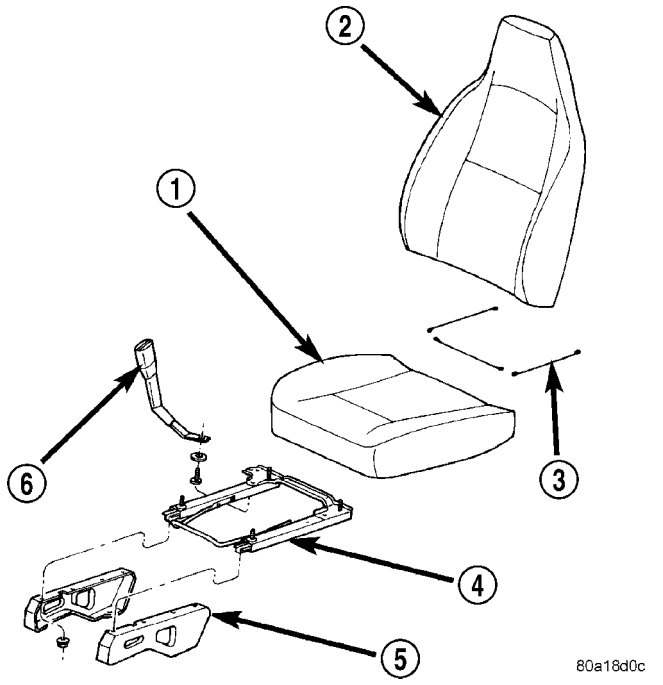


*Fig. 30 Seat Belt Buckle*

1 - SEAT CUSHION
2 - SEAT BACK
3 - TRIM ATTACHMENT WIRES
4 - SEAT TRACK
5 - SEAT RISER
6 - SEATBELT BUCKLE

(3) Remove the front seat belt buckle from the front seat track bracket.

## INSTALLATION

The seat belt buckle on the driver's side front seat for all models also includes a seat belt switch. The seat belt buckle on the driver's side front seat for all models also includes a seat belt switch. (Refer to 8 - ELECTRICAL/RESTRAINTS/SEAT BELT SWITCH - DESCRIPTION).

**WARNING: TO AVOID PERSONAL INJURY OR DEATH, DURING AND FOLLOWING ANY SEAT BELT OR CHILD RESTRAINT ANCHOR SERVICE, CAREFULLY INSPECT ALL SEAT BELTS, BUCKLES, MOUNTING HARDWARE, RETRACTORS, TETHER STRAPS, AND ANCHORS FOR PROPER INSTALLATION, OPERATION, OR DAMAGE. REPLACE ANY BELT THAT IS CUT, FRAYED, OR TORN. STRAIGHTEN ANY BELT THAT IS TWISTED. TIGHTEN ANY LOOSE FASTENERS. REPLACE ANY BELT THAT HAS A DAMAGED OR INOPERATIVE BUCKLE OR RETRACTOR. REPLACE ANY BELT THAT HAS A BENT OR DAMAGED LATCH PLATE OR ANCHOR PLATE. REPLACE ANY CHILD RESTRAINT ANCHOR OR THE UNIT TO WHICH THE ANCHOR IS INTEGRAL THAT HAS BEEN BENT OR DAMAGED. NEVER ATTEMPT TO REPAIR A SEAT BELT OR CHILD RESTRAINT COMPONENT. ALWAYS REPLACE DAMAGED OR FAULTY SEAT BELT AND CHILD RESTRAINT COMPONENTS WITH THE CORRECT, NEW AND UNUSED REPLACEMENT PARTS LISTED IN THE DAIMLERCHRYSLER MOPAR PARTS CATALOG.**

(1) Position the front seat belt buckle lower anchor to the bracket on the rear of the upper inner front seat track.

(2) Install and tighten the screw that secures the front seat belt buckle lower anchor to the front seat track bracket (Fig. 30). Tighten the screw to 43 N·m (32 ft. lbs.).

(3) On the driver side only, reconnect the seat belt switch pigtail wire connector to the body wire harness connector for the seat belt switch (Fig. 29).

# PASSENGER AIRBAG

## DESCRIPTION

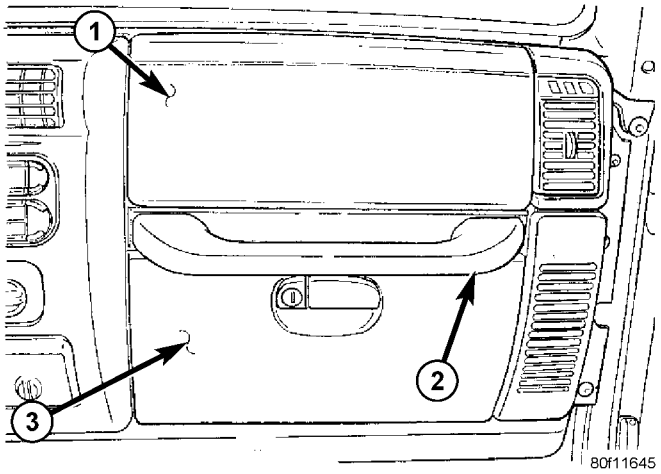


*Fig. 31 Passenger Airbag Door*

1 - PASSENGER AIRBAG DOOR
2 - GRAB HANDLE
3 - GLOVE BOX DOOR

The rearward facing surface of the injection molded, thermoplastic passenger airbag door is the most visible part of the passenger airbag (Fig. 31). The passenger airbag door is located above the glove box opening on the instrument panel in front of the front seat passenger seating position. The passenger airbag door also serves as a trim cover and has two flanges and a stamped metal bracket that secure it to the instrument panel structural support. The upper flange is secured with screws to the top of the instrument panel structural support and the lower flange to the upper glove box opening reinforcement. A stamped metal passenger airbag door hinge bracket is secured to the back of the instrument panel structural support with two screws.

Located behind the passenger airbag door within the instrument panel is the passenger airbag unit. The passenger airbag unit has an upper rear bracket