WARNING: TO AVOID PERSONAL INJURY OR DEATH, THE PASSENGER AIRBAG DOOR MUST NEVER BE PAINTED. REPLACEMENT AIRBAG DOORS ARE SERVICED IN THE ORIGINAL COLORS. PAINT MAY CHANGE THE WAY IN WHICH THE MATERIAL OF THE AIRBAG DOOR RESPONDS TO AN AIRBAG DEPLOYMENT. FAILURE TO OBSERVE THIS WARNING COULD RESULT IN OCCUPANT INJURIES UPON AIRBAG DEPLOYMENT.

(1) Install two new passenger airbag door bracket J-nuts onto the instrument panel structural support (Fig. 34). These J-nuts must be replaced with new parts whenever the passenger airbag door bracket screws are removed.

(2) Position the passenger airbag door onto the instrument panel and align the mounting holes in each end of the airbag door bracket with the J-nuts on the instrument panel structural support.

(3) Install and tighten the two screws that secure the passenger airbag door bracket to the instrument panel structural support. Tighten the screws to 12 N·m (105 in. lbs.).

(4) Install and tighten the five screws that secure the lower flange of the passenger airbag door to the upper glove box opening reinforcement. Tighten the screws to 2 N·m (20 in. lbs.).

(5) Reinstall the grab handle bezel onto the instrument panel. (Refer to 23 - BODY/INSTRUMENT PANEL/GRAB HANDLE BEZEL - INSTALLATION).

(6) Install and tighten the five screws that secure the upper flange of the passenger airbag door to the top of the instrument panel structural support (Fig. 33). Tighten the screws to 2 N·m (20 in. lbs.).

(7) Reinstall the passenger airbag onto the instrument panel. (Refer to 8 - ELECTRICAL/RESTRAINTS/PASSENGER AIRBAG - INSTALLATION).

PASSENGER AIRBAG ON / OFF SWITCH

DESCRIPTION

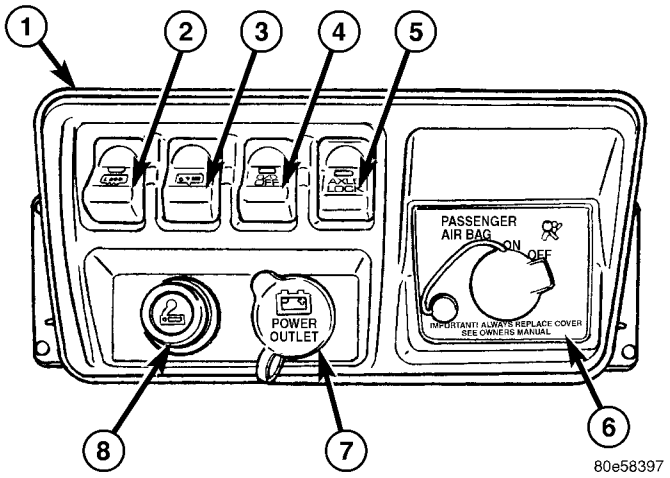

Fig. 35 Accessory Switch Bezel

1 - ACCESSORY SWITCH BEZEL
2 - REAR WINDOW DEFOGGER SWITCH (HARDTOP ONLY)
3 - REAR WIPER/WASHER SWITCH (HARDTOP ONLY)
4 - OVERDRIVE-OFF SWITCH (AUTOMATIC TRANSMISSION ONLY)
5 - AXLE LOCK SWITCH (OFF ROAD PACKAGE ONLY)
6 - PASSENGER AIRBAG ON/OFF SWITCH (WITHOUT REAR SEAT ONLY)
7 - ACCESSORY POWER OUTLET
8 - CIGAR LIGHTER

The passenger airbag on/off switch is standard equipment on all versions of this model that are equipped with the dual front airbag system, but are not equipped with a rear seat (Fig. 35). This switch is a two-position, resistor multiplexed switch with a single integral red Light-Emitting Diode (LED), and a non-coded key cylinder-type actuator. The switch is located on the passenger side end of the accessory switch bezel near the bottom of the instrument cluster center bezel to make the Off indicator visible to the front passenger seat occupant. When the switch is in its installed position, the only component visible through the dedicated opening of the accessory switch bezel is the key cylinder actuator. A small, tethered, molded plastic cap fits into the key cylinder actuator hole when the switch is not being used. The switch nomenclature and the Off indicator lens are integral to the accessory switch bezel. The text of the “Off” indicator is illuminated in amber when the Off position is selected with the ignition switch in the On position, while the On position of the switch is designated by text imprinted upon the accessory switch bezel, but is not illuminated. The remainder of the switch is concealed behind the accessory switch bezel.

The passenger airbag on/off switch housing is constructed of molded plastic and has three integral mounting tabs (Fig. 36). These mounting tabs are