airbag on/off switch to the back of the bezel (Fig. 37).

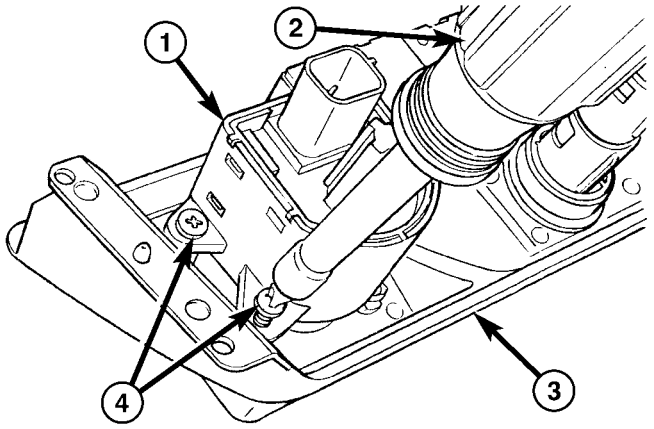

Fig. 37 Passenger Airbag On/Off Switch Remove/ Install

1 - PASSENGER AIRBAG ON/OFF SWITCH
2 - SCREW DRIVER
3 - ACCESSORY SWITCH BEZEL
4 - SCREW (3)

(4) Remove the passenger airbag on/off switch from the accessory switch bezel.

INSTALLATION

WARNING: TO AVOID PERSONAL INJURY OR DEATH, ON VEHICLES EQUIPPED WITH AIRBAGS, DISABLE THE SUPPLEMENTAL RESTRAINT SYSTEM BEFORE ATTEMPTING ANY STEERING WHEEL, STEERING COLUMN, AIRBAG, OR INSTRUMENT PANEL COMPONENT DIAGNOSIS OR SERVICE. DISCONNECT AND ISOLATE THE BATTERY NEGATIVE (GROUND) CABLE, THEN WAIT TWO MINUTES FOR THE SYSTEM CAPACITOR TO DISCHARGE BEFORE PERFORMING FURTHER DIAGNOSIS OR SERVICE. THIS IS THE ONLY SURE WAY TO DISABLE THE SUPPLEMENTAL RESTRAINT SYSTEM. FAILURE TO TAKE THE PROPER PRECAUTIONS COULD RESULT IN ACCIDENTAL AIRBAG DEPLOYMENT.

(1) Position the passenger airbag on/off switch to the back of the accessory switch bezel (Fig. 37).

(2) Install and tighten the three screws that secure the passenger airbag on/off switch to the back of the accessory switch bezel. Tighten the screws to 2 N·m (20 in. lbs.).

(3) Reinstall the passenger airbag on/off switch and accessory switch bezel unit to the instrument panel. (Refer to 23 - BODY/INSTRUMENT PANEL/ ACCESSORY SWITCH BEZEL - INSTALLATION).

(4) Do not reconnect the battery negative cable at this time. The supplemental restraint system verification test procedure should be performed following service of any supplemental restraint system component. (Refer to 8 - ELECTRICAL/RESTRAINTS - STANDARD PROCEDURE - VERIFICATION TEST).

REAR SEAT BELT & RETRACTOR

REMOVAL

WARNING: TO AVOID PERSONAL INJURY OR DEATH, DURING AND FOLLOWING ANY SEAT BELT OR CHILD RESTRAINT ANCHOR SERVICE, CAREFULLY INSPECT ALL SEAT BELTS, BUCKLES, MOUNTING HARDWARE, RETRACTORS, TETHER STRAPS, AND ANCHORS FOR PROPER INSTALLATION, OPERATION, OR DAMAGE. REPLACE ANY BELT THAT IS CUT, FRAYED, OR TORN. STRAIGHTEN ANY BELT THAT IS TWISTED. TIGHTEN ANY LOOSE FASTENERS. REPLACE ANY BELT THAT HAS A DAMAGED OR INOPERATIVE BUCKLE OR RETRACTOR. REPLACE ANY BELT THAT HAS A BENT OR DAMAGED LATCH PLATE OR ANCHOR PLATE. REPLACE ANY CHILD RESTRAINT ANCHOR OR THE UNIT TO WHICH THE ANCHOR IS INTEGRAL THAT HAS BEEN BENT OR DAMAGED. NEVER ATTEMPT TO REPAIR A SEAT BELT OR CHILD RESTRAINT COMPONENT. ALWAYS REPLACE DAMAGED OR FAULTY SEAT BELT AND CHILD RESTRAINT COMPONENTS WITH THE CORRECT, NEW AND UNUSED REPLACEMENT PARTS LISTED IN THE DAIMLERCHRYSLER MOPAR PARTS CATALOG.

(1) Slide both rear seat belt buckle units between the seat cushion and seat back into the cargo area.

(2) Lift the rear seat back release lever and fold the rear seat back forward, then tumble the folded rear seat cushion and back unit forward against the backs of the two front bucket seats.

(3) Remove the screw that secures the lower sear belt anchor to the inner rear wheel house panel (Fig. 38).