(3) Tumble the folded rear seat cushion and back unit rearward onto the rear cargo floor panel.

(4) Slide both rear seat belt buckle units between the seat cushion and the seat back.

(5) Unfold the rear seat back from the seat cushion until the seat back latch is fully engaged.

SEAT BELT SWITCH

DESCRIPTION

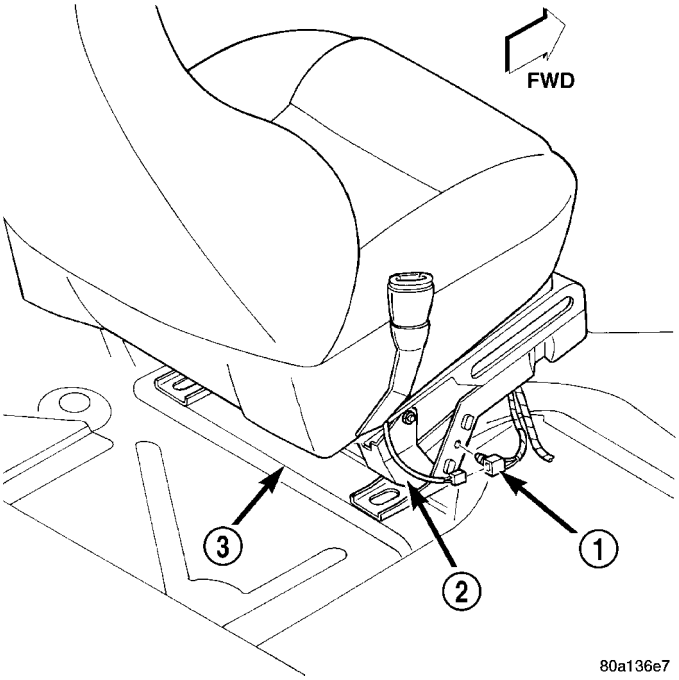

Fig. 41 Seat Belt Switch

1 - WIRE HARNESS CONNECTOR
2 - DRIVER SEAT RISER
4 - FLOOR PANEL

The seat belt switch is a small, normally closed, single pole, single throw, leaf contact, momentary switch. Only one seat belt switch is installed in the vehicle, and it is integral to the buckle of the driver side front seat belt buckle-half, located on the inboard side of the driver side front seat track (Fig. 41). The seat belt switch is connected to the vehicle electrical system through a two-wire pigtail wire and connector on the seat belt buckle-half, which is connected to a wire harness connector and take out of the body wire harness routed along the left side of the body sill in the passenger compartment.

The seat belt switch cannot be adjusted or repaired and, if faulty or damaged, the entire driver side front seat belt buckle-half unit must be replaced.

OPERATION

The seat belt switch is designed to control a path to ground for the seat belt switch sense input of the ElectroMechanical Instrument Cluster (EMIC). When the driver side front seat belt tip-half is inserted into the seat belt buckle, the switch opens the path to ground; and, when the driver side front seat belt tip-half is removed from the seat belt buckle, the switch closes the ground path. The switch is actuated by the latch mechanism within the seat belt buckle.

The seat belt switch is connected in series between ground and the seat belt switch sense input of the instrument cluster. The seat belt switch receives ground at all times through its pigtail wire connection to the body wire harness from another take out of the body wire harness. An eyelet terminal connector on that ground take out is secured beneath a ground screw on the left cowl side inner panel, beneath the instrument panel. The seat belt switch may de diagnosed using conventional diagnostic tools and methods.

DIAGNOSIS AND TESTING - SEAT BELT SWITCH

Refer to the appropriate wiring information. The wiring information includes wiring diagrams, proper wire and connector repair procedures, details of wire harness routing and retention, connector pin-out information and location views for the various wire harness connectors, splices and grounds.

WARNING: TO AVOID PERSONAL INJURY OR DEATH, ON VEHICLES EQUIPPED WITH AIRBAGS, DISABLE THE SUPPLEMENTAL RESTRAINT SYSTEM BEFORE ATTEMPTING ANY STEERING WHEEL, STEERING COLUMN, AIRBAG, OR INSTRUMENT PANEL COMPONENT DIAGNOSIS OR SERVICE. DISCONNECT AND ISOLATE THE BATTERY NEGATIVE (GROUND) CABLE, THEN WAIT TWO MINUTES FOR THE SYSTEM CAPACITOR TO DISCHARGE BEFORE PERFORMING FURTHER DIAGNOSIS OR SERVICE. THIS IS THE ONLY SURE WAY TO DISABLE THE SUPPLEMENTAL RESTRAINT SYSTEM. FAILURE TO TAKE THE PROPER PRECAUTIONS COULD RESULT IN ACCIDENTAL AIRBAG DEPLOYMENT.

(1) Disconnect and isolate the battery negative cable. Disconnect the seat belt switch pigtail wire connector from the body wire harness connector for the seat belt switch on the floor near the driver side front seat belt buckle-half anchor. Check for continuity between the seat belt switch sense circuit and the ground circuit cavities of the seat belt switch pigtail wire connector. There should be continuity with the seat belt unbuckled, and no continuity with the seat belt buckled. If OK, go to Step 2. If not OK, replace the faulty front seat belt buckle-half assembly.

(2) Check for continuity between the ground circuit cavity in the body wire harness connector for the seat belt switch and a good ground. There should be