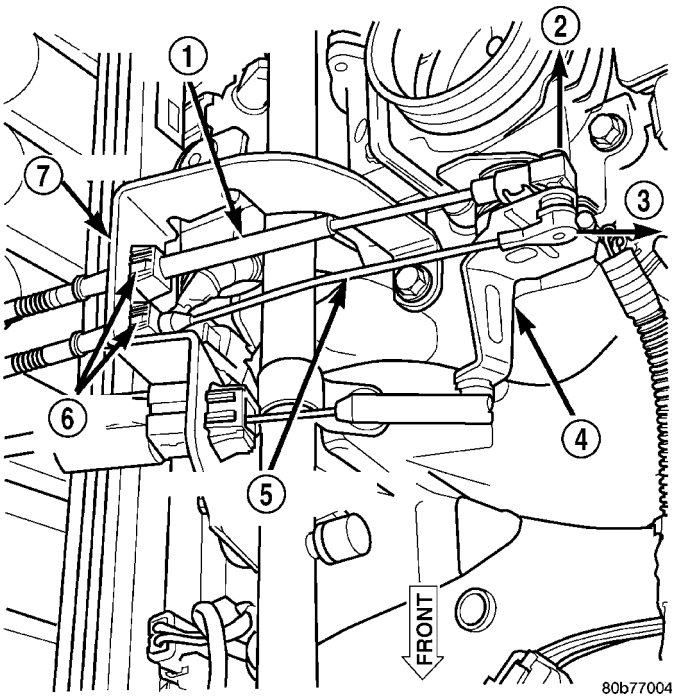

Fig. 2

INSTALLATION

2.4L

(1) Install end of cable to speed control servo. Refer to Servo Removal/Installation.

(2) Slide speed control cable plastic mount into throttle body bracket.

(3) Install speed control cable connector onto throttle body bellcrank pin (push rearward to snap into location).

(4) Slide throttle (accelerator) cable plastic mount into throttle body bracket. Continue sliding until cable release tab is aligned to hole in throttle body mounting bracket.

(5) While holding throttle to wide open position, place throttle cable pin into throttle body bellcrank.

(6) Connect negative battery cable at battery.

(7) Before starting engine, operate accelerator pedal to check for any binding.

4.0L

(1) Attach end of cable to speed control servo. Refer to Servo Removal/Installation.

(2) Install cable into cable bracket (snaps in).

(3) Install cable connector at throttle body bellcrank pin (snaps on).

(4) Clip cable to cable guide at valve cover.

(5) Connect negative battery cable to battery.

(6) Before starting engine, operate accelerator pedal to check for any binding.

SERVO

DESCRIPTION

The servo unit consists of a solenoid valve body, and a vacuum chamber. The solenoid valve body contains three solenoids:

- Vacuum
- Vent
- Dump

The vacuum chamber contains a diaphragm with a cable attached to control the throttle linkage.

OPERATION

The Powertrain Control Module (PCM) controls the solenoid valve body. The solenoid valve body controls the application and release of vacuum to the diaphragm of the vacuum servo. The servo unit cannot be repaired and is serviced only as a complete assembly.

Power is supplied to the servo's by the PCM through the brake switch. The PCM controls the ground path for the vacuum and vent solenoids.

The dump solenoid is energized anytime it receives power. If power to the dump solenoid is interrupted, the solenoid dumps vacuum in the servo. This provides a safety backup to the vent and vacuum solenoids.

The vacuum and vent solenoids must be grounded at the PCM to operate. When the PCM grounds the vacuum servo solenoid, the solenoid allows vacuum to enter the servo and pull open the throttle plate using the cable. When the PCM breaks the ground, the solenoid closes and no more vacuum is allowed to enter the servo. The PCM also operates the vent solenoid via ground. The vent solenoid opens and closes a passage to bleed or hold vacuum in the servo as required.

The PCM duty cycles the vacuum and vent solenoids to maintain the set speed, or to accelerate and decelerate the vehicle. To increase throttle opening, the PCM grounds the vacuum and vent solenoids. To decrease throttle opening, the PCM removes the grounds from the vacuum and vent solenoids. When the brake is released, if vehicle speed exceeds 30 mph to resume, 35 mph to set, and the RES/ACCEL switch has been depressed, ground for the vent and vacuum circuits is restored.

REMOVAL

(1) Disconnect negative battery cable at battery.

(2) Disconnect vacuum line at servo (Fig. 3).

(3) Disconnect electrical connector at servo.

(4) Disconnect servo cable at throttle body. Refer to Cable Removal/Installation.

(5) Remove three bracket mounting bolts (Fig. 3).

(6) Remove 2 mounting nuts holding servo cable sleeve to bracket (Fig. 4).