(7) Pull speed control cable sleeve and servo away from servo mounting bracket to expose cable retaining clip (Fig. 4) and remove clip. Note: The servo mounting bracket displayed in (Fig. 4) is a typical bracket and may/may not be applicable to this model vehicle.

(8) Remove servo from mounting bracket. While removing, note orientation of servo to bracket.

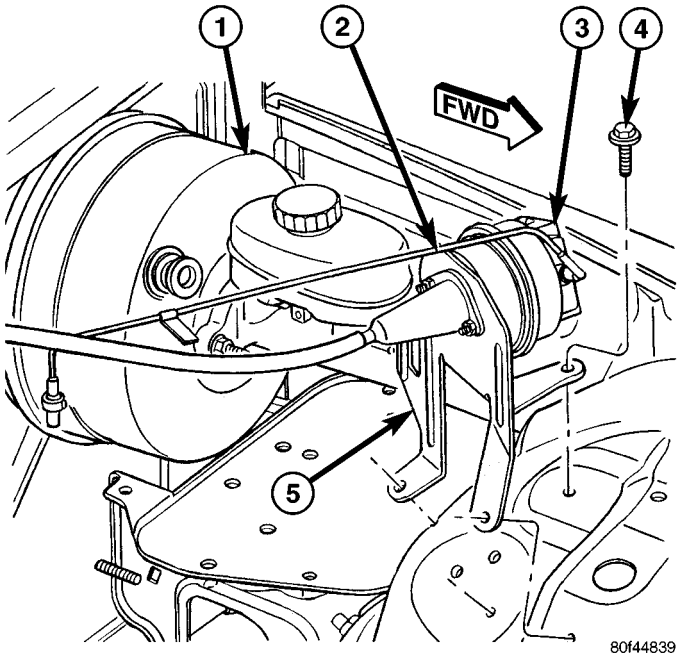

Fig. 3 SPEED CONTROL SERVO LOCATION

1 - BRAKE POWER BOOSTER
2 - VACUUM LINE
3 - SERVO
4 - BRACKET BOLTS (3)
5 - SERVO MOUNTING BRACKET

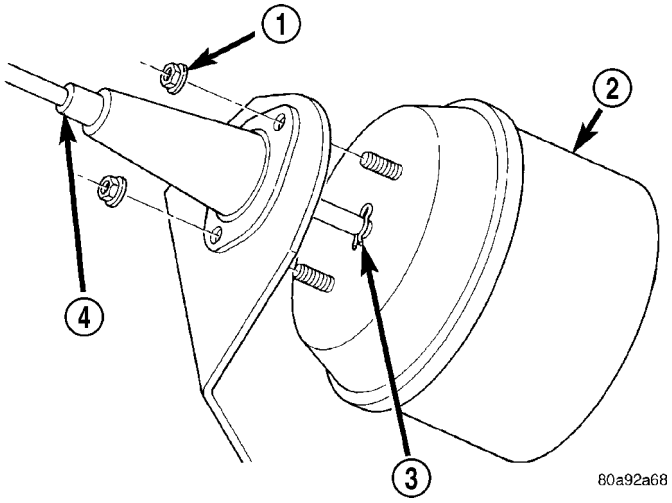

Fig. 4 SERVO CABLE CLIP REMOVE/INSTALL - TYPICAL

1 - SERVO MOUNTING NUTS (2)
2 - SERVO
3 - CABLE RETAINING CLIP
4 - SERVO CABLE AND SLEEVE

INSTALLATION

(1) Position servo to mounting bracket.

(2) Align hole in cable connector with hole in servo pin. Install cable-to-servo retaining clip.

(3) Insert servo mounting studs through holes in servo mounting bracket.

(4) Install servo mounting nuts and tighten to 8.5 N·m (75 in. lbs.).

(5) Connect vacuum line at servo.

(6) Connect electrical connector at servo.

(7) Connect servo cable to throttle body. Refer to Cable Removal/Installation.

(8) Connect negative battery cable to battery.

(9) Before starting engine, operate accelerator pedal to check for any binding.

SWITCH

DESCRIPTION

There are two separate switch pods that operate the speed control system. The steering-wheel-mounted switches use multiplexed circuits to provide inputs to the PCM for ON, OFF, RESUME, ACCELERATE, SET, DECEL and CANCEL modes. Refer to the owner's manual for more information on speed control switch functions and setting procedures.

The individual switches cannot be repaired. If one switch fails, the entire switch module must be replaced.

OPERATION

When speed control is selected by depressing the ON, OFF switch, the PCM allows a set speed to be stored in its RAM for speed control. To store a set