piston (Fig. 4). With the diaphragm unseated, washer fluid is allowed to flow toward the front washer nozzle. When the front washer pump stops operating, the spring pressure on the piston seats the diaphragm over the sump well in the valve and fluid flow in either direction within the front washer plumbing is prevented. The front check valve cannot be adjusted or repaired and, if faulty or damaged, it must be replaced.

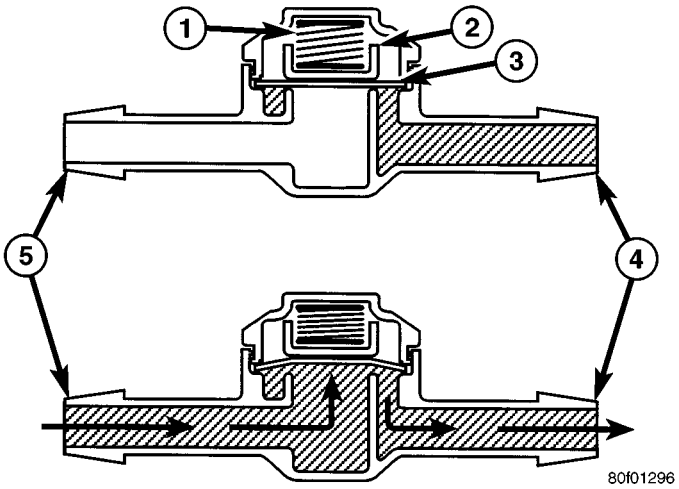

Fig. 4 Front Check Valve

1 - SPRING
2 - PISTON
3 - DIAPHRAGM
4 - TO WASHER NOZZLE
5 - FROM WASHER PUMP

REMOVAL

(1) Unlatch, open and support the hood.

(2) Locate the front check valve in the washer supply hose for the front washer nozzle. The check valve is installed in the washer supply hose about 5 centimeters (2 inches) from the front washer nozzle nipple near the rear hood panel reinforcement (Fig. 5).

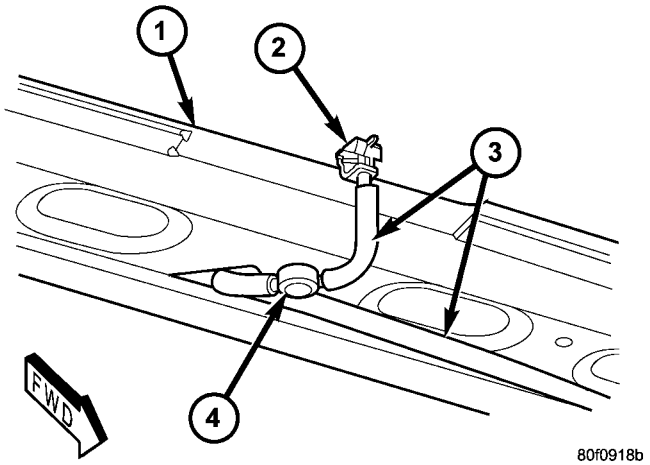

Fig. 5 Front Check Valve Remove/Install

1 - HOOD REAR REINFORCEMENT
2 - FRONT WASHER NOZZLE
3 - WASHER HOSE
4 - FRONT CHECK VALVE

(3) Disconnect the washer supply hose for the front washer nozzle from the barbed outlet nipple on the front washer system check valve. A small quantity of washer fluid may drain from the disconnected hose.

(4) Disconnect the washer supply hose for the reservoir from the barbed inlet nipple of the front check valve. Either install a temporary plug in the washer supply hose for the reservoir or secure the loose end of this hose at a point higher than the washer reservoir to prevent the contents of the washer reservoir from draining through this hose.

(5) Remove the front check valve from the engine compartment.

INSTALLATION

(1) Position the front check valve in the engine compartment.

(2) With the directional arrow on the check valve pointed in the direction of the system flow, reconnect the washer supply hose from the reservoir to the barbed inlet nipple of the front check valve (Fig. 6).