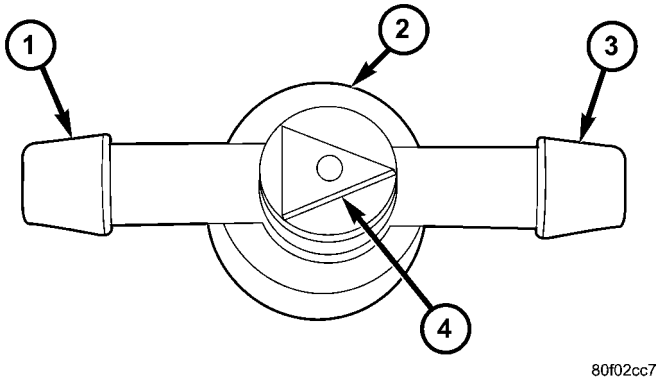

Fig. 6 Check Valve

1 - INLET NIPPLE
2 - CHECK VALVE
3 - OUTLET NIPPLE
4 - FLOW DIRECTION ARROW

(3) Reconnect the washer supply hose from the front washer nozzle to the barbed outlet nipple of the front check valve.

(4) Check that the washer supply hoses are properly routed and are not pinched.

(5) Close and latch the hood.

FRONT WASHER HOSES / TUBES

DESCRIPTION

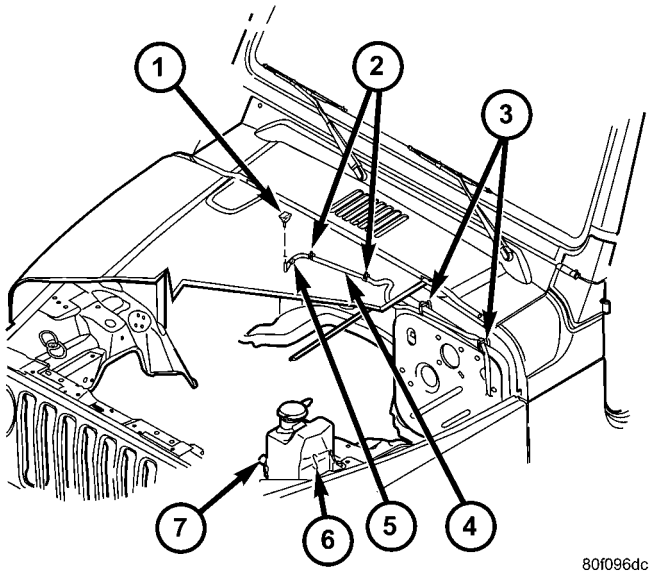

Fig. 7 Front Washer Plumbing

1 - FRONT WASHER NOZZLE
2 - CLIP (2)
3 - HARNESS CLIP (2)
4 - WASHER SUPPLY HOSE
5 - FRONT CHECK VALVE
6 - WASHER RESERVOIR
7 - FRONT WASHER PUMP/MOTOR

The front washer plumbing consists of a small diameter rubber front washer hose that is routed from the barbed outlet nipple of the electric front washer pump/motor unit on the washer reservoir around the front of the reservoir to the top of the left front fender wheel house. The hose is secured by six plastic tie wraps to the headlamp and dash wire harness and routed with the harness to the top dash panel near the center of the engine compartment (Fig. 7).

Near the center of the dash panel the front washer hose is routed to the inner rear hood panel reinforcement. Two molded plastic routing clips secure the front washer hose to the underside of the hood panel reinforcement. The front washer hose is connected to the barbed inlet nipple of the front washer check valve near the inner center hood panel reinforcement. A short piece of washer hose then connects the barbed outlet nipple of the front washer check valve to the barbed nipple of the front washer nozzle on the underside of the hood panel.

Washer hose is available for service only as roll stock, which must then be cut to length. Molded plastic washer hose fittings cannot be repaired. If these fittings are faulty or damaged, they must be replaced.