OPERATION

Washer fluid in the washer reservoir is pressurized and fed by the front washer pump/motor through the front washer system plumbing and fittings to the front washer check valve and the front washer nozzle. Whenever routing the washer hose or a wire harness containing a washer hose, it must be routed away from hot, sharp, or moving parts; and, sharp bends that might pinch the hose must be avoided.

FRONT WASHER NOZZLE

DESCRIPTION

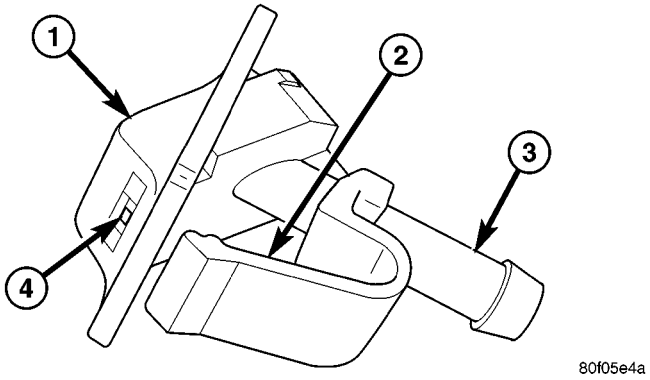

Fig. 8 Front Washer Nozzle

1 - HOOD
2 - LATCH
3 - ORIFICE (FLUIDIC INSERT)
4 - NIPPLE

The molded black plastic front washer nozzle has an integral latch feature that secures it in a dedicated mounting hole located at the center near the rear edge of the hood panel (Fig. 8). The washer nozzle is constructed in two pieces. The nozzle housing includes the domed hood that is visible on the outer surface of the hood panel, and the integral latch and barbed inlet nipple which are concealed below the hood panel.

A rectangular opening in the rearward facing surface of the nozzle hood accepts the fluidic insert of the nozzle. The fluidic insert is a one-piece unit that incorporates the various chambers, passages, deflectors and the single orifice through which the washer fluid stream is directed into the wipe pattern on the windshield glass. The nozzle is accessed for service from the underside of the hood panel. The front washer nozzle cannot be adjusted or repaired. If faulty or damaged, it must be replaced.

OPERATION

The front washer nozzle is designed to dispense washer fluid into the wiper pattern area on the outside of the windshield glass. Pressurized washer fluid is fed to the nozzle from the washer reservoir by the front washer pump/motor through a single hose, which is attached to a barbed nipple on the front washer nozzle below the hood panel. A fluidic matrix within the washer nozzle causes the pressurized washer fluid to be emitted from the nozzle orifice as a fan-like stream to more effectively cover a larger area of the glass to be cleaned.

REMOVAL

(1) Unlatch, open and support the hood.

(2) From the underside of the rear of the hood panel near the center, disconnect the washer supply hose from the barbed nipple of the front washer nozzle (Fig. 9).

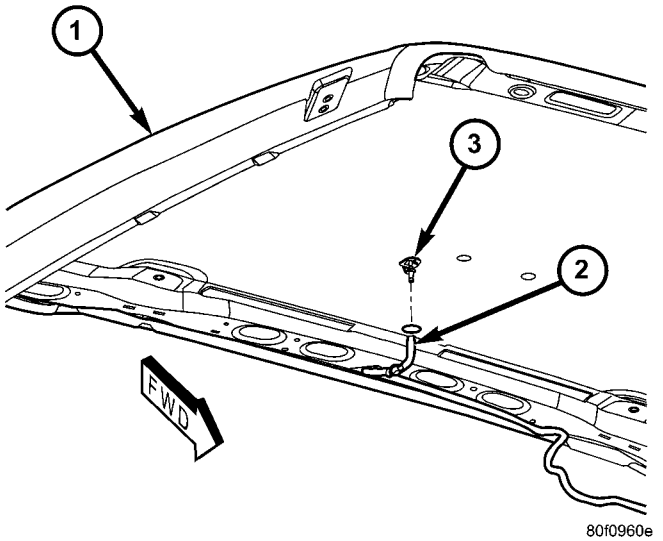

Fig. 9 Front Washer Nozzle Remove/Install

1 - HOOD PANEL
2 - WASHER SUPPLY HOSE
3 - FRONT WASHER NOZZLE

(3) From the underside of the rear of the hood panel near the center, gently squeeze the latch feature of the front washer nozzle and push the nozzle out through the mounting hole towards the outside of the hood panel.

(4) Remove the front washer nozzle from the top of the hood panel.

INSTALLATION

(1) Lower the hood panel.

(2) From the top of the hood panel, position the nipple end of the front washer nozzle through the mounting hole. Be certain the nozzle orifice is oriented towards the windshield, then engage the notched forward-facing end of the nozzle housing to the forward edge of the mounting hole (Fig. 9).

(3) Using hand pressure, press firmly and evenly on the top of the front washer nozzle until the integral latch feature locks into place on the underside of the hood panel.