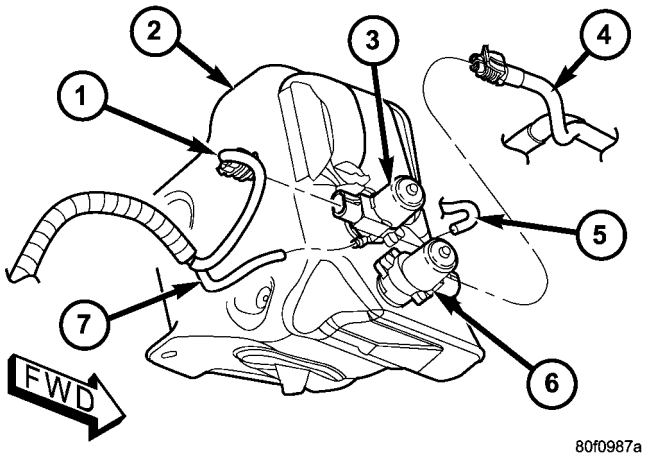

Fig. 11 Washer Pump/Motor Remove/Install

1 - REAR BODY WIRE HARNESS
2 - WASHER RESERVOIR
3 - REAR WASHER PUMP/MOTOR
4 - HEADLAMP & DASH WIRE HARNESS
5 - FRONT WASHER SUPPLY HOSE
6 - FRONT WASHER PUMP/MOTOR
7 - REAR WASHER SUPPLY HOSE

(3) Disconnect the headlamp and dash wire harness connector from the connector receptacle for the front washer pump/motor.

(4) Using a trim stick or another suitable wide flat-bladed tool, gently pry the barbed inlet nipple of the front washer pump/motor out of the rubber grommet seal in the washer reservoir. Care must be taken not to damage the washer reservoir.

(5) Remove the front washer pump/motor from the washer reservoir.

(6) Remove the rubber grommet seal from the front washer pump/motor mounting hole in the washer reservoir and discard.

INSTALLATION

(1) Install a new rubber grommet seal into the front washer pump/motor mounting hole of the washer reservoir.

(2) Position the front washer pump/motor inlet nipple to the mounting hole in the washer reservoir (Fig. 11).

(3) Using hand pressure, firmly and evenly press on the front washer pump/motor to engage the inlet nipple through the rubber grommet seal and into the washer reservoir. Care must be taken not to damage the washer reservoir.

(4) Reconnect the headlamp and dash wire harness connector for the front washer pump/motor to the washer pump/motor connector receptacle.

(5) Reconnect the front washer supply hose to the barbed outlet nipple of the front washer pump/motor.

(6) Refill the washer reservoir with the washer fluid drained from the reservoir during the removal procedure.

(7) Reconnect the battery negative cable.

FRONT WIPER ARM

DESCRIPTION

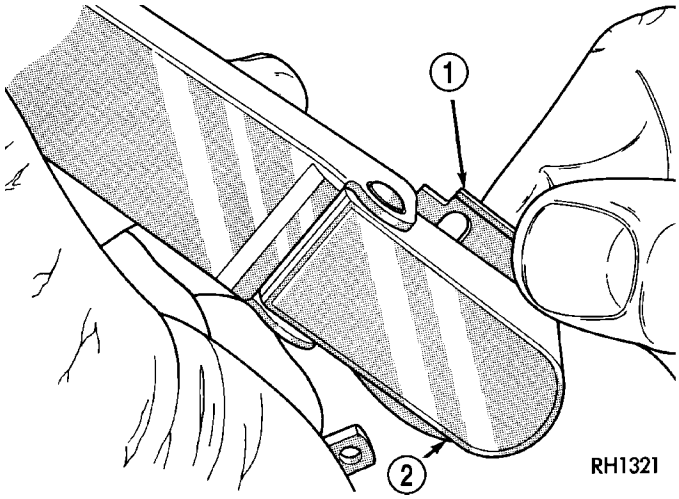

Fig. 12 Wiper Arm

1 - LATCH
2 - WIPER ARM PIVOT END

The front wiper arms are the rigid members located between the wiper pivots that protrude from the cowl plenum cover/grille panel near the base of the windshield and the wiper blades on the windshield glass. The wiper arm has a die cast metal pivot end (Fig. 12). On the underside of this pivot end is a large internally serrated socket formation with a small, movable, stamped steel latch plate that is secured loosely under a small strap that is staked to the pivot end.

The wide end of a tapered, stamped steel channel hinges on and is secured with a hinge pin to the pivot end of the wiper arm. One end of a long, rigid, stamped steel strap, with a small hole near its pivot end, is riveted and crimped within the narrow end of the stamped steel channel. The tip of the wiper blade end of this strap is bent back under itself to form a small hook. Concealed within the stamped steel channel, one end of a long spring is hooked through a hole in a small stamped steel strap on the hinge pin within the die cast pivot end, while the other end of the spring is hooked through the small hole in the steel strap. The entire wiper arm has a satin black finish applied to all of its visible surfaces.

A wiper arm cannot be adjusted or repaired. If damaged or faulty, the entire wiper arm unit must be replaced.

OPERATION

The front wiper arms are designed to mechanically transmit the motion from the wiper pivots to the wiper blades. The wiper arm must be properly indexed to the wiper pivot in order to maintain the proper wiper blade travel on the glass. The serrated