socket formation in the wiper arm pivot end interlocks with the serrations on the outer circumference of the wiper pivot driver, providing positive engagement and finite adjustment of this connection. The latch plate on the underside of the wiper arm pivot end locks the wiper arm to the wiper pivot driver when in its installed position; and, when in its unlocked position, also serves as a blocker to hold the spring-loaded wiper arm off of the glass to facilitate removal and installation. The spring-loaded wiper arm hinge controls the down-force applied through the tip of the wiper arm to the wiper blade on the glass. The hook formation on the tip of the wiper arm provides a cradle for securing and latching the wiper blade pivot block to the wiper arm.

## REMOVAL

(1) Lift the front wiper arm far enough to raise the wiper blade off of the glass and permit the wiper arm latch plate to be pulled out to its holding position, then release the arm (Fig. 13). The wiper arm and blade will remain off the glass with the latch in this position.

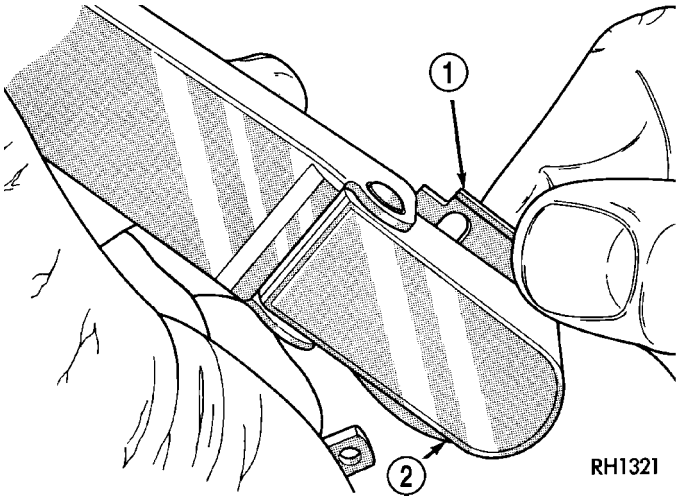


*Fig. 13 Front Wiper Arm Remove/Install*

1 - LATCH
2 - WIPER ARM PIVOT END

**CAUTION: The use of a screwdriver or other prying tool to remove a wiper arm may distort it. This distortion could allow the arm to come off of the wiper pivot during wiper operation, regardless of how carefully it is reinstalled.**

(2) Using a slight rocking motion, remove the front wiper arm pivot end from the wiper pivot driver.

## INSTALLATION

**NOTE: Be certain that the wiper motor is in the park position before attempting to install the wiper arms. Turn the ignition switch to the On position and move the right multi-function switch control stalk to its Off position. If the wiper pivots move, wait until they stop moving, then turn the ignition switch back to the Off position. The wiper motor is now in its park position.**

(1) The front wiper arms must be indexed to the wiper pivots with the wiper motor in the park position to be properly installed (Fig. 14). Position the front wiper arm pivot ends onto the wiper pivot drivers so that the tip of the wiper blade is on the upper edge of the lower windshield blackout area, + 15 millimeters/– 0 millimeter (+ 0.59 inch/– 0 inch).

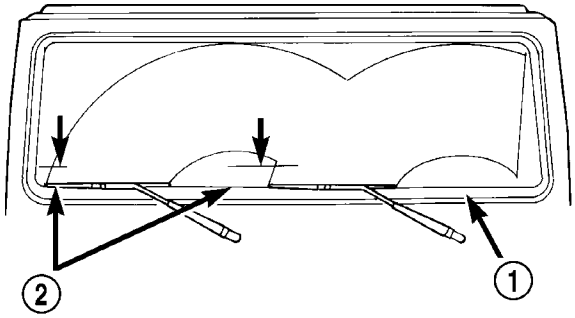


*Fig. 14 Front Wiper Arm Installation*

1 - WINDSHIELD BLACKOUT AREA
2 - PARK BLADE ON UPPER EDGE OF BLACKOUT AREA
+15 mm – 0 mm (+0.59 in. – 0 in.)

(2) Once the wiper arm is indexed to the wiper pivot, lift the wiper arm away from the windshield slightly to relieve the spring tension on the latch plate, then push the latch into the locked position (Fig. 13). Gently lower the wiper arm until the wiper blade is in position on the windshield glass.

(3) Wet the windshield glass, then operate the front wipers. Move the right multi-function switch control stalk to the Off position, then check for correct wiper arm position. Repeat the adjustment as required.