transmission components. The park switch alternately closes the wiper park switch sense circuit to ground or to battery current, depending upon the position of the wipers on the glass. This feature allows the motor to complete its current wipe cycle after the wiper system has been turned Off, and to park the wiper blades in the lowest portion of the wipe pattern. The automatic resetting circuit breaker protects the motor from overloads. The wiper motor crank arm, the two wiper linkage members, and the two wiper pivots mechanically convert the rotary output of the wiper motor to the back and forth wiping motion of the wiper arms and blades on the glass.

REMOVAL

(1) Remove the front wiper arms from the wiper pivots. (Refer to 8 - ELECTRICAL/FRONT WIPERS/WASHERS/FRONT WIPER ARM - REMOVAL).

(2) Unlatch, open and support the hood.

(3) Disconnect and isolate the battery negative cable.

(4) Remove the cowl plenum cover/grille panel from over the cowl plenum. (Refer to 23 - BODY/EXTERIOR/COWL GRILLE AND SCREEN - REMOVAL).

(5) Disconnect the body wire harness connector for the front wiper motor from the motor pigtail wire connector (Fig. 18).

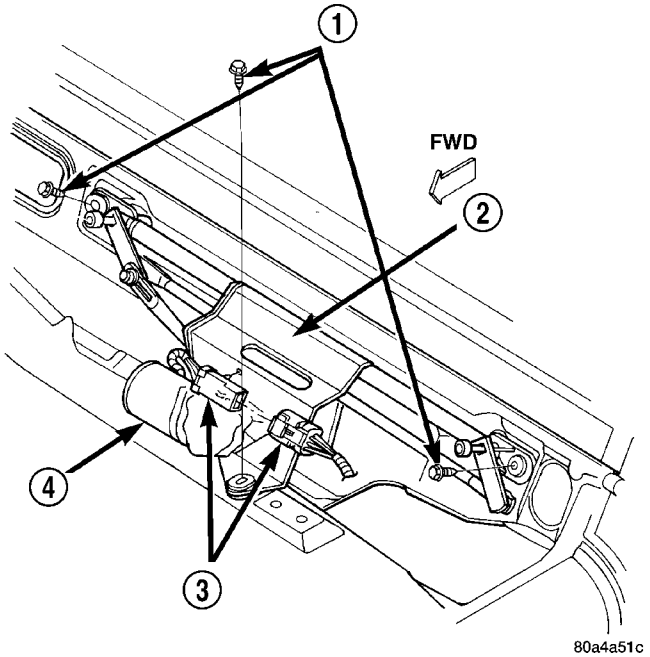

Fig. 18 Front Wiper Module Remove/Install

1 - SCREW (3)
2 - MODULE BRACKET
3 - WIRE HARNESS CONNECTOR
4 - WIPER MOTOR

(6) Remove the three screws that secure the front wiper module mounting bracket to the cowl plenum panel.

(7) Remove the front wiper module from the cowl plenum panel as a unit.

DISASSEMBLY

The front wiper motor and its rubber boot are available for service replacement. Following are the procedures for disassembling these components from the front wiper module unit.

(1) Remove the front wiper module from the cowl plenum. (Refer to 8 - ELECTRICAL/FRONT WIPERS/WASHERS/FRONT WIPER MODULE - REMOVAL).

(2) Release the retainer that secures the wiper motor pigtail wire connector to the front wiper module bracket.

(3) Turn the front wiper module over and remove the nut that secures the wiper motor crank arm to the wiper motor output shaft.

(4) Remove the three screws that secure the wiper motor to the front wiper module mounting bracket.

(5) Remove the wiper motor from the front wiper module bracket.

ASSEMBLY

The front wiper motor and its rubber boot are available for service replacement. Following are the procedures for reassembling these components onto the front wiper module unit.

(1) Position the wiper motor onto the front wiper module bracket.

(2) Install and tighten the three screws that secure the wiper motor to the front wiper module bracket. Tighten the screws to 8 N·m (70 in. lbs.).

(3) Position the wiper motor crank arm onto the front wiper motor output shaft.

(4) Install and tighten the nut that secures the wiper motor crank arm to the front wiper motor output shaft. Tighten the nut to 12 N·m (101 in. lbs.).

(5) Engage the wiper motor pigtail wire connector retainer in the locating hole on the front wiper module bracket.

(6) Reinstall the front wiper module into the cowl plenum. (Refer to 8 - ELECTRICAL/FRONT WIPERS/WASHERS/FRONT WIPER MODULE - INSTALLATION).

INSTALLATION

(1) Position the front wiper module into the cowl plenum as a unit (Fig. 18).

(2) Install and tighten the three screws that secure the front wiper module mounting bracket to the cowl plenum panel. Tighten the screws to 12 N·m (105 in. lbs.).

(3) Reconnect the body wire harness connector for the front wiper motor to the motor pigtail wire connector.