REMOVAL

(1) Disconnect the hardtop wire harness half of the washer supply hose from the barbed nipple of the rear check valve (Fig. 5).

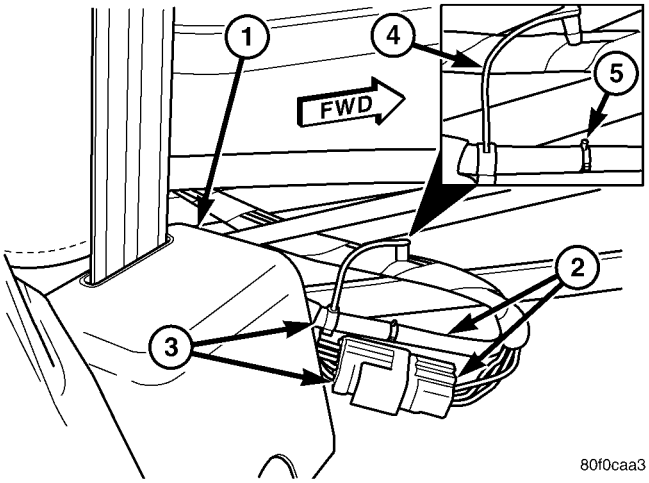

Fig. 5 Rear Check Valve Remove/Install

1 - LEFT REAR SEAT BELT RETRACTOR TRIM COVER
2 - HARDTOP WIRE HARNESS
3 - BODY WIRE HARNESS
4 - REAR WASHER HOSE CAP
5 - REAR CHECK VALVE

(2) Disconnect the body wire harness half of the washer supply hose from the other barbed nipple of the rear check valve.

(3) Remove the rear check valve from the left rear corner of the vehicle near the belt line.

INSTALLATION

(1) Position the rear check valve into the left rear corner of the vehicle near the belt line.

(2) With the tapered end of the check valve pointed in the direction of the system flow (Fig. 6), reconnect the body wire harness half of the washer supply hose to the barbed nipple of the rear check valve.

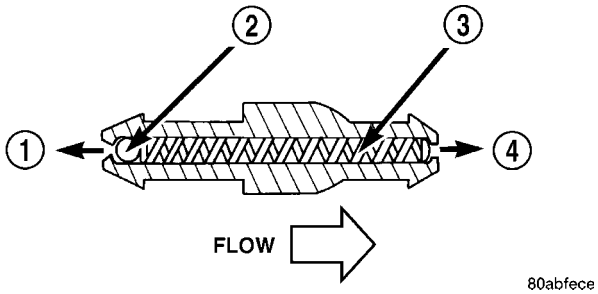

Fig. 6 Rear Washer System Check Valve

1 - TO RESERVOIR
2 - CHECK BALL
3 - SPRING
4 - TO REAR NOZZLE

(3) Reconnect the hardtop wire harness half of the washer supply hose to the other barbed nipple of the rear check valve.

REAR WASHER HOSES / TUBES

DESCRIPTION

The rear washer plumbing consists of small diameter rubber hose that is integral to and routed with the body wire harness from the barbed outlet nipple of the rear washer pump/motor on the washer reservoir through the dash panel to the left cowl side inner panel under the instrument panel. The washer hose and wire harness pass from the engine compartment into the passenger compartment through a rubber grommet in a dedicated hole near the left side of the lower dash panel.

The body wire harness and washer hose are routed from the left cowl side inner panel, along the left door opening sill, then up the B-pillar and along the upper inner edge of the left rear fender panel to the left rear corner of the passenger compartment. At the left rear corner of the passenger compartment the hose connects to the rear check valve, which also serves as an in-line connector between the body and hardtop halves of the rear washer supply hose.

There is also a washer hose cap attached by an integral clip and bail strap to the body half of the washer supply hose just below the rear check valve (Fig. 7). When the hardtop is removed from the vehicle the body half of the washer hose must be disconnected from the rear check valve. The washer hose cap is used to plug the body half of the washer hose after it is disconnected from the check valve.

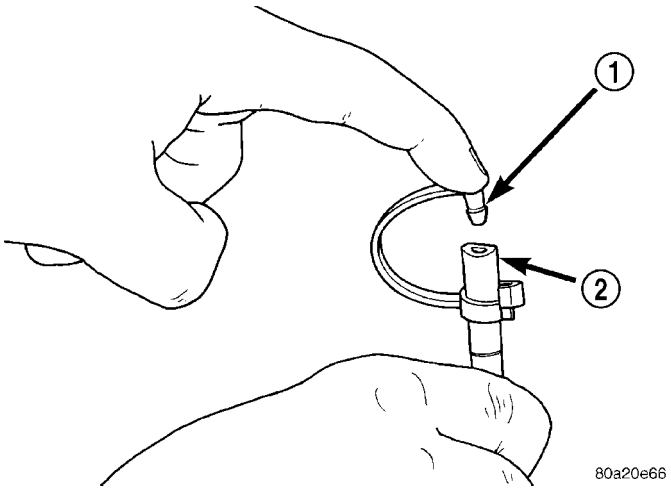

Fig. 7 Rear Washer Hose Cap

1 - WASHER HOSE CAP
2 - REAR WASHER SUPPLY HOSE - BODY HALF

The hardtop half of the rear washer supply hose is routed with the hardtop wire harness through the left rear pillar and across the upper liftglass opening reinforcement to the rear washer nozzle located near the right liftglass hinge. The hardtop washer hose is