connected directly to the barbed nipple of the rear washer nozzle on the inside of the liftglass.

Washer hose is available for service only as roll stock, which must then be cut to length. For service replacement of the hose that is integral to the hardtop or body wire harnesses, it is suggested that a suitable length of washer hose be carefully routed along and secured to the outside of the harness. The molded plastic washer hose fittings cannot be repaired. If these fittings are faulty or damaged, they must be replaced.

OPERATION

Washer fluid in the washer reservoir is pressurized and fed by the rear washer pump/motor through the rear washer system plumbing and fittings to the rear washer nozzle located near the rear wiper motor output shaft on the outside of the hardtop liftglass. Whenever routing the washer hose or a wire harness containing a washer hose, it must be routed away from hot, sharp, or moving parts; and, sharp bends that might pinch the hose must be avoided.

REAR WASHER NOZZLE

DESCRIPTION

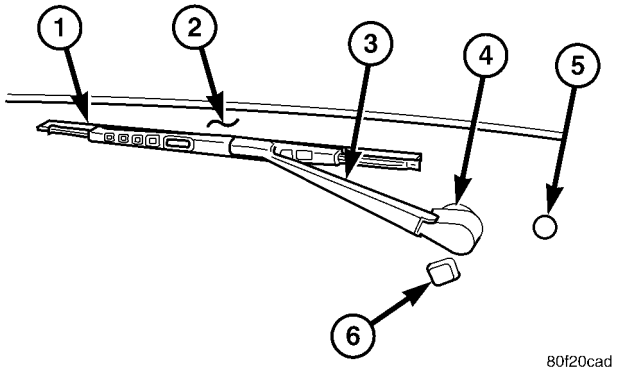

Fig. 8 Rear Washer Nozzle

1 - REAR WIPER BLADE
2 - LIFTGLASS
3 - REAR WIPER ARM
4 - REAR WIPER MOTOR OUTPUT SHAFT
5 - MOUNTING STUD
6 - REAR WASHER NOZZLE

The rear washer nozzle is a fluidic-type unit constructed of molded plastic. The molded hood of the washer nozzle is visible on the outside of the liftglass just below and inboard of the rear wiper motor output shaft (Fig. 8). The remainder of the rear washer nozzle and its plumbing connection are concealed behind the rear wiper motor trim cover secured to the rear wiper motor bracket on the inside of the liftglass. On the back of the nozzle is an externally threaded and barbed nipple that is inserted through a rubber gasket and a mounting hole from the outside of the liftglass, and is secured to the inside of the liftglass with a plastic nut. The rear washer nozzle cannot be adjusted or repaired. If faulty or damaged, the entire nozzle unit must be replaced.

OPERATION

The rear washer nozzle is designed to dispense washer fluid into the wiper pattern area on the outside of the liftglass. Pressurized washer fluid is fed to the nozzle from the washer reservoir by the rear washer pump/motor through a single hose, which is attached to a barbed nipple on the back of the rear washer nozzle behind the rear wiper motor trim cover on the inside of the liftglass. A fluidic matrix within the washer nozzle causes the pressurized washer fluid to be emitted from the nozzle orifice as a fan-like stream to more effectively cover a larger area of the glass to be cleaned.

REMOVAL

(1) Remove the trim cover from the rear wiper motor on the inside of the liftglass. (Refer to 8 - ELECTRICAL/REAR WIPERS/WASHERS/REAR WIPER MOTOR TRIM COVER - REMOVAL).

(2) From the inside of the liftglass, disconnect the rear washer supply hose from the barbed nipple on the back of the rear washer nozzle (Fig. 9).

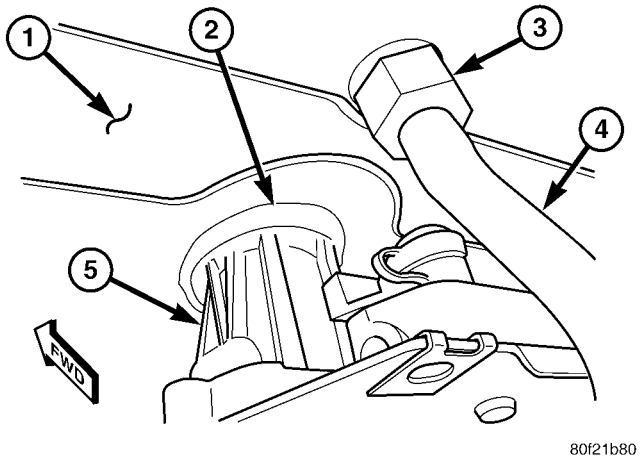

Fig. 9 Rear Washer Nozzle Remove/Install

1 - LIFTGLASS (INSIDE)
2 - GROMMET
3 - PLASTIC NUT
4 - REAR WASHER SUPPLY HOSE
5 - REAR WIPER MOTOR

(3) While holding the hood of the rear washer nozzle securely from the outside of the liftglass, remove the plastic nut that secures the threaded nipple of the rear washer nozzle to the inside of the liftglass.

(4) From the inside of the liftglass, push the nipple of the rear washer nozzle out through the mounting hole in the liftglass.

(5) Remove the rear washer nozzle and rubber gasket from the outside of the liftglass.