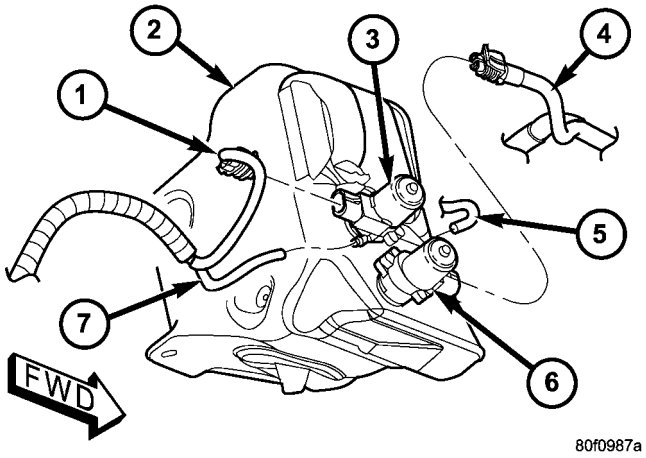

Fig. 11 Washer Pump/Motor Remove/Install

1 - REAR BODY WIRE HARNESS
2 - WASHER RESERVOIR
3 - REAR WASHER PUMP/MOTOR
4 - HEADLAMP & DASH WIRE HARNESS
5 - FRONT WASHER SUPPLY HOSE
6 - FRONT WASHER PUMP/MOTOR
7 - REAR WASHER SUPPLY HOSE

(3) Disconnect the body wire harness connector from the connector receptacle for the rear washer pump/motor.

(4) Using a trim stick or another suitable wide flat-bladed tool, gently pry the barbed inlet nipple of the rear washer pump/motor unit out of the rubber grommet seal in the washer reservoir. Care must be taken not to damage the washer reservoir.

(5) Remove the rear washer pump/motor unit from the washer reservoir.

(6) Remove the rubber grommet seal from the rear washer pump/motor mounting hole in the washer reservoir and discard.

INSTALLATION

(1) Install a new rubber grommet seal into the rear washer pump/motor mounting hole of the washer reservoir.

(2) Position the rear washer pump/motor inlet nipple to the mounting hole in the washer reservoir (Fig. 11).

(3) Using hand pressure, firmly and evenly press on the rear washer pump/motor to engage the inlet nipple through the rubber grommet seal into the washer reservoir. Care must be taken not to damage the washer reservoir.

(4) Reconnect the body wire harness connector for the rear washer pump/motor to the washer pump/motor connector receptacle.

(5) Reconnect the rear washer supply hose to the barbed outlet nipple of the rear washer pump/motor.

(6) Refill the washer reservoir with the washer fluid drained from the reservoir during the removal procedure.

(7) Reconnect the battery negative cable.

REAR WIPER ARM

DESCRIPTION

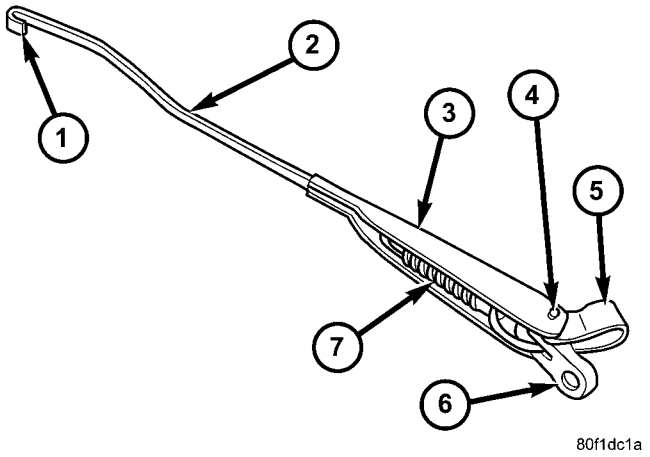

Fig. 12 Rear Wiper Arm

1 - HOOK
2 - STRAP
3 - CHANNEL
4 - HINGE PIN
5 - COVER
6 - PIVOT END
7 - TENSION SPRING

The rear wiper arm is the rigid member located between the rear wiper motor output shaft that protrudes from the outside of the liftglass near the right liftglass hinge and the rear wiper blade (Fig. 12). This wiper arm features an over-center hinge that allows easy access to the liftglass for cleaning. The wiper arm has a die cast metal pivot end with a large tapered mounting hole at one end. A molded plastic pivot cover is secured loosely to and pivots on the wiper arm hinge pin to conceal the wiper arm retaining nut.

The wide end of a tapered, stamped steel channel is secured with a hinge pin to the pivot end of the wiper arm. One end of a long, rigid, stamped steel strap, with a small hole near its pivot end, is riveted and crimped within the narrow end of the stamped steel channel. The tip of the wiper blade end of this strap is bent back under itself to form a small hook. Concealed within the stamped steel channel, one end of a long spring is engaged with a wire hook on the underside of the die cast pivot end, while the other end of the spring is hooked through the small hole in the steel strap. The entire wiper arm has a satin black finish applied to all of its visible surfaces.

A wiper arm cannot be adjusted or repaired. If damaged or faulty, the entire wiper arm unit must be replaced.